LENNOX
Service Literature

UNIT INFORMATION

Corp. 9901-L1
Revised 08-2007
Supersedes Corp. 9803-L4

LGA/LCA/LHA

7.5 / 8.5 / 10 / 12.5 TON
26.3 / 29.8 / 35.2 / 44 kW

LGA / LCA / LHA SERIES

The LGA / LCA / LHA 7.5, 8.5. 10 and 12.5 ton (26.3, 29.8, 35.2, and 44 kW) units are configure to order units (CTO) with a wide selection of factory installed options. The LGA088/100 (7.5 and 8.5 ton) gas /electric rooftop units, are available in 125,000 Btuh or 180,000 Btuh (36.6 kW or 52.74kW) heating inputs and share the same cabinet size with one condenser fan. The LGA090, 102, 120 and 150 (7.5, 8.5, 10 and 12.5 ton) gas/electric packaged rooftop units, are available in 130,000 Btuh, 180,000 Btuh or 240,000 Btuh (38.1 kW, 52.7kW or 70.3 kW) heating inputs and share a larger cabinet size with two condenser fans. Gas heat sections are designed with Lennox' aluminized or optional stainless steel tube heat exchangers. The LCA088 through 150 cooling packaged rooftop units are equipped with the same cooling sections as the LGA088 through 150 units. Optional electric heat is factory or field-installed in LCA units.

The LGA/LCA090H, 102H and 120H units are also designed for optional R-410A refrigerant. Operating pressures and pressure switch settings are significantly higher than R-22 charged units. Service equipment must be rated for R-410A.

⚠ WARNING

Refrigerant can be harmful if it is inhaled. Refrigerant must be used and recovered responsibly.

Failure to follow this warning may result in personal injury or death.

The LHA088 packaged heat pump units are available in 86,000 Btuh (25.3 kW) heating inputs and 7.5 ton cooling capacities. The LHA088 utilizes one compressor, one reversing valve, one accumulator and other parts common to a heat pump. The LHA090, 102, 120, and 150 packaged heat pump units are available in 90,000, 102,000, 120,000 and 136,000 Btuh (26.4, 29.9, 35.1 and 39.8 kW) with 7.5, 8.5, 10 and 12.5 ton cooling capacities. LHA090/150 refrigerant systems utilizes two compressors, two reversing valves, two accumulators, and other parts common to a heat pump. Optional auxiliary electric heat is factory or field installed in LHA units. Electric heat operates in single or multiple stages depending on the kW input size. 7.5kW through 45kW heat sections are available for the LHA088, 090, 100 and 102 and 15kW through 60kW for LHA120 and 150.

LGA120 (10 TON) SHOWN

If the unit must be lifted for service, rig unit by attaching four cables to the holes located in the unit base rail (two holes at each corner). Refer to the installation instructions for the proper rigging technique.

Information contained in this manual is intended for use by qualified service technicians only. All specifications are subject to change. Procedures outlined in this manual are presented as a recommendation only and do not supersede or replace local or state codes.

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer or service agency.

TABLE OF CONTENTS

Specifications . . . . . Page 2
Field Installed Accessories . . . . . Page 9
Electric Heat Capacities . . . . . Page 15
Electric Heat / Electrical Data . . . . . Page 16
Blower Data . . . . . Page 26
I Unit Components . . . . . Page 33
Electric Heat . . . . . Page 49
II Placement and Installation . . . . . Page 60
III Charging . . . . . Page 60
IV Start Up . . . . . Page 64
V Systems Service Checks . . . . . Page 66
VI Maintenance . . . . . Page 69
VII Accessories . . . . . Page 70
VIII Diagrams and Operating Sequence Page 78

© 1999 Lennox Industries Inc.
Litho U.S.A.

SPECIFICATIONS LCA/LGA

Model No.			LCA/LGA088		LCA/LGA100	
Cooling Ratings	Efficiency type		**Standard**	**High**	**Standard**	
	Gross Cooling Capacity — Btuh (kW)		94,000 (27.5)	90,000 (26.4)	100,000 (29.3)	
	[1] Net Cooling Capacity — Btuh (kW)		88,000 (25.8)	85,000 (24.9)	94,000 (27.5)	
	Total Unit Power (kW)		9.77	8.33	10.4	
	[1] EER (Btuh/Watt)		9.0	10.2	9.0	
	[5] Integrated Part Load Value (Btuh/Watt)		9.2	10.4	9.0	
[2] Sound Rating Number (db)			86			
Refrigerant Charge Furnished (HCFC-22)	Circuit 1		8 lbs. 0 oz. (3.63 kg)	8 lbs. 8 oz. (3.86 kg)	8 lbs. 8 oz. (3.86 kg)	
	Circuit 2		8 lbs. 0 oz. (3.63 kg)	8 lbs. 8 oz. (3.86 kg)	8 lbs. 8 oz. (3.86 kg)	
Two Stage Heating Capacity (Natural or LPG/Propane Gas (at Sea Level)	Heat Input Type		**Standard**	**High**	**Standard**	**High**
	Input (low) — Btuh (kW)		83,000 (24.3)	119,000 (34.9)	83,000 (24.3)	119,000 (34.9)
	Output (Low) — Btuh (kW)		66,000 (19.3)	96,000 (27.8)	66,000 (19.3)	96,000 (27.8_
	Input High— Btuh (kW)		125,000 (36.6)	180,000 (52.8)	125,000 (36.6)	180,000 (36.6)
	Output (High) — Btuh (kW)		100,000 (29.3)	144,000 (42.2)	100,000 (29.3)	144,000 (42.2)
	A.G.A./C.G.A. Thermal Efficiency		80.0%			
Gas Supply Connections npt — in. - Natural or [3] LPG/Propane			3/4			
Recommended Gas Supply Pressure — wc. in. (kPa)		Natural	7 (1.7)			
		[3] LPG/Propane	11 (2.7)			
Evaporator Blower and Drive Selection	Blower wheel nominal dia. x width — in. (mm)		(1) 12 x 12 (305 x 305)			
	2 hp (1.5 kW) [4] Motor & Drives	Nominal motor output — hp (kW)	2 (1.5)			
		Max. usable motor output — hp (kW)	2.30 (1.7)			
		Voltage & phase	208/230v, 460v or 575v-3ph			
		(Drive kit #) RPM range	(1 or 2) 845-1130 (3 or 4) 1015-1300			
	3 hp (2.2 kW) [4] Motor & Drives	Nominal motor horsepower (kW)	3 (2.2)			
		Max. usable motor output — hp (kW)	3.45 (2.6)			
		Voltage & phase	208/230v, 460v or 575v-3ph			
		(Drive kit #) RPM range	(1 or 2) 845-1130 (3 or 4) 1015 - 1300			
Evaporator Coil	Net face area — sq. ft. (m^2)		9.72 (0.90)			
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 3			
	Fins per inch (m)		14 (551.2)			
	Drain connection no. & size — in. (mm) fpt		(1) 1 (25.4)			
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head			
Condenser Coil	Net face area — sq. ft. (m^2)		23.78 (2.21)			
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 2			
	Fins per inch (m)		20 (787.4)			
Condenser Fans	Diameter — in. (mm) & No. of blades		(1) — 24 (610) - 3			
	Total Air volume — cfm (L/s)		5300 (2501)			
	Motor horsepower (W)		1/2 (373)			
	Motor rpm		1075			
	Total Motor watts		550			
Filters (furnished)	Type of filter		Disposable Commercial Grade Pleated			
	No. and size — in. (mm)		(4) 18 x 20 x 2 (457 x 508 x 51)			
Electrical characteristics			208/230v, 460v or 575v — 60 hertz — 3 phase			

[1] Rated in accordance with ARI Standard 210/240 and certified to ARI; 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering evaporator air; minimum external duct static pressure.
[2] Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.
[3] For LPG/Propane units a field conversion kit is required and must be ordered extra.
[4] Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.
[5] Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.
NOTE — Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

SPECIFICATIONS LCA/LGA

R-22 - *R-410A*

General Data			7.5 Ton 090H2B - *090H4B*			8.5 Ton 102H2B - *102H4B*		
	Nominal Tonnage							
	Model No.							
	Cooling Efficiency Type		High			High		
Cooling Performance	Gross Cooling Capacity - Btuh (kW)		93,800 (27.5) - *93,000 (27.2)*			105,000 (30.8) - *103,000 (30.2)*		
	[1] Net Cooling Capacity - Btuh (kW)		90,000 (26.4) - *90,000 (26.4)*			101,000 (29.6) - *99,000 (29.0)*		
	ARI Rated Air Flow - cfm (L/s)		2900 (1370)			3200 (1510)		
	[3] Sound Rating Number (dB)		88			88		
	Total Unit Power (kW)		8.0 - *8.0*			9.0 - *8.8*		
	[1] EER (Btuh/Watt)		11.3 - *11.3*			11.2 - *11.2*		
	[2] Integrated Part Load Value (Btuh/Watt)		12.0 - *12.3*			11.7 - *12.2*		
	Refrigerant Charge Furnished R-22 / *R-410A*	Circuit 1	10 lbs. 0 oz. (4.54 kg) *10 lbs. 8 oz. (4.76 kg)*			10 lbs. 8 oz. (4.76 kg) *10 lbs. 8 oz. (4.76 kg)*		
		Circuit 2	10 lbs. 0 oz. (4.54 kg) *10 lbs. 8 oz. (4.76 kg)*			10 lbs. 8 oz. (4.76 kg) *9 lbs. 8 oz. (4.31 kg)*		
	Refrigerant Charge Furnished w/ Humiditrol Option R-22 / *R-410A*	Circuit 1	12 lbs. 0 oz. (5.44 kg) *10 lbs. 8 oz. (4.76 kg)*			12 lbs. 0 oz. (5.44 kg) *10 lbs. 8 oz. (4.76 kg)*		
		Circuit 2	10 lbs. 0 oz. (4.54 kg) *10 lbs. 8 oz. (4.76 kg)*			10 lbs. 8 oz. (4.76 kg) *9 lbs. 8 oz. (4.31 kg)*		
Gas Heating Performance	Two Stage Gas Heat Input Type		**Standard**	**Medium**	**High**	**Standard**	**Medium**	**High**
	Input - Btuh (kW)	First Stage	84,500 (24.8)	117,000 (34.3)	156,000 (45.7)	84,500 (24.8)	117,000 (34.3)	156,000 (45.7)
		Second Stage	130,000 (38.1)	180,000 (52.7)	240,000 (70.3)	130,000 (38.1)	180,000 (52.7)	240,000 (70.3)
	Output - Btuh (kW)	Second Stage	104,000 (30.5)	144,000 (42.2)	192,000 (56.3)	104,000 (30.5)	144,000 (42.2)	192,000 (56.3)
	CSA Thermal Efficiency		80.0%			80.0%		
	Gas Supply Connections		3/4 in. npt			3/4 in. npt		
	Recommended Gas Supply Pressure	Natural	7 in. w.c. (1.7 kPa)			7 in. w.c. (1.7 kPa)		
		LPG/Propane	11 in. w.c. (2.7 kPa)			11 in. w.c. (2.7 kPa)		
Compressor Type (No.)			Scroll (2)			Scroll (2)		
Condenser Coil	Net face area - sq. ft. (m^2)		29.3 (2.72) total			29.3 (2.72) total		
	Tube diameter - in. (mm)		3/8 (9.5)			3/8 (9.5)		
	Number of rows		2			2		
	Fins per inch (m)		20 (787)			20 (787)		
Condenser Fans	Motor horsepower (W)		(2) 1/3 (249)			(2) 1/3 (249)		
	Motor rpm		1075			1075		
	Total Motor watts		700			700		
	Diameter - in. (mm) - number of blades		(2) 24 (610) - 3			(2) 24 (610) - 3		
	Total Air volume - cfm (L/s)		8,000 (3775)			8,000 (3775)		
Evaporator Coil	Net face area - sq. ft. (m^2)		10.5 (0.98) total			10.5 (0.98) total		
	Tube diameter - in. (mm)		3/8 (9.5)			3/8 (9.5)		
	Number of rows		3			3		
	Fins per inch (m)		14 (551)			14 (551)		
	Condensate Drain - number and size		(1) 1 in. NPT coupling			(1) 1 in. NPT coupling		
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head					
[4] Indoor Blower and Drive Selection	Belt Drive - Nominal motor output		2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)			2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)		
	Maximum usable output (US Only)		2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 hp (4.3 kW)			2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 hp (4.3 kW)		
	Motor - Drive kit		2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 - 680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110- 1395 rpm kit #6 - 1110- 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm			2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 - 680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110 - 1395 rpm kit #6 - 1110 - 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm		
	Wheel nominal diameter x width - in. (mm)		(1) 15 x 15 (381 x 381)			(1) 15 x 15 (381 x 381)		
Filters	Type of filter		Disposable, pleated MERV 7 (standard) or MERV 11 (optional)					
	Number and size - in. (mm)		(4) 18 x 24 x 2 (457 x 610 x 51)					
Electrical characteristics			208/230V, 460V or 575V - 60 hertz - 3 phase					

NOTE - Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

[1] Certified in accordance with the ULE certification program, which is based on ARI Standard 340/360, 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering evaporator air; minimum external duct static pressure.

[2] Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.

[3] Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.

[4] Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

SPECIFICATIONS LCA/LGA

R-22 - *R-410A*

General Data	Nominal Tonnage		**10 Ton**		
	Model No.		**120H2B - *120H4B***		
	Cooling Efficiency Type		**High**		
Cooling Performance	Gross Cooling Capacity - Btuh (kW)		125,000 (36.6) - *124,000 (3.63)*		
	[1] Net Cooling Capacity - Btuh (kW)		120,000 (35.2) - *120,000 (3.52)*		
	ARI Rated Air Flow - cfm (L/s)		3600 (1700)		
	[3] Sound Rating Number (dB)		88		
	Total Unit Power (kW)		10.9 - *10.8*		
	[1] EER (Btuh/Watt)		11.2 - *11.0*		
	[2] Integrated Part Load Value (Btuh/Watt)		12.2 - *12.0*		
	Refrigerant Charge Furnished R-22 - *R-410A*	Circuit 1	11 lbs. 8 oz. (5.22 kg) - *10 lbs. 8 oz. (4.77 kg)*		
		Circuit 2	11 lbs. 8 oz. (5.22 kg) - *10 lbs. 8 oz. (4.77 kg)*		
	Refrigerant Charge Furnished w/ Humiditrol Option R-22 - *R-410A*	Circuit 1	13 lbs. 8 oz. (6.12 kg) - *12 lbs 8 oz (5.68 kg)*		
		Circuit 2	11 lbs. 8 oz. (5.23 kg) - *10 lbs. 8 oz. (4.77kg)*		
Gas Heating Performance	Two-Stage Gas Heat Input Type		**Standard**	**Medium**	**High**
	Input - Btuh (kW)	First Stage	84,500 (24.8)	117,000 (34.3)	156,000 (45.7)
		Second Stage	130,000 (38.1)	180,000 (52.7)	240,000 (70.3)
	Output - Btuh (kW)	Second Stage	104,000 (30.5)	144,000 (42.2)	192,000 (56.3)
	CSA Thermal Efficiency		80.0%		
	Gas Supply Connections		3/4 in. NPT		
	Recommended Gas Supply Pressure	Natural	7 in. w.c. (1.7 kPa)		
		LPG/Propane	11 in. w.c. (2.7 kPa)		
Compressor Type (No.)			Scroll (2)		
Condenser Coil	Net face area - sq. ft. (m^2)		29.3 (2.72) total		
	Tube diameter - in. (mm)		3/8 (9.5)		
	Number of rows		2		
	Fins per inch (m)		20 (787)		
Condenser Fans	Motor horsepower (W)		(2) 1/3 (249)		
	Motor rpm		1075		
	Total Motor watts		700		
	Diameter - in. (mm) - number of blades		(2) 24 (610) - 3		
	Total Air volume - cfm (L/s)		8,000 (3775)		
Evaporator Coil	Net face area - sq. ft. (m^2)		10.5 (0.98) total		
	Tube diameter - in. (mm)		3/8 (9.5)		
	Number of rows		4		
	Fins per inch (m)		14 (551)		
	Condensate Drain - number and size		(1) 1 in. NPT coupling		
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head		
[4] Indoor Blower and Drive Selection	Belt Drive - Nominal motor output		2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)		
	Maximum usable output (US Only)		2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 hp (4.3 kW)		
	Motor - Drive kit		2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 - 680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110 - 1395 rpm kit #6 - 1110 - 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm		
	Wheel nominal diameter x width - in. (mm)		(1) 15 x 15 (381 x 381)		
Filters	Type of filter		Disposable, pleated MERV 7 (standard) or MERV 11 (optional)		
	Number and size - in. (mm)		(4) 18 x 24 x 2 (457 x 610 x 51)		
Electrical characteristics			208/230V, 460V or 575V - 60 hertz - 3 phase		

NOTE - Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

[1] Certified in accordance with the ULE certification program, which is based on ARI Standard 340/360, 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering evaporator air; minimum external duct static pressure.

[2] Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.

[3] Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.

[4] Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

SPECIFICATIONS LCA/LGA150

Model No.			LCA/LGA150
Evaporator Blower and Drive Selection	Blower wheel nominal dia. x width — in. (mm)		(1) 15 x 15 (381 x 381)
	2 hp (1.5 kW) *Motor & Drives	Nominal motor output — hp (kW)	2 (1.5)
		Max. usable motor output — hp (kW)	2.30 (1.7)
		Voltage & phase	208/230v, 460v or 575v-3ph
		RPM range (Drive 1 or 3 options)	(1)680-925 (3)895-1120
	3 hp (2.2 kW) *Motor & Drives	Nominal motor output — hp (kW)	3 (2.2)
		Max. usable motor output — hp (kW)	3.45 (2.6)
		Voltage & phase	208/230v, 460v or 575v-3ph
		RPM range (Drive 1 thru 6 options)	(1) 680-925 (2) 680-895 (3&4) 895-1120 (5&6) 1110-1395
	5 hp (3.7 kW) *Motor & Drives	Nominal motor horsepower (kW)	5 (3.7)
		Max. usable motor output — hp (kW)	5.75 (4.3)
		Voltage & phase	208/230v, 460v or 575v-3ph
		RPM range (Drive 4 & 6 options)	(4) 895-1120 (6) 1110-1395
Evaporator Coil	Net face area — sq. ft. (m^2)		10.5 (0.98) total
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 3
	Fins per inch (m)		14 (551)
	Drain connection no. & size — in. (mm) fpt		(1) 1 (25.4)
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head
Condenser Coil	Net face area — sq. ft. (m^2)		29.3 (2.72) total
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 2
	Fins per inch (m)		20 (787)
Condenser Fans	Diameter — in. (mm) & No. of blades		(2) 24 (610) — 3
	Total Air volume — cfm (L/s)		8000 (3775)
	Motor horsepower (W)		(2) 1/3 (249)
	Motor rpm		1075
	Total Motor watts		700
Filters (furnished)	Type of filter		Disposable, commercial grade, pleated
	no. and size — in. (mm)		(4) 18 x 24 x 2 (457 x 610 x 51)
Electrical characteristics			208/230v, 460v or 575v — 60 hertz — 3 phase

*Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

Model No.		LCA/LGA150S
Cooling Ratings	Gross Cooling Capacity — Btuh (kW)	145,000 (42.5)
	*Net Cooling Capacity — Btuh (kW)	138,000 (40.4)
	Total Unit Power (kW)	15.3
	*EER (Btuh/Watt)	9.0
	†Integrated Part Load Value (Btuh/Watt)	9.5
●Sound Rating Number (db)		88
Refrigerant Charge Furnished (HCFC-22)	Circuit 1	12 lbs. 0 oz. (5.44 kg) Humiditrol Units - 14 lbs 8 oz (6.58 kg)
	Circuit 2	12 lbs. 0 oz. (5.44 kg) Humiditrol Units - 14 lbs 0 oz (6.35 kg)

*Rated in accordance with ARI Standard 340/360 and certified to ARI; 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering evaporator air; minimum external duct static pressure.
†Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.
●Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.
NOTE — Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

Model No.		LGA150	
Heat Input Type		Standard	High
Two Stage Heating Capacity (Natural or LPG/Propane Gas (at Sea Level)	Input (low) — Btuh (kW)	84,500 (24.8)	152,500 (44.7)
	Output (low) — Btuh (kW)	67,500 (19.8)	122,000 (35.8)
	Input (High) — Btuh (kW)	130,000 (38.1)	235,000 (68.9)
	Output (High) — Btuh (kW)	104,000 (30.5)	188,000 (55.1)
	A.G.A./C.G.A. Thermal Efficiency	80.0%	80.0%
Gas Supply Connections npt — in.	Natural	3/4	
	*LPG/Propane	3/4	
Recommended Gas Supply Pressure — wc. in. (kPa)	Natural	7 (1.7)	
	*LPG/Propane	11 (2.7)	

*For LPG/Propane units a field conversion kit is required and must be ordered extra.

SPECIFICATIONS LHA

Model No.			LHA088S
Cooling Ratings	Efficiency Type		**Standard**
	Gross Cooling Capacity — Btuh (kW)		91,000 (26.7)
	[1]Net Cooling Capacity — Btuh (kW)		86,000 (25.2)
	Total Unit Power (kW)		9.6
	[1]EER (Btuh/Watt)		9
High Temperature Heating Ratings	[1]Total Heating Capacity — Btuh (kW)		86,000 (25.2)
	Total Unit Power (kW)		8.4
	[1]C.O.P.		3.0
Low Temperature Heating Ratings	[1]Total Heating Capacity — Btuh (kW)		48,000 (14.1)
	Total Unit Power (kW)		7.03
	[1]C.O.P.		2.0
[2]Sound Rating Number (db)			86
Refrigerant Charge Furnished (HCFC-22)			17 lbs. 0 oz. (7.71 kg)
Indoor Blower and Drive Selection	Blower wheel nominal dia. x width — in. (mm)		12 x 12 (305 x 305)
	2 hp (1.5 kW) [3]Motor & Drives	Nominal motor output — hp (kW)	2 (1.5)
		Max. usable motor output — hp (kW)	2.30 (1.7)
		Voltage & phase	208/230v, 460v or 575v-3ph
		(Drive Kit #) RPM range	(1 or 2) 845-1130 (3 or 4) 1015-1300
	3 hp (2.2 kW) [3]Motor & Drives	Nominal motor horsepower (kW)	3 (2.2)
		Max. usable motor output — hp (kW)	3.45 (2.6)
		Voltage & phase	208/230v, 460v or 575v-3ph
		(Drive Kit #) RPM range	(1 or 2) 845-1130 (3 or 4) 1015-1300
Indoor Coil	Net face area — sq. ft. (m^2)		9.72 (.90)
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 3
	Fins per inch (m)		14 (551.2)
	Drain connection no. & size — in. (mm) fpt		(1) 1 (25.4)
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head
Outdoor Coil	Net face area — sq. ft. (m^2)		23.78 (2.21)
	Tube diameter — in. (mm) & No. of rows		3/8 (9.5) — 2
	Fins per inch (m)		20 (787.4)
	Expansion device type		Balanced Port Thermostatic Expansion Valve, removeable power head
Outdoor Fans	Diameter — in. (mm) & No. of blades		24 (610) - 3
	Total Air volume — cfm (L/s)		5300 (2501)
	Motor horsepower (W)		1/2 (373)
	Motor rpm		1075
	Total Motor watts		550
Filters (furnished)	Type of filter		Disposable Commercial Grade Pleated
	No. and size — in. (mm)		(4) 18 x 20 x 2 (457 x 508 x 51)
Electrical characteristics			208/230v, 460v or 575v — 60 hertz — 3 phase

[1]Rated in accordance with ARI Standard 210/240 and certified to ARI.
Cooling Ratings— 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering indoor coil air.
High Temperature Heating Ratings— 47°F (8°C) db/43°F (6°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.
Low Temperature Heating Ratings— 17°F (-8°C) db/15°F (-9°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.
[2]Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.
[3]Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.
NOTE — ARI capacity is net and includes indoor blower motor heat deduction. Gross capacity does not include indoor blower motor heat deduction.

SPECIFICATIONS LHA

General Data	Nominal Tonnage	7.5 Ton	8.5 Ton	10 Ton
	Model No.	LHA090H2B	LHA102H2B	LHA120H2B
	Efficiency Type	High (H)	High (H)	High (H)
Cooling Performance	Gross Cooling Capacity - Btuh (kW)	94,000 (27.5)	104,000 (30.5)	124,000 (36.3)
	[1] Net Cooling Capacity - Btuh (kW)	89,000 (26.1)	100,000 (29.3)	118,000 (34.6)
	ARI Rated Air Flow - cfm (L/s)	3000 (1415)	3500 (1650)	4200 (1980)
	Total Unit Power (kW)	7.7	9.1	11.5
	[1] EER (Btuh/Watt)	11.5	11.0	10.3
	[2] Integrated Part Load Value (Btuh/Watt)	12.0	12.4	11.3
	Refrigerant Charge Furnished (R-22) Circuit 1	12 lbs. 0 oz. (5.4 kg)	11 lbs. 0 oz. (5.0 kg)	12 lbs. 8 oz. (5.7 kg)
	Refrigerant Charge Furnished (R-22) Circuit 2	12 lbs. 0 oz. (5.4 kg)	11 lbs. 0 oz. (5.0 kg)	12 lbs. 8 oz. (5.7 kg)
[3]Sound Rating Number (dB)		88	88	88
Heating Performance	[1] Total High Heating Capacity - Btuh (kW)	90,000 (26.4)	102,000 (29.9)	120,000 (35.1)
	Total Unit Power (kW)	8.0	8.8	10.7
	[1] C.O.P.	3.3	3.4	3.3
	[1] Total Low Heating Capacity - Btuh (kW)	52,000 (15.2)	56,000 (16.4)	72,000 (21.1)
	Total Unit Power (kW)	7.3	7.5	10.1
	[1] C.O.P.	2.2	2.2	2.2
Compressor - Number & Type		(2) Scroll	(2) Scroll	(2) Scroll
Outdoor Coil	Net face area - sq. ft. (m^2)	28.6 (2.66) total	29.3 (2.72) total	28.6 (2.66) total
	Tube diameter - in. (mm)	3/8 (9.5)	3/8 (9.5)	3/8 (9.5)
	Number of rows	2	2	2
	Fins per inch (m)	20 (787)	20 (787)	20 (787)
Outdoor Fans	Motor horsepower (W)	(2) 1/3 (249)	(2) 1/3 (249)	(2) 1/3 (249)
	Motor rpm	1075	1075	1075
	Total Motor watts	700	700	700
	Diameter - in. (mm)	(2) 24 (610)	(2) 24 (610)	(2) 24 (610)
	Number of blades	3	3	3
	Total Air volume - cfm (L/s)	8000 (3775)	8000 (3775)	8000 (3775)
Indoor Coil	Net face area - sq. ft. (m^2)	10.5 (0.98) total	10.5 (0.98) total	10.5 (0.98) total
	Tube diameter - in. (mm)	3/8 (9.5)	3/8 (9.5)	3/8 (9.5)
	Number of rows	3	4	4
	Fins per inch (m)	14 (551)	14 (551)	14 (551)
	Condensate Drain - number and size	(1) 1 in. NPT coupling	(1) 1 in. NPT coupling	(1) 1 in. NPT coupling
	Expansion device type	Balanced Port Thermostatic Expansion Valve, removeable power head		
[4] Indoor Blower and Drive Selection	Nominal motor output	2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)		2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)
	Maximum usable motor output (US Only)	2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 (4.3 kW)		2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 (4.3 kW)
	Motor - Drive kit	2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 -680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110 - 1395 rpm kit #6 - 1110 - 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm		2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 -680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110 - 1395 rpm kit #6 - 1110 - 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm
	Wheel nominal diameter x width	15 x 15 in. (381 x 381 mm)		
Filters	Type of filter	Disposable, pleated MERV 7 (standard) or MERV 11 (optional)		
	Number and size - in. (mm)	(4) 18 x 24 x 2 (457 x 610 x 51)		
Electrical characteristics		208/230V, 460V or 575V - 60 hertz - 3 phase		

NOTE - Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

1 Certified in accordance with the ULE certification program, which is based on ARI Standard 340/360.
Cooling Ratings - 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering indoor coil air.
High Temperature Heating Ratings - 47°F (8°C) db/43°F (6°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.
Low Temperature Heating Ratings - 17°F (-8°C) db/15°F (-9°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.

2 Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.

3 Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.

4 Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

SPECIFICATIONS LHA

General Data	Nominal Tonnage	12 Ton	12.5 Ton
	Model No.	LHA150-3S2B	LHA150S2B
	Efficiency Type	Standard (S)	Standard (S)
Cooling Performance	Gross Cooling Capacity - Btuh (kW)	145,200 (42.6)	144,000 (42.2)
	[1] Net Cooling Capacity - Btuh (kW)	138,000 (40.4)	137,000 (40.1)
	ARI Rated Air Flow - cfm (L/s)	4200 (1980)	4400 (2075)
	Total Unit Power (kW)	14.8	14.2
	[1] EER (Btuh/Watt)	9.3	9.7
	[2] Integrated Part Load Value (Btuh/Watt)	10.5	10.9
	Refrigerant Charge Furnished (R-22) Circuit 1	11 lbs. 8 oz. (5.2 kg)	12 lbs. 0 oz. (5.4 kg)
	Refrigerant Charge Furnished (R-22) Circuit 2	11 lbs. 8 oz. (5.2 kg)	12 lbs. 0 oz. (5.4 kg)
[3]Sound Rating Number (dB)		88	88
Heating Performance	[1] Total High Heating Capacity - Btuh (kW)	139,000 (39.9)	140,000 (41.0)
	Total Unit Power (kW)	12.9	12.4
	[1] C.O.P.	3.1	3.3
	[1] Total Low Heating Capacity - Btuh (kW)	80,000 (23.4)	80,000 (23.4)
	Total Unit Power (kW)	11.7	11.7
	[1] C.O.P.	2.0	2.0
Compressor - Number & Type		(2) Scroll	(2) Scroll
Outdoor Coil	Net face area - sq. ft. (m^2)	29.3 (2.72) total	29.3 (2.72) total
	Tube diameter - in. (mm)	3/8 (9.5)	3/8 (9.5)
	Number of rows	2	2
	Fins per inch (m)	20 (787)	20 (787)
Outdoor Fans	Motor horsepower (W)	(2) 1/2 (373)	(2) 1/3 (249)
	Motor rpm	1075	1075
	Total Motor watts	1050	700
	Diameter - in. (mm)	(2) 24 (610)	(2) 24 (610)
	Number of blades	3	3
	Total Air volume - cfm (L/s)	10,000 (4719)	8000 (3775)
Indoor Coil	Net face area - sq. ft. (m^2)	10.5 (0.98) total	10.5 (0.98) total
	Tube diameter - in. (mm)	3/8 (9.5)	3/8 (9.5)
	Number of rows	4	4
	Fins per inch (m)	14 (551)	14 (551)
	Condensate Drain - number and size	(1) 1 in. NPT coupling	(1) 1 in. NPT coupling
	Expansion device type	Balanced Port Thermostatic Expansion Valve, removeable power head	
[4] Indoor Blower and Drive Selection	Nominal motor output	2 hp (1.5 kW) 3 hp (2.2 kW) 5 hp (3.7 kW)	
	Maximum usable motor output (US Only)	2.3 hp (1.7 kW) 3.45 hp (2.6 kW) 5.75 (4.3 kW)	
	Motor - Drive kit	2 hp kit #1 - 680 - 925 rpm kit #3 - 895 - 1120 rpm 3 hp kit #1 - 680 - 925 rpm kit #2 -680 - 925 rpm kit #3 - 895 - 1120 rpm kit #4 - 895 - 1120 rpm kit #5 - 1110 - 1395 rpm kit #6 - 1110 - 1395 rpm 5 hp kit #4 - 895 - 1120 rpm kit #6 - 1110 - 1395 rpm	
	Wheel nominal diameter x width	15 x 15 in. (381 x 381 mm)	
Filters	Type of filter	Disposable, pleated MERV 7 (standard) or MERV 11 (optional)	
	Number and size - in. (mm)	(4) 18 x 24 x 2 (457 x 610 x 51)	
Electrical characteristics		208/230V, 460V or 575V - 60 hertz - 3 phase	

NOTE - Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

1 Certified in accordance with the ULE certification program, which is based on ARI Standard 340/360.
Cooling Ratings - 95°F (35°C) outdoor air temperature and 80°F (27°C) db/67°F (19°C) wb entering indoor coil air.
High Temperature Heating Ratings - 47°F (8°C) db/43°F (6°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.
Low Temperature Heating Ratings - 17°F (-8°C) db/15°F (-9°C) wb outdoor air temperature and 70°F (21°C) entering indoor coil air.

2 Integrated Part Load Value rated at 80°F (27°C) outdoor air temperature.

3 Sound Rating Number rated in accordance with test conditions included in ARI Standard 270.

4 Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

OPTIONAL FIELD INSTALLED ACCESSORIES LCA/LGA/LHA088

Item		LCA/LGA088	LCA/LGA100	LHA088
Blower Proving Switch — Monitors blower operation, shuts down unit if blower fails		**18L89**		
Condensate Drain Trap - field installed only, may be factory enclosed to ship with unit	PVC	**37K70**		
	Copper	**48K14**		
Control Systems — See pages 5-10 for complete listing.		See pages 5-10		
Dirty Filter Switch — Senses static pressure increase indicating a dirty filter condition		**30K48**		
Down-Flow Gravity Exhaust Dampers — Aluminum blade dampers prevent blow back and outdoor air infiltration during off cycle, bird screen furnished - Net Weight. **NOTE -** See below for damper hood.		LAGED08/10 - 8 lbs. (4 kg)		
Down-Flow Gravity Exhaust Dampers Hood (Field Installed Only) - Net Weight		**24L15** - 25 lbs. (11 kg)		
Economizer — Opposing gear driven recirculated air and outdoor air dampers, plug-in connections to unit, nylon bearings, neoprene seals, 24 volt fully modulating spring return motor, adjustable minimum damper position, damper assembly slides in unit, outdoor air hood must be ordered separately (see below), optional down-flow gravity exhaust dampers available (see below), choice of economizer controls (see below) - Net Weight		LAREMD08/10 - 43 lbs. (20 kg)		
Economizer Control Choice — **Sensible Control —** Furnished on IMC board in unit, uses outdoor air sensor furnished with unit to measure outdoor air temperature and control damper position **(Furnished)** **Global Control —** Furnished on IMC board in unit, used with Direct Digital Control (DDC) systems, uses global air sensor to control damper position, determines when to use outdoor air for cooling or set damper at minimum position **(Furnished)** **Outdoor Enthalpy Control —** Adjustable enthalpy sensor, senses outdoor air enthalpy for economizer control, 0 to 100% outdoor air **Differential Enthalpy Control —** Two solid-state enthalpy sensors allow selection between outdoor air and return air (whichever has lowest enthalpy)		**(16K96)** Outdoor **(16K97)** Differential		
Electric Heat — Factory or field installed, helix wound nichrome elements, time delay for element staging, individual element limit controls, wiring harness, may be two-stage controlled, requires Fuse Block and Terminal Block (LHA/LCA Models)		See Electric Heat Data Tables		
Electric Heat Fuse Block — Required with Electric Heat. Mounting screws furnished (LCA/LHA Models)		See Optional Electric Heat Accessories Table (LCA/LHA Models).		
Electric Heat LTB2 Terminal Block — Required with electric heat				
Outdoor Air Damper Section — Linked mechanical dampers, 0 to 25% (fixed) outdoor air adjustable, installs in unit for down-flow applications, outdoor air hood must be ordered separately (see below) - Net Weight	**Automatic** — fully modulating spring return damper motor with plug in connection	LAOADM08/10 - 28 lbs. (13 kg)		
	Manual	LAOAD10/15 - 26 lbs. (12 kg)		
Outdoor Air Hood — Required with LAREMD08/10 Economizer, LAOAD10/15 and LAOADM08/10 Outdoor Air Damper Sections, two cleanable aluminum mesh fresh air filters furnished - Net Weight		LAOAH08/10 - 11 lbs. (5 kg) Filter size: 16 x 20 x 1 in. (406 x 508 x 25 mm)		
Power Exhaust Fan — Installs in unit for down-flow applications only with economizer option, provides exhaust air pressure relief, interlocked to run when return air dampers are closed and supply air blower is operating, fan runs when outdoor air dampers are 50% open (adjustable), motor is overload protected, requires optional down-flow gravity exhaust dampers (see above)	Model Number - Net Weight	LAPEF08/10 - 28 lbs. (13 kg)		
	Diameter - in. (mm) Number of Blades	20 (508) - 5		
	Total air volume - cfm (L/s)	4200 (1980) @ 0 in. .wg. (0 Pa)		
	Motor Horsepower (W)	1/3 (249)		
	Total Watts Input	300		
Smoke Detector — Photoelectric type, installed in supply air section or return air section or both sections		**70K87 -** Supply **70K86** - Return		
Aspiration box — for duct mounting of Indoor Air Quality Sensor		**47N18**		
Coil Guards — Galvanized steel wire guards to protect outdoor coil. Not used with Hail Guards		**24L55**		
Dehumidistat - Monitors humidity levels, reports to the IMC board which allows the heating and cooling to run simultaneously as needed		**65F86**		
Diffusers - Aluminum grilles, large center grille, insulated diffuser box with flanges, hanging rings furnished, interior transition (even air flow), internally sealed (prevents recirculation), adapts to T-bar ceiling grids or plaster ceilings - Net Weight	**Step-Down -** double deflection louvers	RTD11-95 - 88 lbs. (40 kg)		
	Flush - fixed blade louvers	FD11-95 - 75 lbs. (34 kg)		
Downflow Roof Mounting Frame — Nailer strip furnished, mates to unit, U.S. National Roofing Contractors Approved, shipped knocked down - Net Weight	14 inch (356 mm) height	LARMF08/10-14 - 118 lbs. (54 kg)		
	24 inch (610 mm) height	LARMF08/10-24 - 162 lbs. (74 kg)		
Hail Guards — Constructed of heavy gauge steel, painted to match cabinet, helps protect outdoor coils from hail damage. Not used with Coil Guards		**24L54**		
Horizontal Conversion Kit — Two piece duct cover in kit blocks off unit down-flow supply air opening, horizontal return air opening panel (on unit) is moved to block off down-flow return air opening for horizontal applications		**17L25**		
[1] **Horizontal Gravity Exhaust Dampers —** Aluminum blade dampers prevent blow back and outdoor air infiltration during off cycle, field installed in return air duct, bird screen and hood furnished - Net Weight		LAGEDH03/15 - 30 lbs. (14 kg)		
Indoor Air Quality (CO_2) Sensor — Monitors CO_2 levels, reports to Integrated Modular Control (IMC) board which adjusts economizer dampers as needed		**93J69**		
IMC Software and PC Interface Kit		**86K84**		
IMC Software and Manual Only		**32K22**		
PC Interface Kit Only		**28K56**		
LPG/Propane Kits (LGA Models Only)		**41L54**	- - - -	
Transitions (Supply and Return) — Used with diffusers, installs in roof mounting frame, galvanized steel construction, flanges furnished for duct connection, fully insulated - Net Weight		LASRT08/10 - 30 lbs. (14 kg)		

[1] Required if mixed air temperature is between 30 and 45 °F (-1 and 7 °C).
[2] Not available for LCA models with field installed electric heat, LCA 208/230v models with 30 kW or 45kW electric heat, LHA 208/230v models with 15 kW, 30 kW or 45 kW electric heat or for LHA 460v models with 45 kW electric heat.

OPTIONAL FIELD INSTALLED ACCESSORIES LGA/LCA

Item		Catalog No.	090	102	120	150
COOLING SYSTEM						
Condensate Drain Trap	Copper - LTACDKC09/36	**76M19**	⊗	⊗	⊗	⊗
	PVC - LTACDKP09/36	**76M18**	⊗	⊗	⊗	⊗
Corrosion Protection		Factory	○	○	○	○
Efficiency	Standard	Factory	○	○	○	○
	High	Factory	○	○	○	
Refrigerant Type	R-22	Factory	○	○	○	○
	R-410A	Factory	○	○	○	○
Service Valves (not for Humiditrol Units)		Factory	○	○	○	○
Stainless Steel Condensate Drain Pan		Factory	○	○	○	○
HEATING SYSTEM						
Combustion Air Intake Extensions	LTACAIK10/15	**89L97**	**x**	**x**	**x**	**x**
Gas Heat Input (2 Stage)	Standard - 130 kBtuh input	Factory	○	○	○	○
	Medium - 180 kBtuh input	Factory	○	○	○	○
	High - 240 kBtuh input	Factory	○	○	○	○
Low Temperature Vestibule Heater		Factory	○	○	○	○
LPG/Propane Conversion Kits	130 kBtuh input - LTALPGK-130	**72M94**	**x**	**x**	**x**	**x**
	180 kBtuh input - LTALPGK-180	**72M95**	**x**	**x**	**x**	**x**
	240 kBtuh input - LTALPGK-240	**72M96**	**x**	**x**	**x**	**x**
Stainless Steel Heat Exchanger		Factory	○	○	○	○
Vertical Vent Extension	LTAWEK10/15	**73M72**	**x**	**x**	**x**	**x**
Blower – SUPPLY AIR						
Constant Air Volume	2 hp Standard or High Efficiency	Factory	○	○	○	○
	3 hp Standard or High Efficiency	Factory	○	○	○	○
	5 hp Standard or High Efficiency	Factory	○	○	○	○
CABINET						
Coil Guards		**88K51**	**x**	**x**	**x**	**x**
Grille Guards		**86K29**	**x**	**x**	**x**	**x**
Hail Guards		**88K24**	**x**	**x**	**x**	**x**
Horizontal Discharge Conversion Kit	LTHSDKGC10/15	**56K53**	**x**	**x**	**x**	**x**
CONTROLS						
Blower Proving Switch	C0SWCH01AE1-	**30K49**	⊗	⊗	⊗	⊗
Commercial Controls	L Connection® Building Automation System	**- - -**	⊗	⊗	⊗	⊗
	Novar® ETM-2051 Unit Controller	**71M58**	⊗	⊗	⊗	⊗
	Sectra™ Zoning Sytem with Bypass Control - C0CTRL04EA1L	**34M41**	⊗	⊗	⊗	⊗
	Sectra™ Zoning Sytem Single Zone Control - C0CTRL03EA1L	**23M51**	⊗	⊗	⊗	⊗
Dirty Filter Switch	C0SWCH00AE1-	**30K48**	⊗	⊗	⊗	⊗
Fresh Air Tempering	C0SNDC03AE-1	**45L78**	⊗	⊗	⊗	⊗
Smoke Detector - Supply	LTSASDK10/36	**70K87**	⊗	⊗	⊗	⊗
Smoke Detector - Return	LTARSDK10/30	**70K86**	⊗	⊗	⊗	⊗
ELECTRICAL						
Voltage 60 hz	208/230V - 3 phase	Factory	○	○	○	○
	460V - 3 phase	Factory	○	○	○	○
	575V - 3 phase	Factory	○	○	○	○
HACR Circuit Breakers		Factory	○	○	○	○
Disconnect Switch	80 Amp	**84M13**	⊗	⊗	⊗	⊗
	150 Amp	**84M14**	⊗	⊗	⊗	⊗
GFI Service Outlets	LTAGFIK10/15	**74M70**	⊗	⊗	⊗	⊗
Phase Monitor		Factory	○	○	○	○

NOTE - The catalog and model numbers that appear here are for ordering field installed accessories only.

⊗ - Field Installed or Configure to Order (factory installed)

○ - Configure to Order (Factory Installed)

X - Field Installed.

OPTIONs / ACCESSORIES

Item		Catalog No.	090	102	120	150
HUMIDITROL® CONDENSER REHEAT OPTION						
Humiditrol		Factory	H	H	[1] H	S
Humidity Sensor Kit, Remote Mounted (required)	C0SNSR13AE-1	**17M50**	x	x	x	x
Remote Sensor Wall Seal Plate	C0MISC18AE-1	**58L33**	x	x	x	x
INDOOR AIR QUALITY						
Air Filters						
High Efficiency Air Filters 18 x 24 x 2 - Order 4 per unit	MERV 11 - C1FLTR20B-1-	**97L86**	⊗	⊗	⊗	⊗
	MERV 15 - C1FLTR50B-1-	**28W04**	**x**	**x**	**x**	**x**
Germicidal Lamps						
Healthy Climate® UVC Germicidal Lamps	208/230V - C1UVCL10B-1Y	**X7521**	**x**	**x**	**x**	**x**
	460V - C1UVCL10B-1G	**X7526**	**x**	**x**	**x**	**x**
	575V - C1UVCL10B-1J	**X7531**	**x**	**x**	**x**	**x**
Indoor Air Quality Sensors						
CO_2 Sensor - white case w/ display	C0SNSR50AE1L	**77N39**	**x**	**x**	**x**	**x**
CO_2 Sensor - white case, no display	C0SNSR52AE1L	**87N53**	**x**	**x**	**x**	**x**
CO_2 Sensor - black case w/ display	C0SNSR51AE1L	**87N52**	**x**	**x**	**x**	**x**
CO_2 Sensor - black case, no display	C0SNSR53AE1L	**87N54**	**x**	**x**	**x**	**x**
CO_2 Sensor Duct Mounting Kit	C0MISC19AE1-	**85L43**	**x**	**x**	**x**	**x**
Aspiration Box for duct mounting Sensor	C0MISC16AE1-	**90N43**	**x**	**x**	**x**	**x**
Handheld CO_2 Monitor	LTAIAQSHM03/36	**70N93**	**x**	**x**	**x**	**x**
ECONOMIZER						
Economizer						
Economizer - Order Hood Separately	LAREMD10/15	**53K51**	⊗	⊗	⊗	⊗
Outdoor Air Hood (down-flow) (Number of Filters) (2) 16 x 25 x 1 in. (406 x 635 x 25 mm)	LAOAH10/15	**53K05**	⊗	⊗	⊗	⊗
Economizer Controls						
Differential Enthalpy	C1SNSR07AE	**86M33**	⊗	⊗	⊗	⊗
Single Enthalpy	C1SNSR06AE	**86M32**	⊗	⊗	⊗	⊗
Global, Enthalpy	Sensor Field Provided	Factory	○	○	○	○
Differential Sensible	Furnished	Factory	○	○	○	○
Barometric Relief						
Down-Flow Barometric Relief Dampers - Order Hood Separately	LAGED10/15	**53K03**	⊗	⊗	⊗	⊗
Hood for Down-Flow LAGED	LAGEH09/15	**88K79**	x	x	x	x
Horizontal Barometric Relief Dampers - Hood Furnished	LAGEDH03/15	**53K04**	x	x	x	x
OUTDOOR AIR						
Outdoor Air Dampers						
Damper Section (down-flow) - Motorized - Order Hood Separately	LAOADM10/15	**53K53**	⊗	⊗	⊗	⊗
Damper Section (down-flow) - Manual - Order Hood Separately	LAOAD10/15	**66K69**	⊗	⊗	⊗	⊗
Outdoor Air Hood (down-flow) (Number of Filters) (2) 16 x 25 x 1 in. (406 x 635 x 25 mm)	LAOAH10/15	**53K05**	⊗	⊗	⊗	⊗
Power Exhaust						
Standard Static	208/230V - LAPEF10/15	**73M32**	⊗	⊗	⊗	⊗
	460V - LAPEF10/15	**73M33**	⊗	⊗	⊗	⊗
	575V - LAPEF10/15	**73M34**	⊗	⊗	⊗	⊗

NOTE - The catalog and model numbers that appear here are for ordering field installed accessories only.

⊗ - Field Installed or Configure to Order (factory installed)
○ - Configure to Order (Factory Installed)
S - Configure to Order (Factory Installed) Standard Efficiency Models Only
H - Configure to Order (Factory Installed) High Efficiency Models Only
X - Field Installed.
[1] Humiditrol option is only available for R-22 models.

OPTIONs / ACCESSORIES

Item		Catalog No.	090	102	120	150
ROOF CURBS						
ClipLock 1000						
8 in. (203 mm) height	C1CURB40B-1	**26W31**	x	x	x	x
14 in. (356 mm) height	LARMF10/15S-14	**65K34**	x	x	x	x
18 in. (457 mm) height	LARMF10/15S-18	**65K35**	x	x	x	x
24 in. (610 mm) height	LARMF10/15S-24	**35K36**	x	x	x	x
Standard						
14 in. (356 mm) height	LARMF10/15-14	**53K50**	x	x	x	x
24 in. (610 mm) height	LARMF10/15-24	**49K54**	x	x	x	x
CEILING DIFFUSERS						
Step-Down Order one	RTD11-95	**29G04**	x			
	(Canada Only) RTD11-95S	**13K61**	x			
	RTD11-135	**29G05**		x	x	
	(Canada Only) RTD11-135S	**13K62**		x	x	
	RTD11-185	**29G06**				x
	(Canada Only) RTD11-150/180S	**13K63**				x
Flush Order one	FD11-95	**29G08**	x			
	(Canada Only) FD11-95S	**13K56**	x			
	FD11-135	**29G09**		x	x	
	(Canada Only) FD11-135S	**13K57**		x	x	
	FD11-185	**29G10**				x
	(Canada Only) FD11-150/180S	**13K58**				x
Transitions (Supply and Return) Order one	LASRT08/10	**24L14**	x			
	LASRT10/12	**49K55**		x	x	
	(Canada Only) LASRT10/12S	**65K37**		x	x	
	LASRT15	**49K56**				x
	LASRT15S	**65K38**				x

NOTE - The catalog and model numbers that appear here are for ordering field installed accessories only.
X - Field Installed.

OPTIONAL FIELD INSTALLED ACCESSORIES LHA

Item		Fact.	Field	LHA090	LHA102	LHA120	LHA150
Cabinet Accessories	Coil Guards		⇒	**88K54**			
	Hail Guards		⇒	**88K27**			
	Horizontal Discharge Conversion Kit		⇒	LTHSDKGC10/15			
Ceiling Diffusers	Step-Down - Net Weight		⇒	RTD11-95 88 lbs. (40 kg)	RTD11-135 205 lbs. (93 kg)		RTD11-185 392 lbs. (178 kg)
	Flush - Net Weight		⇒	FD11-95 75 lbs. (34 kg)	FD11-135 174 lbs. (79 kg)		FD11-185 289 lbs. (135 kg)
	Transitions (Supply and Return) - Net Weight		⇒	LASRT08/10 30 lbs (14 kg)	LASRT10/12 32 lbs (15 kg)		LASRT15 36 lbs (16 kg)
Controls	Blower Proving Switch	•	⇒	COSWCH001AE1			
	Commercial Controls	•	⇒	See pages 34 - 39			
	Dirty Filter Switch	•	⇒	COSWCHOAE1			
	Smoke Detector - Supply	•	⇒	LTSASDK10/36			
	Smoke Detector - Return	•	⇒	LTARSDK10/30			
Cooling Accessories	PVC Condensate Drain Trap		⇒	LTACDKP09/36			
	Copper Condensate Drain Trap		⇒	LTACDKC09/36			
Corrosion Protection		•		Factory installed option			
Economizer	Economizer - Net Weight	•	⇒	LAREMD10/15 - 47 lbs. (21 kg)			
	Economizer Outdoor Air Hood - Net Weight Number and Size of Filters	•	⇒	LAOAH10/15 - 11 lbs. (5 kg) (2) 16 x 25 x 1 in. (406 x 635 x 25 mm)			
	Enthalpy Control Kit - Differential	•	⇒	C1SNSR07AE			
	Enthalpy Control Kit - Outdoor	•	⇒	C1SNSR06AE			
	Economizer Control - Global (sensor must be field provided)	•	⇒	See Intelligent Unit Controller Features, Engineering Handbook			
	Economizer Control - Sensible	•	⇒	See Intelligent Unit Controller Features, Engineering Hnadbook			
Barometric Relief	Down-Flow Barometric Relief Dampers Net Weight	•	⇒	LAGED10/15 - 8 lbs. (4 kg)			
	Hood for Down-Flow LAGED		⇒	LAGEH09/15			
	Horizontal Barometric Relief Dampers Net Weight		⇒	LAGEDH03/15 - 8 lbs. (4 kg)			
Outdoor Air Dampers	Damper Section (down-flow) - Automatic Net Weight	•	⇒	LAOADM10/15 - 31 lbs. (14 kg)			
	Damper Section (down-flow) - Manual Net Weight	•	⇒	LAOAD10/15 - 26 lbs. (12 kg)			
	Outdoor Air Hood (down-flow) Net Weight Number and Size of Filters	•	⇒	LAOAH10/15 - 11 lbs. (5 kg) (2) 16 x 25 x 1 in. (406 x 635 x 25 mm)			
Power Exhaust	Power Exhaust Fan - Net Weight	•	⇒	LAPEF10/15 - 28 lbs. (13 kg)			
Electrical Accessories	Disconnect Switch	•	⇒				
	HACR Circuit Breaker	•		Factory installed option			
	GFI Service Outlets	•	⇒	LTAGFIK10/15			
Electric Heat	Electric Heat	•	⇒	See Electric Heat Data Tables			
	Electric Heat LTB2 Terminal Block	•	⇒	See Optional Electric Heat Accessories			
	Electric Heat Fuse Block	•	⇒	See Optional Electric Heat Accessories			
Filters	MERV 11 High Efficiency		⇒	97L86 (18 x 24 x 2) order four per unit			
Indoor Air Quality (CO_2) Sensors	CO_2 Sensor Duct Mounting Kit		⇒	LTIAQSDMK03/36			
	Sensor - white case CO_2 display		⇒	COSNSR50AE1L			
	Sensor - white case no display		⇒	COSNSR52AE1L			
	Sensor - black case CO_2 display		⇒	COSNSR51AE1L			
	Sensor - black case no display		⇒	COSNSR53AE1L			
Indoor Air Quality (CO_2) Sensors	Sensor - duct mount, black, no display		⇒	LTAIAQSDMBN03/36			
	Aspiration Box for duct mounting		⇒	COMISC16AE1			
	Handheld CO_2 Monitor		⇒	LTAIAQSHM03/36			
Standard Roof Curbs	14 in. (356 mm) height - Net Weight		⇒	LARMF10/15-14 - 126 lbs. (57 kg)			
	24 in. (610 m) height - Net Weight		⇒	LARMF10/15-24 - 174 lbs. (79 kg)			
ClipLock 1000 Roof Curbs	14 in. (356 mm) height		⇒	LARMF10/15S-14			
	18 in. (457 mm) height		⇒	LARMF10/15S-18			
	24 in. (610 mm) height		⇒	LARMF10/15S-24			

OPTIONAL ELECTRIC HEAT ACCESSORIES LCA/LHA088

UNIT FUSE BLOCKS WITH ELECTRIC HEAT

Unit Model No.			LCA088S	LCA088H	LCA100S	LHA088S
Electric Heat		Model No.	EHA (see Electric Heat Data tables for additional information)			
		kW Input Range	7.5 - 15 - 22.5 -30 - 45			
Unit Fuse Block (3 phase)	**With** Power Exhaust Fans	208/230v - 2 hp (1.5 kW)	**56K93**			**56K95**
		460v - 2 hp (1.5 kW)	**56K52**			**25K09**
		575v - 2 hp (1.5 kW)	**56K51**			**56K52**
		208/230v - 3 hp (2.2 kW)	**56K93**			**56K96**
		460v - 3 hp (2.2 kW)	**25K08**	**56K52**		**25K10**
		575v - 3 hp (2.2 kW)	**56K52**	**56K51**		**25K08**
	Without Power Exhaust Fans	208/230v - 2 hp (1.5 kW)	**56K93**			**56K95**
		460v - 2 hp (1.5 kW)	**56K52**			**25K09**
		575v - 2 hp (1.5 kW)	**56K51**			**56K52**
		208/230v - 3 hp (2.2 kW)	**56K93**			**56K95**
		460v - 3 hp (2.2 kW)	**56K52**			**25K09**
		575v - 3 hp (2.2 kW)	**56K52**	**56K51**		**56K52**

LTB2 ELECTRIC HEAT TERMINAL BLOCK
LTB2-175 (30K75) 175 amps, **LTB2-335 (30K76)** 335 amps
(Required For Units Without Disconnect/Circuit Breaker But With Single Point Power Source)

LTB2 Terminal Block (3 phase)	7.5 kW *208/230v-3ph	2 hp (1.5 kW)	**30K75**	
		3 hp (2.2 kW)		
	15 kW *208/230v-3ph	2 hp (1.5 kW)	**30K75**	
		3 hp (2.2 kW)		
	22.5 kW *208/230v-3ph	2 hp (1.5 kW)	**30K75**	
		3 hp (2.2 kW)		
	30 kW *208/230v-3ph	2 hp (1.5 kW)	**30K75**	
		3 hp (2.2 kW)		
	45 kW *208/230v-3ph	2 hp (1.5 kW)	**30K75**	**30K76**
		3 hp (2.2 kW)		

NOTE — Terminal Block is factory installed in units with factory installed electric heat without disconnect/circuit breaker but with single point power source.
***NOTE — ALL 460V AND 575V UNIT VOLTAGES USE LTB2-175 (30K75) TERMINAL BLOCK.**

ELECTRIC HEAT TERMINAL BLOCKS

Unit Model No.			LHA090H	LHA102H	LHA120H	LHA150S
Electric Heat		Model No.	EHA (see Electric Heat Data tables for additional information)			
		kW Input Range	7.5, 15, 22.5, 30, 45		15, 22.5, 30, 45, 60	
LTB2 ELECTRIC HEAT TERMINAL BLOCK - LTB2-175 175 amps, **LTB2-335** 335 amps **(Required For Units Without Disconnect/Circuit Breaker But With Single Point Power Source)**						
7.5 kW	All hp	All voltages - 3ph	**LTB2-175**	**LTB2-175**	- - -	- - -
15 kW	All hp	208/230V - 3ph	**LTB2-175**	**LTB2-175**	**LTB2-175**	**LTB2-175**
22.5 kW	All hp	208/230V - 3ph	**LTB2-175**	**LTB2-175**	**LTB2-175**	**LTB2-175**
30 kW	All hp	208/230V - 3ph	**LTB2-175**	**LTB2-175**	**LTB2-175**	**LTB2-175**
45 kW	All hp	208/230V - 3ph	**LTB2-335**	**LTB2-335**	**LTB2-335**	**LTB2-335**
60 kW	All hp	208/230V - 3ph	- - -	- - -	**LTB2-335**	**LTB2-335**
90 kW	All hp	208/230V - 3ph	- - -	- - -	- - -	- - -

NOTE - All 460v and 575v models use LTB2-175 terminal block.
NOTE - Terminal Block is factory installed in units with factory installed electric heat without disconnect/circuit breaker but with single point power source.

OPTIONAL ELECTRIC HEAT ACCESSORIES LHA090/150

ELECTRIC HEAT CONTROL MODULE AND UNIT FUSE BLOCKS							
Unit Model No.				**LHA090H**	**LHA102H**	**LHA120H**	**LHA150S**
Electric Heat			Model No.	EHA (see Electric Heat Data tables for additional information)			
			kW Input Range	7.5, 15, 22.5, 30, 45		15, 22.5, 30, 45, 60	
Electric Heat Control Module (45/60/90 kW)				- - -			
Unit Fuse Block	**With Power Exhaust Fans**	2 hp (1.5 kW)	208/230V - 3ph	**56K93**	**56K94**	**56K95**	**56K95**
			460V-3ph	**56K52**	**25K08**	**25K09**	**25K09**
			575V-3ph	**56K51**	**56K51**	**56K52**	**56K52 -3 units 25K08**
		3 hp (2.2 kW)	208/230V - 3ph	**56K93**	**56K94**	**56K95**	**56K96**
			460V-3ph	**56K52**	**25K08**	**25K09**	**25K09**
			575V-3ph	**56K51**	**56K51**	**56K52**	**25K08**
		5 hp (3.7 kW)	208/230V - 3ph	**56K94**	**56K95**	**56K96**	**56K96**
			460V-3ph	**25K08**	**25K09**	**25K10**	**25K10**
			575V-3ph	**56K52**	**56K52**	**25K08**	**25K08**
		7.5 hp (5.6 kW)	208/230V - 3ph	- - -	- - -	- - -	- - -
			460V-3ph	- - -	- - -	- - -	- - -
			575V-3ph	- - -	- - -	- - -	- - -
		10 hp (7.5 kW)	208/230V - 3ph	- - -	- - -	- - -	- - -
			460V-3ph	- - -	- - -	- - -	- - -
			575V-3ph	- - -	- - -	- - -	- - -
	Without Power Exhaust Fans	2 hp (1.5 kW)	208/230V - 3ph	**56K93**	**56K94**	**56K94**	**56K95**
			460V-3ph	**56K52**	**56K52**	**25K09**	**25K09**
			575V-3ph	**56K51**	**56K51**	**56K52**	**56K52 -3 units 25K08**
		3 hp (2.2 kW)	208/230V - 3ph	**56K93**	**56K94**	**56K95**	**56K96**
			460V-3ph	**56K52**	**25K08**	**25K09**	**25K09**
			575V-3ph	**56K51**	**56K51**	**56K52**	**56K52 -3 units 25K08**
		5 hp (3.7 kW)	208/230V - 3ph	**56K94**	**56K95**	**56K95**	**56K96**
			460V-3ph	**25K08**	**25K08**	**25K09**	**25K09 -3 units 25K10**
			575V-3ph	**56K52**	**56K52**	**25K08**	**25K08**
		7.5 hp (5.6 kW)	208/230V - 3ph	- - -	- - -	- - -	- - -
			460V-3ph	- - -	- - -	- - -	- - -
			575V-3ph	- - -	- - -	- - -	- - -
		10 hp (7.5 kW)	208/230V - 3ph	- - -	- - -	- - -	- - -
			460V-3ph	- - -	- - -	- - -	- - -
			575V-3ph	- - -	- - -	- - -	- - -

ELECTRIC HEAT CAPACITIES

Volts Input	7.5 kW			15 kW			22.5 kW			30 kW			45 kW			60 kW		
	kW Input	Btuh Output	No. of Steps	kW Input	Btuh Output	No. of Steps	kW Input	Btuh Output	No. of Steps	kW Input	Btuh Output	No. of Steps	kW Input	Btuh Output	No. of Steps	kW Input	Btuh Output	No. of Steps
208	5.6	19,100	1	11.3	38,600	1	16.9	57,700	2	22.5	76,800	1	33.8	115,300	2	45.0	153,600	2
220	6.3	21,500	1	12.6	43,000	1	18.9	64,500	2	25.2	86,000	1	37.8	129,000	2	50.4	172,000	2
230	6.9	23,600	1	13.8	47,100	1	20.7	70,700	2	27.5	93,900	1	41.3	141,000	2	55.1	188,000	2
240	7.5	25,600	1	15.0	51,200	1	22.5	76,800	2	30.0	102,400	1	45.0	153,600	2	60.0	204,800	2
440	6.9	21,500	1	12.6	43,000	1	18.9	64,500	2	25.2	86,000	1	37.8	129,000	2	50.4	172,000	2
460	6.9	23,600	1	13.8	47,100	1	20.7	70,700	2	27.5	93,900	1	41.3	141,000	2	55.1	188,000	2
480	7.5	25,600	1	15.0	51,200	1	22.5	76,800	2	30.0	102,400	1	45.0	153,600	2	60.0	204,800	2
550	6.3	21,500	1	12.6	43,000	1	18.9	64,500	2	25.2	86,000	1	37.8	129,000	2	50.4	172,000	2
575	6.9	23,600	1	13.8	47,100	1	20.7	70,700	2	27.5	93,900	1	41.3	141,000	2	55.1	188,000	2
600	7.5	25,600	1	15.0	51,200	1	22.5	76,800	2	30.0	102,400	1	45.0	153,600	2	60.0	204,800	2

ELECTRICAL DATA

Model No.			LCA/LGA088											
Line voltage data — 60 Hz — 3 phase			208/230v				460v				575v			
Efficiency type			**Standard (S)**		**High (H)**		**Standard (S)**		**High (H)**		**Standard (S)**		**High (H)**	
Compressors (2)	Rated load amps each (total)		12.2 (24.4)		12.4 (24.9)		7.1 (14.1)		6.4 (12.8)		5.8 (11.5)		5.0 (10)	
	Locked rotor amps each (total)		90 (180)		88 (176)		46 (92)		44 (88)		37 (74)		34 (68)	
Outdoor Fan Motor	Full load amps		3.0		3.0		1.5		1.5		1.2		1.2	
	Locked rotor amps		6.0		6.0		3.0		3.0		2.9		2.9	
Indoor Blower Motor	Motor Output	hp	2	3	2	3	2	3	2	3	2	3	2	3
		kW	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2
	Full load amps		7.5	10.6	7.5	10.6	3.4	4.8	3.4	4.8	2.7	2.9	2.7	3.9
	Locked rotor amps		46.9	66	46.9	66	20.4	26.8	20.4	26.8	16.2	23.4	16.2	23.4
Rec. max. fuse size (amps)	With Exhaust Fan		50	50	50	50	25	30	25	25	20	25	20	20
	Less Exhaust Fan		50	50	50	50	25	30	25	25	20	25	20	20
*Minimum Circuit Ampacity	With Exhaust Fan		41	44	41	44	23	24	21	23	18	20	17	18
	Less Exhaust Fan		38	42	39	42	21	23	20	21	17	19	16	17
Optional Power Exhaust Fan	(No.) Horsepower (W)		(1) 1/3 (249)											
	Full load amps		2.4		2.4		1.3		1.3		1.0		1.0	
	Locked rotor amps		4.7		4.7		2.4		2.4		1.9		1.9	
Service Outlet (2) 115 volt GFCI (amp rating)			15											

*Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.
NOTE — Extremes of operating range are plus and minus 10 % of line voltage.
NOTE — Where current does not exceed 100 amps, HACR type circuit breaker may be used in place of fuse (U.S. only).

Model No.			LCA/LGA100S						LHA088S					
Line voltage data — 60 Hz — 3 phase			208/230v		460v		575v		208/230v		460v		575v	
Efficiency Type			**Standard (S)**											
Compressors (2 - LCA/LGA) (1 - LHA)	Rated load amps each (total)		13.5 (26.9)		6.7 (13.3)		5.0 (10)		28.8		14.7		10.8	
	Locked rotor amps each (total)		115 (230)		47.5 (95)		37.5 (75)		195		95		80	
Outdoor Fan Motor	Full load amps		3.0		1.5		1.2		3.0		1.5		1.2	
	Locked rotor amps		6.0		3.0		2.9		6.0		3.0		2.9	
Indoor Blower Motor	Motor Output	hp	2	3	2	3	2	3	2	3	2	3	2	3
		kW	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2	1.5	2.2
	Full load amps		7.5	10.6	3.4	4.8	2.7	3.9	7.5	10.6	3.4	4.8	2.7	3.9
	Locked rotor amps		46.9	66	20.4	26.8	16.2	23.4	46.9	66	20.4	26.8	16.2	23.4
Rec. max. fuse size (amps)	With Exhaust Fan		50	50	25	25	20	20	70	70	35	35	25	25
	Less Exhaust Fan		50	50	25	25	20	20	70	70	35	35	25	25
*Minimum Circuit Ampacity	With Exhaust Fan		44	47	22	23	17	18	49	53	25	27	19	20
	Less Exhaust Fan		41	44	20	22	16	17	47	50	24	25	18	19
Optional Power Exhaust Fan	(No.) Horsepower (W)		(1) 1/3 (249)											
	Full load amps		2.4		1.3		1.0		2.4		1.3		1.0	
	Locked rotor amps		4.7		2.4		1.9		4.7		2.4		1.9	
Service Outlet (2) 115 volt GFCI (amp rating)			15											

*Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.NOTE — Extremes of operating range are plus and minus 10 % of line voltage.NOTE — Where current does not exceed 100 amps, HACR type circuit breaker may be used in place of fuse (U.S. only).

ELECTRIC HEAT / ELECTRICAL DATA

7.5 TON HIGH EFFICIENCY (R-22) — LCA/LGA090H2

Voltage - 60hz - 3 phase			208/230V-3ph			460V-3ph			575V-3ph		
Compressors (2)	Rated Load Amps - each (total)		12.4 (24.9)			6.4 (12.8)			4.8 (9.6)		
	Locked Rotor Amps - each (total)		88 (176)			44 (88)			34 (68)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection	**Unit only**		50	50	60	25	25	30	20	20	25
	with power exhaust	**0 kW**	50	50	60	25	25	30	20	20	25
		7.5 kW	50	50	60	25	25	30	20	20	25
		15 kW	60	70	70	30	35	35	25	30	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
[2] Minimum Circuit Ampacity	**Unit only**		41	44	50	21	22	25	16	17	19
	with power exhaust	**0 kW**	43	46	52	22	24	26	17	18	20
		7.5 kW	43	46	52	22	24	26	17	18	20
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
Unit Fuse Block	Unit only		**56K93**	**56K93**	**56K94**	**56K52**	**56K52**	**25K08**	**56K51**	**56K51**	**56K52**
	with power exhaust		**56K93**	**56K93**	**56K94**	**56K52**	**56K52**	**25K08**	**56K51**	**56K51**	**56K52**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
Terminal Block			**30K75**			**30K75**			**30K75**		

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRIC HEAT / ELECTRICAL DATA

7.5 TON HIGH EFFICIENCY (R-410A) — LCA/LGA090H4

Voltage - 60hz - 3 phase			208/230V-3ph			460V-3ph			575V-3ph		
Compressors (2)	Rated Load Amps - each (total)		14.6 (29.2)			7.1 (14.2)			5.1 (10.2)		
	Locked Rotor Amps - each (total)		91 (182)			46 (92)			34 (68)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] **Maximum Overcurrent Protection**	**Unit only**		50	60	70	25	30	30	20	20	25
	with power exhaust	**0 kW**	60	60	70	30	30	35	20	20	25
		7.5 kW	60	60	70	30	30	35	20	20	25
		15 kW	60	70	70	30	35	35	25	30	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
[2] **Minimum Circuit Ampacity**	**Unit only**		44	49	55	22	24	27	17	18	20
	with power exhaust	**0 kW**	48	51	57	24	25	28	18	19	21
		7.5 kW	48	51	57	24	25	28	18	19	21
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
Unit Fuse Block	Unit only		**56K93**	**56K94**	**56K95**	**56K52**	**25K08**	**25K08**	**56K51**	**56K51**	**56K52**
	with power exhaust		**56K94**	**56K94**	**56K95**	**25K08**	**25K08**	**25K09**	**56K51**	**56K51**	**56K52**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
Terminal Block			**30K75**			**30K75**			**30K75**		

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRIC HEAT / ELECTRICAL DATA

8.5 TON HIGH EFFICIENCY (R-22) — LCA/LGA102H2

Voltage - 60hz - 3 phase			208/230V-3ph			460V-3ph			575V-3ph		
Compressors (2)	Rated Load Amps - each (total)		14.7 (29.4)			7.1 (14.2)			5.1 (10.2)		
	Locked Rotor Amps - each (total)		91 (182)			50 (100)			37 (74)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection	**Unit only**		60	60	70	25	30	30	20	20	25
	with power exhaust	**0 kW**	60	60	70	30	30	35	20	20	25
		7.5 kW	60	60	70	30	30	35	20	20	25
		15 kW	60	70	70	30	35	35	25	30	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
[2] Minimum Circuit Ampacity	**Unit only**		46	49	55	22	24	27	17	18	20
	with power exhaust	**0 kW**	48	51	57	24	25	28	18	19	21
		7.5 kW	48	51	57	24	25	28	18	19	21
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
Unit Fuse Block	Unit only		**56K94**	**56K94**	**56K95**	**56K52**	**25K08**	**25K08**	**56K51**	**56K51**	**56K52**
	with power exhaust		**56K94**	**56K94**	**56K95**	**25K08**	**25K08**	**25K09**	**56K51**	**56K51**	**56K52**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
Terminal Block			**30K75**			**30K75**			**30K75**		

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

8.5 TON HIGH EFFICIENCY (R-410A) — LCA/LGA102H4

Voltage - 60hz - 3 phase			208/230V-3ph			460V-3ph			575V-3ph		
Compressors (2)	Rated Load Amps - each (total)		16.0 (32.0)			7.1 (14.2)			5.6 (11.2)		
	Locked Rotor Amps - each (total)		91 (182)			46 (92)			37 (74)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection	**Unit only**		60	60	70	25	30	30	20	20	25
	with power exhaust	**0 kW**	60	60	70	30	30	35	20	25	25
		7.5 kW	60	60	70	30	30	35	20	25	25
		15 kW	60	70	70	30	35	35	25	30	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
[2] Minimum Circuit Ampacity	**Unit only**		49	52	58	22	24	27	18	19	21
	with power exhaust	**0 kW**	51	54	60	24	25	28	19	20	22
		7.5 kW	51	54	60	24	25	28	19	20	22
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
Unit Fuse Block	Unit only		**56K94**	**56K94**	**56K95**	**56K52**	**25K08**	**25K08**	**56K51**	**56K51**	**56K52**
	with power exhaust		**56K94**	**56K94**	**56K95**	**25K08**	**25K08**	**25K09**	**56K51**	**56K52**	**56K52**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
Terminal Block				**30K75**			**30K75**			**30K75**	

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRIC HEAT / ELECTRICAL DATA

10 TON HIGH EFFICIENCY (R-22) **LCA/LGA120H2**

Voltage - 60hz - 3 phase			**208/230V-3ph**			**460V-3ph**			**575V-3ph**		
Compressors (2)	Rated Load Amps - each (total)		17.3 (34.6)			9.0 (18.0)			7.1 (14.2)		
	Locked Rotor Amps - each (total)		123 (246)			62 (124)			50 (100)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection	**Unit only**		60	70	70	35	35	35	25	25	30
	with power exhaust	**0 kW**	70	70	80	35	35	40	25	25	30
		15 kW	70	70	80	35	35	40	25	30	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
		60 kW	175	175	175	80	80	90	70	70	70
[2] Minimum Circuit Ampacity	**Unit only**		52	55	61	27	28	31	21	22	25
	with power exhaust	**0 kW**	54	57	63	28	29	32	22	23	26
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
		60 kW	157	161	169	79	80	84	63	64	67
Unit Fuse Block	Unit only		**56K94**	**56K95**	**56K95**	**25K09**	**25K09**	**25K09**	**56K52**	**56K52**	**25K08**
	with power exhaust		**56K95**	**56K95**	**56K96**	**25K09**	**25K09**	**25K10**	**56K52**	**56K52**	**25K08**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	60 kW		N/A	N/A	N/A	**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**
Terminal Block	**15-45 kW**			**30K75**			**30K75**			**30K75**	
	60 kW			**30K76**			**30K75**			**30K75**	

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRIC HEAT / ELECTRICAL DATA

10 TON HIGH EFFICIENCY (R-410A) **LCA/LGA120H4**

Voltage - 60hz - 3 phase			**208/230V-3ph**			**460V-3ph**			**575V-3ph**		
Compressors (2)	Rated Load Amps - each (total)		15.6 (31.2)			7.8 (15.6)			5.8 (11.6)		
	Locked Rotor Amps - each (total)		110 (220)			52 (104)			35.5 (71.0)		
Outdoor Fan Motors (2)	Full Load Amps - each (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked Rotor Amps - each (total)		4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Power Exhaust Fan	Horsepower		1/3 (249)			1/3 (249)			1/3 (249)		
	Full Load Amps		2.4			1.3			1.0		
	Locked Rotor Amps		4.7			2.4			1.9		
Service Outlet 115V GFI			15 Amps			15 Amps			15 Amps		
Indoor Blower Motor	Horsepower		**2**	**3**	**5**	**2**	**3**	**5**	**2**	**3**	**5**
	Rated Load Amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked Rotor Amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection	**Unit only**		60	60	70	30	30	35	20	20	25
	with power exhaust	**0 kW**	60	60	70	30	30	35	20	25	25
		15 kW	60	70	70	30	35	35	25	25	30
		22.5 kW	90	90	100	40	45	45	35	35	40
		30 kW	110	110	125	60	60	60	45	45	45
		45 kW	150	175	175	80	80	80	60	70	70
		60 kW	175	175	175	80	80	90	70	70	70
[2] Minimum Circuit Ampacity	**Unit only**		48	51	57	24	25	28	18	19	22
	with power exhaust	**0 kW**	50	53	59	25	27	30	19	20	23
		15 kW	58	62	69	29	31	34	23	25	27
		22.5 kW	81	84	92	40	42	45	32	34	36
		30 kW	103	107	115	51	53	57	41	43	45
		45 kW	148	152	160	74	76	79	59	61	63
		60 kW	157	161	169	79	80	84	63	64	67
Unit Fuse Block	Unit only		**56K94**	**56K94**	**56K95**	**25K08**	**25K08**	**25K09**	**56K51**	**56K51**	**56K52**
	with power exhaust		**56K94**	**56K94**	**56K95**	**25K08**	**25K08**	**25K09**	**56K51**	**56K52**	**56K52**
Disconnect	**0-15 kW**		**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	22.5 kW		**84M13**	**84M13**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	30-45 kW		**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**	**84M13**
	60 kW		N/A	N/A	N/A	**84M14**	**84M14**	**84M14**	**84M13**	**84M13**	**84M13**
Terminal Block	**15-45 kW**			**30K75**			**30K75**			**30K75**	
	60 kW			**30K76**			**30K75**			**30K75**	

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRICAL DATA

Model No.			LCA/LGA150								
Line voltage data — 60 Hz — 3 phase			208/230v			460v			575v		
Unit Efficiency			Standard (S)			Standard (S)			Standard (S)		
Compressors (2)	Rated load amps each (total)		18.6 (37.2)			9.0 (18.0)			7.4 (14.8)		
	Locked rotor amps each (total)		156 (312)			70 (140)			54 (108)		
Condenser Fan Motors (2)	Full load amps (total)		2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked rotor amps (total)		3.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Evaporator Blower Motor	Motor Output	hp	2	3	5	2	3	5	2	3	5
		kW	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7
	Full load amps		7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked rotor amps		46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
Rec. max. fuse size (amps)	With Exhaust Fan		70	70	80	35	35	40	30	30	30
	Less Exhaust Fan		70	70	80	35	30	40	25	30	30
*Minimum Circuit Ampacity	With Exhaust Fan		57	60	66	28	27	32	23	24	26
	Less Exhaust Fan		55	58	64	27	28	31	22	23	25
Optional Power Exhaust Fan	(No.) Horsepower (W)		(1) 1/3 (249)								
	Full load amps		2.4			1.3			1.0		
	Locked rotor amps		4.7			2.4			1.9		
Service Outlet (2) 115 volt GFCI (amp rating)			15			15			15		

*Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.
NOTE — Extremes of operating range are plus and minus 10 % of line voltage.
NOTE — Where current does not exceed 100 amps, HACR type circuit breaker may be used in place of fuse (U.S. only).

ELECTRICAL DATA

7.5 AND 8.5 TON

Model No.		LHA090H									LHA102H								
Line voltage data - 60 Hz - 3 phase		208/230V			460V			575V			208/230V			460V			575V		
Compressors	Number of Compressors	2			2			2			2			2			2		
	Rated load amps - each (total)	12.4 (24.8)			6.4 (12.8)			4.8 (9.6)			14.7 (29.4)			7.1 (14.2)			5.1 (10.2)		
	Locked rotor amps - each (total)	88 (176)			44 (88)			34 (68)			91 (182)			50 (100)			37 (74)		
Outdoor Fan Motors	Number of Motors	2			2			2			2			2			2		
	Full load amps - each (total)	2.4 (4.8)			1.3 (2.6)			1.0 (2.0)			2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked rotor amps - each (total)	4.7 (9.4)			2.4 (4.8)			1.9 (3.8)			4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Indoor Blower Motor	Motor Output - hp	2	3	5	2	3	5	2	3	5	2	3	5	2	3	5	2	3	5
	- kW	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7
	Full load amps	7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1	7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked rotor amps	46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6	46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection (amps)	With Exhaust Fan	50	50	60	25	25	30	20	20	25	60	60	70	30	30	35	20	20	25
	Less Exhaust Fan	50	50	60	25	25	30	20	20	25	60	60	70	25	30	30	20	20	25
[2] Minimum Circuit Ampacity	With Exhaust Fan	43	46	52	22	24	26	17	18	20	48	51	57	24	25	28	18	19	21
	Less Exhaust Fan	41	44	50	21	22	25	16	17	19	46	49	55	22	24	27	17	18	20
Optional Power Exhaust Fan	(Number) Horsepower (W)	(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)		
	Full load amps	2.4			1.3			1.0			2.4			1.3			1.0		
	Locked rotor amps	4.7			2.4			1.9			4.7			2.4			1.9		
Service Outlet 115 volt GFI (amp rating)		15			15			15			15			15			15		

10 AND 12.5 TON

Model No.		LHA120H									LHA150S								
Line voltage data - 60 Hz - 3 phase		208/230V			460V			575V			208/230V			460V			575V		
Compressors	Number of Compressors	2			2			2			2			2			2		
	Rated load amps - each (total)	17.3 (34.6)			9.0 (18.0)			7.1 (14.2)			19.3 (38.6)			9.0 (18.0)			7.4 (14.8)		
	Locked rotor amps - each (total)	123 (246)			62 (124)			50 (100)			156 (312)			75 (150)			54 (108)		
Outdoor Fan Motors	Number of Motors	2			2			2			2			2			2		
	Full load amps - each (total)	2.4 (4.8)			1.3 (2.6)			1.0 (2.0)			2.4 (4.8)			1.3 (2.6)			1.0 (2.0)		
	Locked rotor amps - each (total)	4.7 (9.4)			2.4 (4.8)			1.9 (3.8)			4.7 (9.4)			2.4 (4.8)			1.9 (3.8)		
Indoor Blower Motor	Motor Output - hp	2	3	5	2	3	5	2	3	5	2	3	5	2	3	5	2	3	5
	- kW	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7
	Full load amps	7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1	7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked rotor amps	46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6	46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection (amps)	With Exhaust Fan	70	70	80	35	35	40	25	25	30	70	80	80	35	35	40	25	30	30
	Less Exhaust Fan	60	70	70	35	35	35	25	25	30	70	70	80	35	35	35	25	25	30
[2] Minimum Circuit Ampacity	With Exhaust Fan	54	57	63	28	29	32	22	23	26	57	62	68	28	29	32	23	24	26
	Less Exhaust Fan	52	55	61	27	28	31	21	22	25	55	59	65	27	28	31	22	23	25
Optional Power Exhaust Fan	(Number) Horsepower (W)	(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)		
	Full load amps	2.4			1.3			1.0			2.4			1.3			1.0		
	Locked rotor amps	4.7			2.4			1.9			4.7			2.4			1.9		
Service Outlet 115 volt GFI (amp rating)		15			15			15			15			15			15		

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

1 HACR type breaker or fuse.

2 Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

ELECTRICAL DATA

12.5 TON										
Model No.		**LHA150S-3**								
Line voltage data - 60 Hz - 3 phase		208/230V			460V			575V		
Compressors	Number of Compressors	2			2			2		
	Rated load amps - each (total)	19.6 (39.2)			9.5 (19.0)			7.8 (15.0)		
	Locked rotor amps - each (total)	156 (312)			75 (150)			54 (108)		
Outdoor Fan Motors	Number of Motors	2			2			2		
	Full load amps - each (total)	3.0 (6.0)			1.3 (2.6)			1.0 (2.0)		
	Locked rotor amps - each (total)	6.0 (12.0)			2.4 (4.8)			1.9 (3.8)		
Indoor Blower Motor	Motor Output - hp	2	3	5	2	3	5	2	3	5
	- kW	1.5	2.2	3.7	1.5	2.2	3.7	1.5	2.2	3.7
	Full load amps	7.5	10.6	16.7	3.4	4.8	7.6	2.7	3.9	6.1
	Locked rotor amps	46.9	66	105	20.4	26.8	45.6	16.2	23.4	36.6
[1] Maximum Overcurrent Protection (amps)	With Exhaust Fan	70	80	80	35	35	40	30	30	30
	Less Exhaust Fan	70	80	80	35	35	40	30	30	30
[2] Minimum Circuit Ampacity	With Exhaust Fan	60	64	70	30	31	34	24	25	28
	Less Exhaust Fan	58	61	67	28	30	32	23	24	27
Optional Power Exhaust Fan	(Number) Horsepower (W)	(1) 1/3 (249)			(1) 1/3 (249)			(1) 1/3 (249)		
	Full load amps	2.4			1.3			1.0		
	Locked rotor amps	4.7			2.4			1.9		
Service Outlet 115 volt GFI (amp rating)		15			15			15		

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

1 HACR type breaker or fuse.

2 Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

BLOWER DATA 088, 100

BLOWER TABLE INCLUDES RESISTANCE FOR <u>LCA088 BASE UNIT ONLY</u> WITH DRY INDOOR COIL AND AIR FILTERS IN PLACE.

FOR ALL UNITS ADD:

1 - Wet indoor coil air resistance of selected unit.
2 - Any factory installed options air resistance (heat section, economizer, etc.)
3 - Any field installed accessories air resistance (duct resistance, diffuser, etc.)

Then determine from blower table blower motor output and drive required. See pages 21 and 22 for accessories and motor drives

MINIMUM AIR VOLUME REQUIRED FOR USE WITH OPTIONAL ELECTRIC HEAT

LCA/LHA models require 3000 cfm (1415 L/s) minimum air with electric heat in horizontal applications
LCA/LHA models require 2600 cfm (1225 L/s) minimum air with electric heat in downflow applications

BOLD ITALICS INDICATE FIELD FURNISHED DRIVE.

Air Volume cfm (L/s)	Total Static Pressure - Inches Water Gauge (Pa)																	
	0.20 (50)		0.40 (100)		0.60 (150)		0.80 (200)		1.00 (250)		1.20 (300)		1.40 (350)		1.60 (400)		1.80 (450)		2.00 (495)	
	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)	RPM	BHP (kW)
2000 (945)	***625***	***0.40 (.30)***	***725***	***0.55 (0.41)***	***820***	***0.70 (0.52)***	905	0.90 (0.67)	990	1.10 (0.82)	1065	1.30 (0.97)	1140	1.55 (1.16)	1215	1.85 (1.38)	1285	2.20 (1.64)	***1350***	***2.50 (1.87)***
2200 (1040)	***670***	***0.50 (.37)***	***760***	***0.65 (0.48)***	850	0.80 (0.60)	930	1.00 (0.75)	1010	1.20 (0.90)	1085	1.45 (1.08)	1155	1.70 (1.27)	1225	1.95 (1.45)	1290	2.25 (1.68)	***1355***	***2.60 (1.94)***
2400 (1135)	***715***	***0.65 (.48)***	***800***	***0.80 (0.60)***	880	0.95 (0.71)	960	1.15 (0.86)	1030	1.35 (1.01)	1105	1.60 (1.19)	1170	1.80 (1.34)	1240	2.10 (1.57)	***1305***	***2.40 (1.79)***	***1365***	***2.70 (2.01)***
2600 (1230)	***760***	***0.80 (.60)***	***840***	***0.95 (0.71)***	915	1.10 (0.82)	990	1.30 (0.97)	1060	1.50 (1.12)	1125	1.75 (1.31)	1195	2.00 (1.49)	1255	2.25 (1.68)	***1320***	***2.55 (1.90)***	***1380***	***2.85 (2.13)***
2800 (1325)	***805***	***1.00 (.75)***	880	1.15 (0.86)	955	1.30 (0.97)	1020	1.50 (1.12)	1090	1.70 (1.27)	1155	1.95 (1.45)	1215	2.20 (1.64)	1280	2.45 (1.83)	***1335***	***2.70 (2.01)***	***1395***	***3.05 (2.28)***
3000 (1420)	855	1.20 (.90)	925	1.35 (1.01)	990	1.50 (1.12)	1055	1.70 (1.27)	1120	1.95 (1.45)	1185	2.15 (1.60)	1245	2.40 (1.79)	1300	2.65 (1.98)	***1360***	***2.95 (2.20)***	***1415***	***3.25 (2.42)***
3200 (1510)	900	1.40 (1.04)	965	1.60 (1.19)	1030	1.75 (1.31)	1095	2.00 (1.49)	1155	2.20 (1.64)	1215	2.45 (1.83)	1270	2.65 (1.98)	***1330***	***2.95 (2.20)***	***1385***	***3.25 (2.42)***	***1435***	***3.50 (2.61)***
3400 (1605)	950	1.70 (1.27)	1010	1.85 (1.38)	1075	2.05 (1.53)	1130	2.25 (1.68)	1190	2.50 (1.87)	1245	2.70 (2.01)	1300	2.95 (2.20)	***1355***	***3.25 (2.42)***	***1410***	***3.50 (2.61)***	***1460***	***3.80 (2.83)***
3600 (1700)	995	1.95 (1.45)	1055	2.15 (1.60)	1115	2.35 (1.75)	1170	2.55 (1.90)	1225	2.80 (2.09)	1280	3.05 (2.28)	***1335***	***3.30 (2.46)***	***1385***	***3.55 (2.65)***	***1440***	***3.85 (2.87)***	***1490***	***4.15 (3.10)***
3800 (1795)	1045	2.30 (1.72)	1100	2.45 (1.83)	1160	2.70 (2.01)	1210	2.90 (2.16)	1265	3.15 (2.35)	***1320***	***3.40 (2.54)***	***1370***	***3.65 (2.72)***	***1420***	***3.95 (2.95)***	***1470***	***4.25 (3.17)***	***1515***	***4.50 (3.36)***
4000 (1890)	1095	2.65 (1.98)	1150	2.85 (2.13)	1200	3.05 (2.28)	1255	3.30 (2.46)	***1305***	***3.55 (2.65)***	***1355***	***3.80 (2.83)***	***1405***	***4.05 (3.02)***	***1450***	***4.30 (3.21)***	***1500***	***4.60 (3.43)***	***1545***	***4.90 (3.66)***

BLOWER DATA 090, 102, 120, 150

BLOWER TABLE INCLUDES RESISTANCE FOR LCA102 BASE UNIT ONLY WITH DRY INDOOR COIL & AIR FILTERS IN PLACE.
FOR ALL UNITS ADD:

1 - Wet indoor coil air resistance of selected unit.
2 - Any factory installed options air resistance (heat section, economizer, etc.)
3 - Any field installed accessories air resistance (duct resistance, diffuser, etc.)

Then determine from blower table blower motor output and drive required.

MINIMUM AIR VOLUME REQUIRED FOR USE WITH OPTIONAL ELECTRIC HEAT

LCA090 & 102 requires 3000 cfm (1415 L/s) minimum air with electric heat.
LCA120 & LCA150 models require 4000 cfm (1890 L/s) minimum air with electric heat.

BOLD ITALIC INDICATES FIELD FURNISHED DRIVE

Air Volume cfm (L/s)	Total Static Pressure - in. w.g. (Pa)													
	.20 (50)	.40 (100)	.60 (150)	.80 (200)	1.00 (250)	1.20 (300)	1.40 (350)	1.60 (400)	1.80 (450)	2.00 (495)	2.20 (545)	2.40 (595)	2.60 (645)
	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)	RPM BHP (kW)
2250 (1060)	***455 0.30 (0.22)***	***555 0.45 (0.34)***	***640 0.60 (0.45)***	720 0.80 (0.60)	790 1.00 (0.75)	855 1.20 (0.90)	915 1.40 (1.04)	975 1.60 (1.19)	1030 1.85 (1.38)	1080 2.05 (1.53)	1130 2.30 (1.72)	1175 2.55 (1.90)	1220 2.80 (2.09)
2500 (1180)	***475 0.40 (0.30)***	***575 0.55 (0.41)***	***660 0.70 (0.52)***	735 0.90 (0.67)	805 1.10 (0.82)	870 1.30 (0.97)	930 1.55 (1.16)	985 1.75 (1.31)	1040 2.00 (1.49)	1090 2.25 (1.68)	1140 2.50 (1.87)	1185 2.75 (2.05)	1230 3.00 (2.24)
2750 (1300)	***495 0.45 (0.34)***	***595 0.65 (0.48)***	***675 0.85 (0.63)***	750 1.05 (0.78)	820 1.25 (0.93)	885 1.45 (1.08)	940 1.70 (1.27)	995 1.90 (1.42)	1050 2.20 (1.64)	1100 2.45 (1.83)	1145 2.65 (1.98)	1195 2.95 (2.20)	1240 3.25 (2.42)
3000 (1415)	***525 0.55 (0.41)***	***615 0.75 (0.56)***	695 0.95 (0.71)	770 1.20 (0.90)	835 1.40 (1.04)	895 1.60 (1.19)	955 1.85 (1.38)	1010 2.10 (1.57)	1060 2.35 (1.75)	1110 2.65 (1.98)	1160 2.90 (2.16)	1205 3.20 (2.39)	1250 3.45 (2.57)
3250 (1535)	***550 0.65 (0.48)***	***640 0.90 (0.67)***	715 1.10 (0.82)	790 1.35 (1.01)	855 1.60 (1.19)	915 1.80 (1.34)	970 2.05 (1.53)	1025 2.35 (1.75)	1075 2.60 (1.94)	1125 2.85 (2.13)	1170 3.15 (2.35)	1215 3.40 (2.54)	1260 3.70 (2.76)
3500 (1650)	***580 0.80 (0.60)***	***665 1.05 (0.78)***	740 1.25 (0.93)	810 1.50 (1.12)	870 1.75 (1.31)	930 2.00 (1.49)	985 2.25 (1.68)	1040 2.55 (1.90)	1090 2.85 (2.13)	1135 3.10 (2.31)	1185 3.40 (2.54)	1230 3.70 (2.76)	1270 4.00 (2.98)
3750 (1770)	***605 0.95 (0.71)***	690 1.20 (0.90)	760 1.45 (1.08)	830 1.70 (1.27)	890 1.95 (1.45)	950 2.25 (1.68)	1005 2.50 (1.87)	1055 2.80 (2.09)	1105 3.10 (2.31)	1150 3.35 (2.50)	1195 3.65 (2.72)	1240 3.95 (2.95)	1285 4.30 (3.21)
4000 (1890)	***635 1.10 (0.82)***	715 1.40 (1.04)	785 1.65 (1.23)	850 1.90 (1.42)	910 2.20 (1.64)	965 2.45 (1.83)	1020 2.75 (2.05)	1070 3.05 (2.28)	1120 3.35 (2.50)	1165 3.65 (2.72)	1210 3.95 (2.95)	1255 4.30 (3.21)	1295 4.60 (3.43)
4250 (2005)	***665 1.30 (0.97)***	740 1.60 (1.19)	810 1.85 (1.38)	870 2.15 (1.60)	930 2.45 (1.83)	985 2.75 (2.05)	1040 3.05 (2.28)	1090 3.35 (2.50)	1135 3.65 (2.72)	1185 4.00 (2.98)	1225 4.30 (3.21)	1270 4.65 (3.47)	1310 4.95 (3.69)
4500 (2125)	695 1.50 (1.12)	770 1.80 (1.34)	835 2.10 (1.57)	895 2.40 (1.79)	955 2.70 (2.01)	1005 3.00 (2.24)	1060 3.35 (2.50)	1105 3.65 (2.72)	1155 4.00 (2.98)	1200 4.30 (3.21)	1245 4.65 (3.47)	1285 5.00 (3.73)	1325 5.30 (3.95)
4750 (2240)	725 1.75 (1.31)	795 2.05 (1.53)	860 2.40 (1.79)	920 2.70 (2.01)	975 3.00 (2.24)	1030 3.35 (2.50)	1080 3.65 (2.72)	1125 3.95 (2.95)	1175 4.35 (3.25)	1215 4.65 (3.47)	1260 5.00 (3.73)	1300 5.35 (3.99)	1340 5.70 (4.25)
5000 (2360)	760 2.05 (1.53)	825 2.35 (1.75)	885 2.65 (1.98)	945 3.00 (2.24)	1000 3.35 (2.50)	1050 3.65 (2.72)	1100 4.00 (2.98)	1145 4.35 (3.25)	1190 4.70 (3.51)	1235 5.05 (3.77)	1280 5.45 (4.07)	----	----
5250 (2475)	790 2.30 (1.72)	855 2.65 (1.98)	910 2.95 (2.20)	970 3.35 (2.50)	1020 3.65 (2.72)	1070 4.00 (2.98)	1120 4.35 (3.25)	1165 4.70 (3.51)	1210 5.10 (3.80)	1255 5.45 (4.07)	----	----	----
5500 (2595)	820 2.60 (1.94)	880 2.95 (2.20)	940 3.30 (2.46)	995 3.70 (2.76)	1045 4.05 (3.02)	1095 4.40 (3.28)	1145 4.80 (3.58)	1190 5.15 (3.84)	1230 5.50 (4.10)	----	----	----	----
5750 (2715)	850 2.95 (2.20)	910 3.30 (2.46)	965 3.70 (2.76)	1020 4.05 (3.02)	1070 4.45 (3.32)	1120 4.80 (3.58)	1165 5.20 (3.88)	1210 5.60 (4.18)	----	----	----	----	----
6000 (2830)	885 3.35 (2.50)	940 3.70 (2.76)	995 4.10 (3.06)	1045 4.45 (3.32)	1095 4.85 (3.62)	1145 5.25 (3.92)	1190 5.65 (4.21)	----	----	----	----	----	----

BLOWER DATA 080, 100, 102, 120, 150

FACTORY INSTALLED OPTIONS/FIELD INSTALLED ACCESSORY AIR RESISTANCE

Air Volume		Wet Indoor Coil						Humiditrol Condenser Reheat Coil 090H, 102H, 120H, 150S		Electric Heat				Economizer			
		088, 100		090, 102		120, 150				088, 100		090, 102, 120, 150		088, 100		090, 102, 120, 150	
cfm	L/s	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa
2000	945	.06	15	- - -	- - -	- - -	- - -	- - -	- - -	0.13	32	- - -	- - -	.03	7	- - -	- - -
2200	140	.07	17	- - -	- - -	- - -	- - -	- - -	- - -	0.15	38	- - -	- - -	.04	10	- - -	- - -
2250	1060	- - -	- - -	.06	15	.10	25	.02	5	- - -	- - -	.01	2	- - -	- - -	.035	9
2400	1135	.09	22	- - -	- - -	- - -	- - -	- - -	- - -	0.16	40	- - -	- - -	.05	12	- - -	- - -
2500	1180	- - -	- - -	.08	20	.12	30	.03	7	- - -	- - -	.01	2	- - -	- - -	.04	10
2600	1230	.10	25	- - -	- - -	- - -	- - -	- - -	- - -	0.17	42	- - -	- - -	.05	12	- - -	- - -
2750	1325	- - -	- - -	.09	22	.14	35	.03	7	- - -	- - -	.01	2	.06	15	.045	11
2800	1300	.11	27	- - -	- - -	- - -	- - -	- - -	- - -	0.18	46	- - -	- - -	- - -	- - -	- - -	- - -
3000	1420	.12	30	.10	25	.16	40	.03	7	0.20	50	.02	5	.06	15	.05	12
3200	1510	.14	35	- - -	- - -	- - -	- - -	- - -	- - -	0.24	60	- - -	- - -	.07	17	- - -	- - -
3250	1535	- - -	- - -	.11	27	.19	47	.04	10	- - -	- - -	.02	5	- - -	- - -	.06	15
3400	1605	.15	37	- - -	- - -	- - -	- - -	- - -	- - -	0.26	65	- - -	- - -	.08	20	- - -	- - -
3500	1650	- - -	- - -	.13	32	.21	52	.04	10	- - -	- - -	.03	7	- - -	- - -	.07	17
3600	1700	.17	42	- - -	- - -	- - -	- - -	- - -	- - -	0.30	75	- - -	- - -	.09	22	- - -	- - -
3750	1770	- - -	- - -	.14	35	.23	57	.05	12	- - -	- - -	.03	7	- - -	- - -	.075	19
3800	1795	.18	45	- - -	- - -	- - -	- - -	- - -	- - -	0.33	82	- - -	- - -	.10	25	- - -	- - -
4000	1890	.19	47	.16	40	.26	65	.05	12	0.35	87	.04	10	.11	27	.08	20
4250	2005	- - -	- - -	.17	42	.28	70	.06	15	- - -	- - -	.04	10	- - -	- - -	.09	22
4500	2125	- - -	- - -	.18	45	.31	77	.07	17	- - -	- - -	.05	12	- - -	- - -	.10	25
4750	2240	- - -	- - -	.20	50	.33	82	.07	17	- - -	- - -	.05	12	- - -	- - -	.11	27
5000	2360	- - -	- - -	.22	55	.36	90	.08	20	- - -	- - -	.06	15	- - -	- - -	.12	30
5250	2475	- - -	- - -	.24	60	.39	97	.08	20	- - -	- - -	.06	15	- - -	- - -	.13	32
5500	2595	- - -	- - -	.26	65	.42	104	.09	22	- - -	- - -	.07	17	- - -	- - -	.14	35
5750	2715	- - -	- - -	.28	70	.45	112	.10	25	- - -	- - -	.07	17	- - -	- - -	.15	37
6000	2830	- - -	- - -	.30	75	.48	119	.10	25	- - -	- - -	.08	20	- - -	- - -	.16	40

CEILING DIFFUSER AIR RESISTANCE

Unit Size	Air Volume		RTD11 Step-Down Diffuser						FD11 Flush Diffuser	
			2 Ends Open		1 Side, 2 Ends Open		All Ends & Sides Open			
	cfm	L/s	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa	in. w.g.	Pa
088 & 100 Models	2400	1135	0.21	52	0.18	45	0.15	37	0.14	35
	2600	1225	0.24	60	0.21	52	0.18	45	0.17	42
	2800	1320	0.27	67	0.24	60	0.21	52	0.20	50
	3000	1415	0.32	80	0.29	72	0.25	62	0.25	62
	3200	1510	0.41	102	0.37	92	0.32	80	0.31	77
	3400	1605	0.50	124	0.45	112	0.39	97	0.37	92
	3600	1700	0.61	152	0.54	134	0.48	119	0.44	109
	3800	1795	0.73	182	0.63	157	0.57	142	0.51	127
090, 102 & 120 Models	3600	1700	0.36	90	0.28	70	0.23	57	0.15	37
	3800	1795	0.40	99	0.32	80	0.26	65	0.18	45
	4000	1890	0.44	109	0.36	90	0.29	72	0.21	52
	4200	1980	0.49	122	0.40	99	0.33	82	0.24	60
	4400	2075	0.54	134	0.44	109	0.37	92	0.27	67
	4600	2170	0.60	149	0.49	122	0.42	104	0.31	77
	4800	2265	0.65	162	0.53	132	0.46	114	0.35	87
	5000	2360	0.69	172	0.58	144	0.50	124	0.39	97
	5200	2455	0.75	186	0.62	154	0.54	134	0.43	107
150 Models	4200	1980	0.22	55	0.19	47	0.16	40	0.10	25
	4400	2075	0.28	70	0.24	60	0.20	50	0.12	30
	4600	2170	0.34	85	0.29	72	0.24	60	0.15	37
	4800	2265	0.40	99	0.34	85	0.29	72	0.19	47
	5000	2360	0.46	114	0.39	97	0.34	85	0.23	57
	5200	2455	0.52	129	0.44	109	0.39	97	0.27	67
	5400	2550	0.58	144	0.49	122	0.43	107	0.31	77
	5600	2645	0.64	159	0.54	134	0.47	117	0.35	87
	5800	2735	0.70	174	0.59	147	0.51	127	0.39	97

CEILING DIFFUSER AIR THROW DATA						
Model No.	Air Volume		*Effective Throw Range			
			RTD11 Step-Down		FD11 Flush	
	cfm	L/s	ft.	m	ft.	m
088 & 100 Models	3000	1415	27 - 33	8 - 10	25 - 30	8 - 9
	3375	1595	30 - 37	9 - 11	28 - 34	9 - 10
	3750	1770	34 - 41	10 - 12	31 - 38	9 - 12

*Throw is the horizontal or vertical distance an airstream travels on leaving the outlet or diffuser before the maximum velocity is reduced to 50 ft. (15 m) per minute. Four sides open.

CEILING DIFFUSER AIR THROW DATA						
Model No.	Air Volume		*Effective Throw Range			
			RTD11 Step-Down		FD11 Flush	
	cfm	L/s	ft.	m	ft.	m
102 & 120 Models	4400	2075	34 - 42	10 - 13	32 - 40	10 - 12
	4950	2335	38 - 47	12 - 14	36 - 45	11 - 14
	5500	2595	43 - 52	13 - 16	40 - 50	12 - 15
150 Models	4200	1980	39 - 46	12 - 14	40 - 48	12 - 15
	5000	2360	41 - 50	12 - 15	43 - 52	13 - 16
	5800	2735	43 - 52	13 - 16	45 - 54	14 - 16

*Throw is the horizontal or vertical distance an airstream travels on leaving the outlet or diffuser before the maximum velocity is reduced to 50 ft. (15 m) per minute. Four sides open.

POWER EXHAUST FANS PERFORMANCE			
Return Air System Static Pressure		Air Volume Exhausted	
in. w.g.	Pa	cfm	L/s
0	0	4200	1980
0.05	12	3970	1875
0.10	25	3750	1770
0.15	37	3520	1660
0.20	50	3300	1560
0.25	62	3080	1455
0.30	75	2860	1350
0.35	87	2640	1245

FACTORY INSTALLED DRIVE KIT SPECIFICATIONS LGA/LCA090, 102, 120, 150									
Motor Outputs				RPM Range					
Nominal hp	Maximum hp	Nominal kW	Maximum kW	Drive 1	Drive 2	Drive 3	Drive 4	Drive 5	Drive 6
2	2.3	1.5	1.7	680 - 940	- - - -	850 - 1130	- - - -	- - - -	- - - -
3 Standard	3.45	2.2	2.6	680 - 940	- - - -	850 - 1130	- - - -	1105 - 1410	- - - -
3 High Efficiency	3.45	2.2	2.6	- - - -	680 - 895	- - - -	895 - 1120	- - - -	1110 - 1395
5	5.75	3.7	4.3	- - - -	- - - -	- - - -	895 - 1120	- - - -	1110 - 1395

NOTE — Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

FACTORY INSTALLED DRIVE KIT SPECIFICATIONS LGA/LCA088 & 100							
Motor Outputs				RPM Range			
Nominal hp	Maximum hp	Nominal kW	Maximum kW	Drive 1	Drive 2	Drive 3	Drive 4
2 Standard	2.30	1.5	1.7	845 - 1130	- - - -	1015 - 1300	- - - -
2 High Efficiency	2.30	1.5	1.7	845 - 1130	- - - -	1015 - 1300	- - - -
3 Standard	3.45	2.2	2.6	845 - 1130	- - - -	1015 - 1300	- - - -
3 High Efficiency	3.45	2.2	2.6	- - - -	845 - 1130	- - - -	1015 - 1300

*Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished by Lennox are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

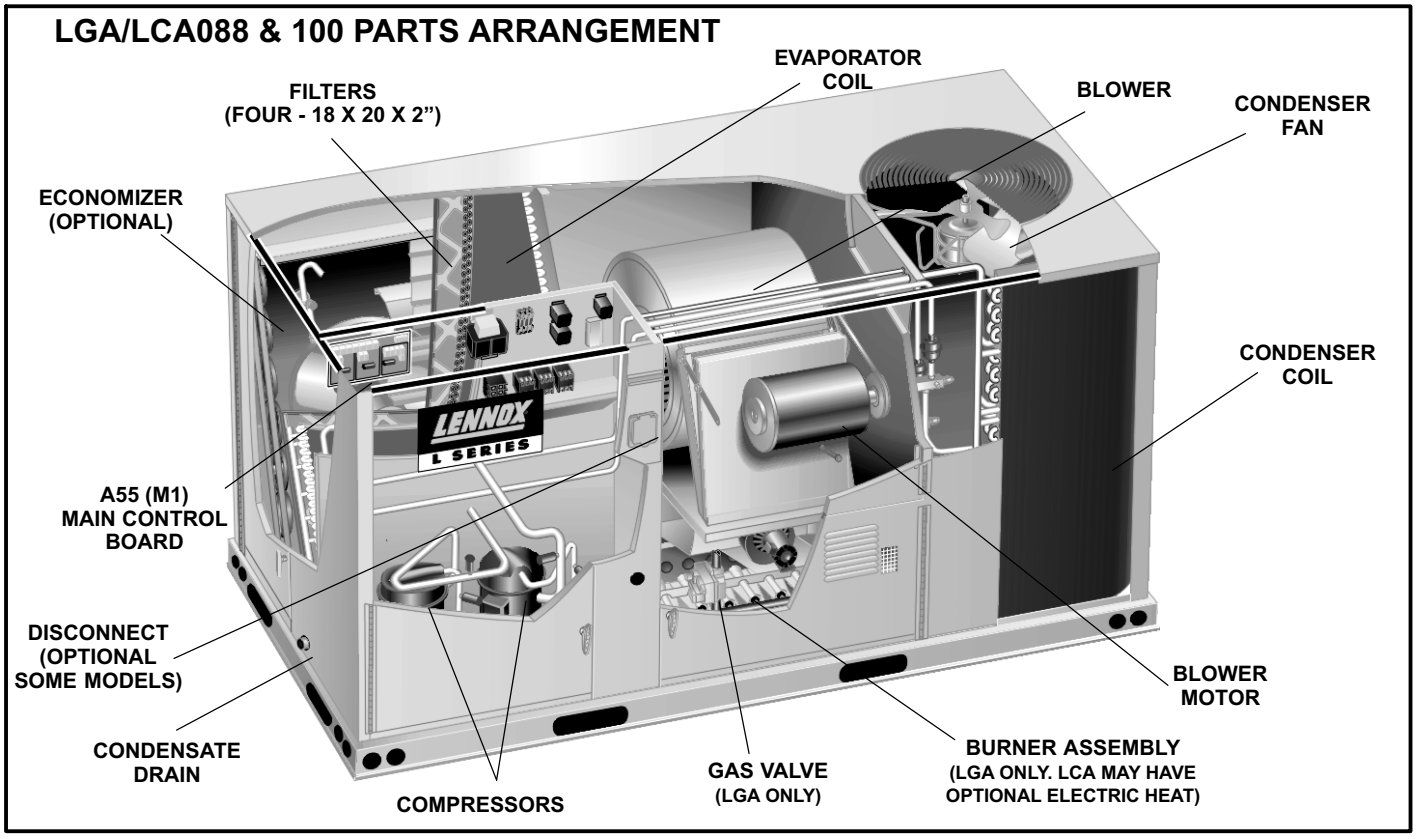

FIGURE 1

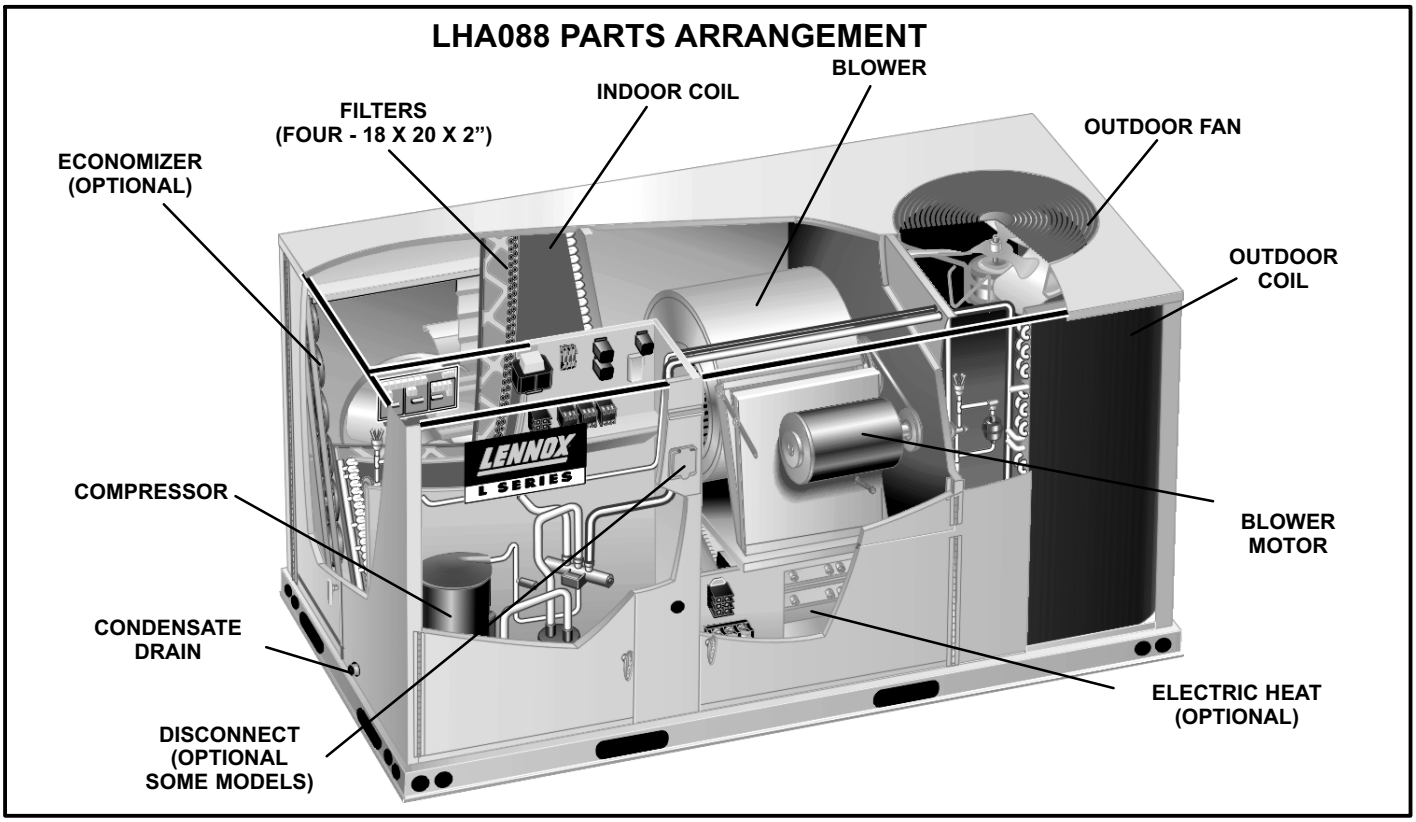

FIGURE 2

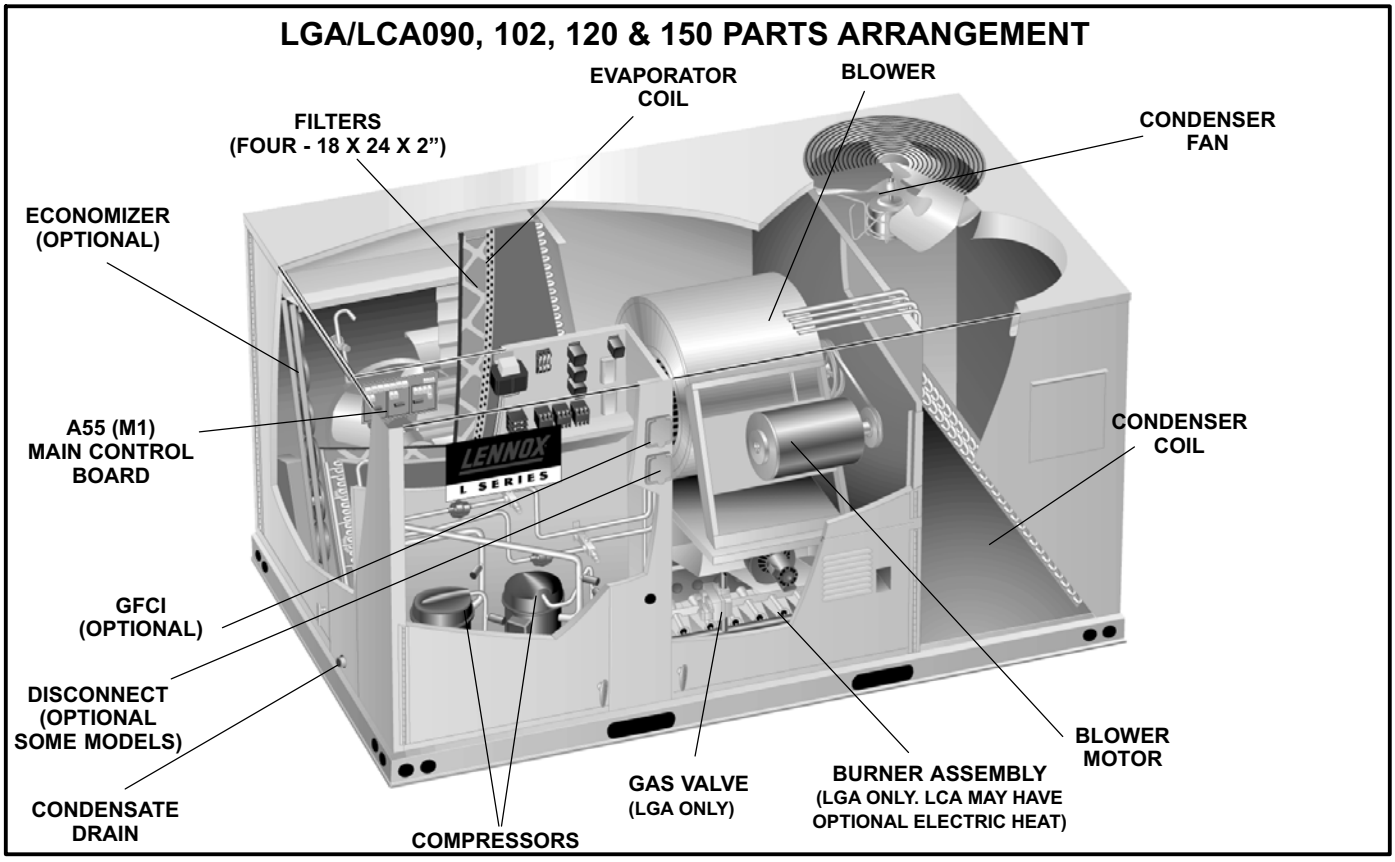

FIGURE 3

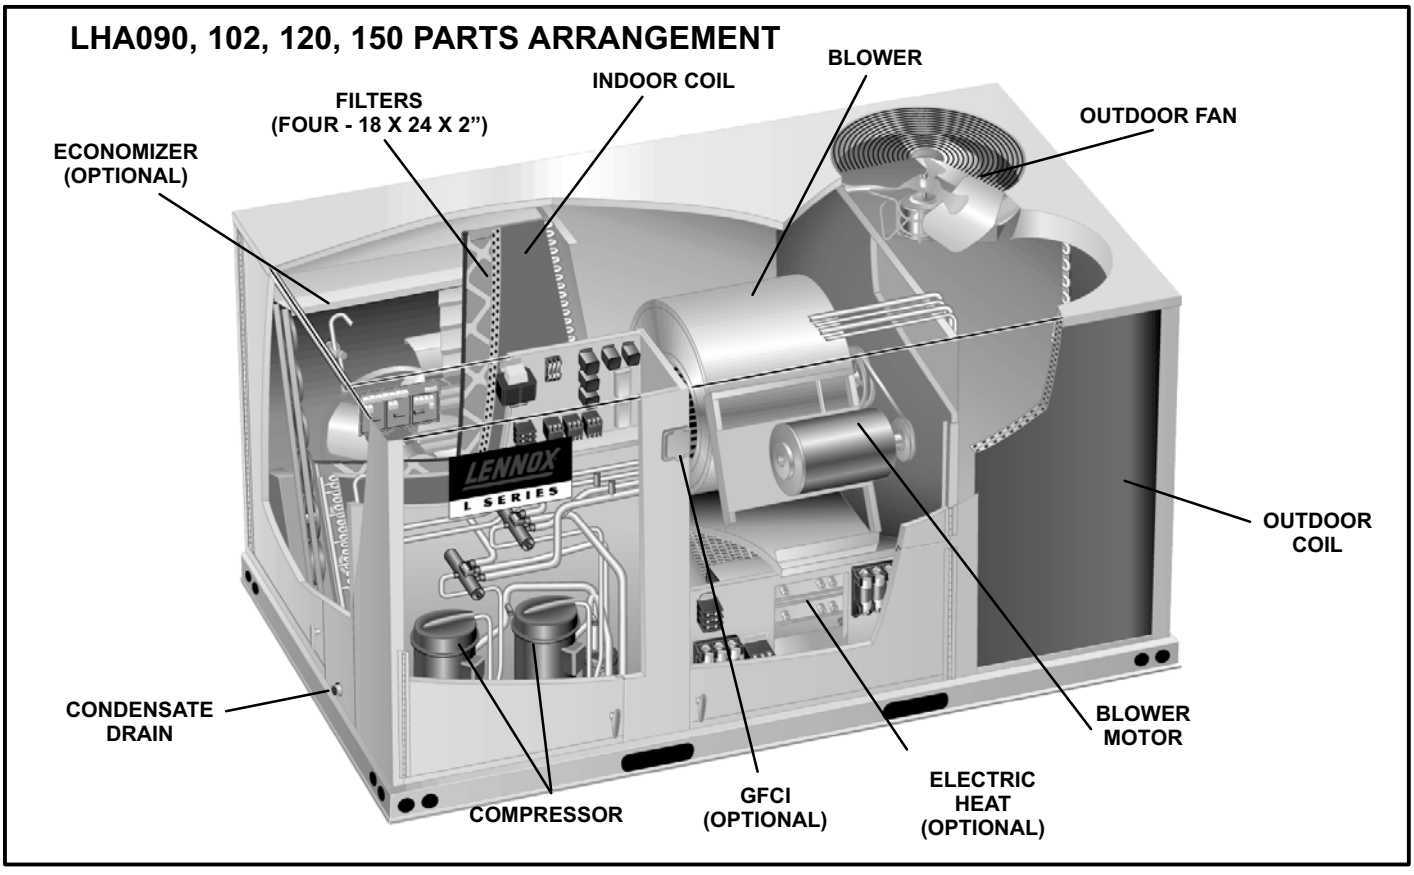

FIGURE 4

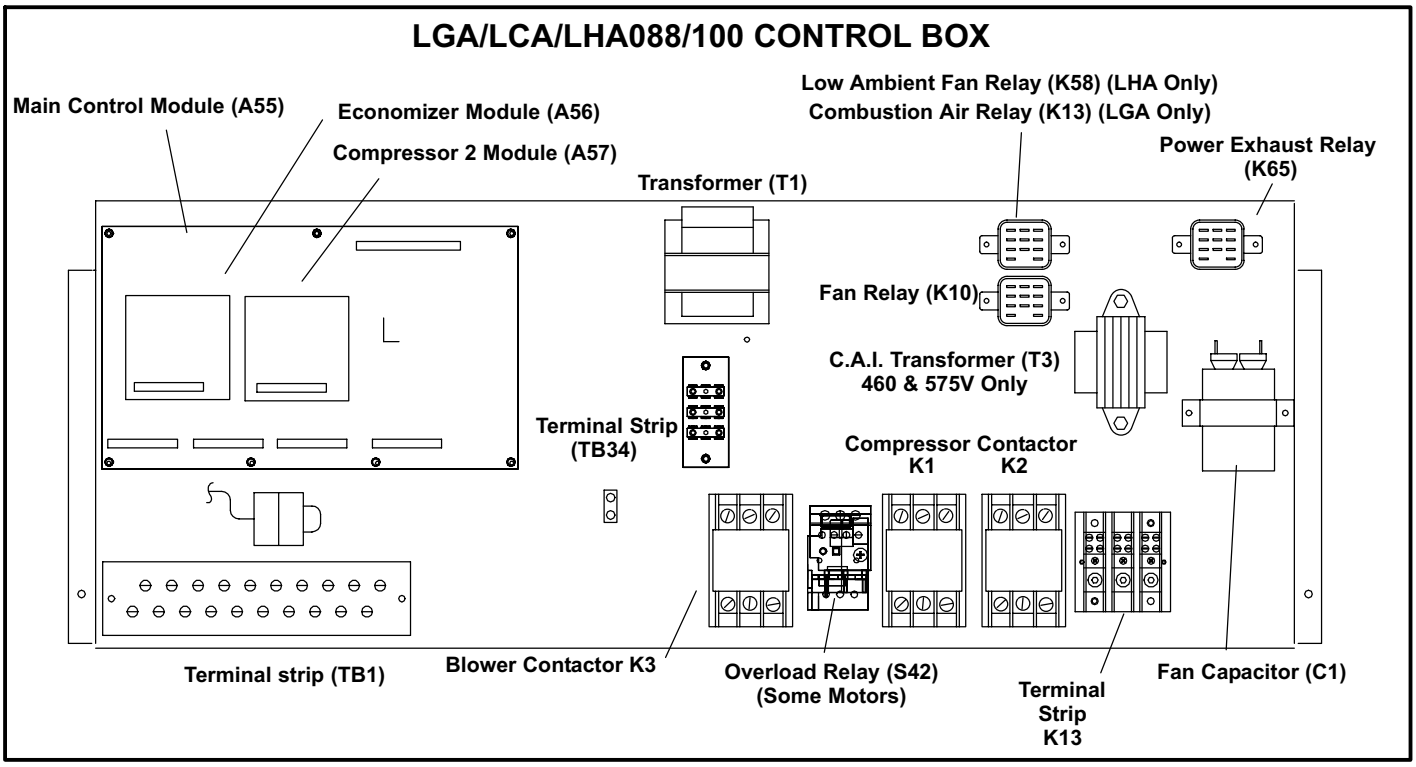

FIGURE 5

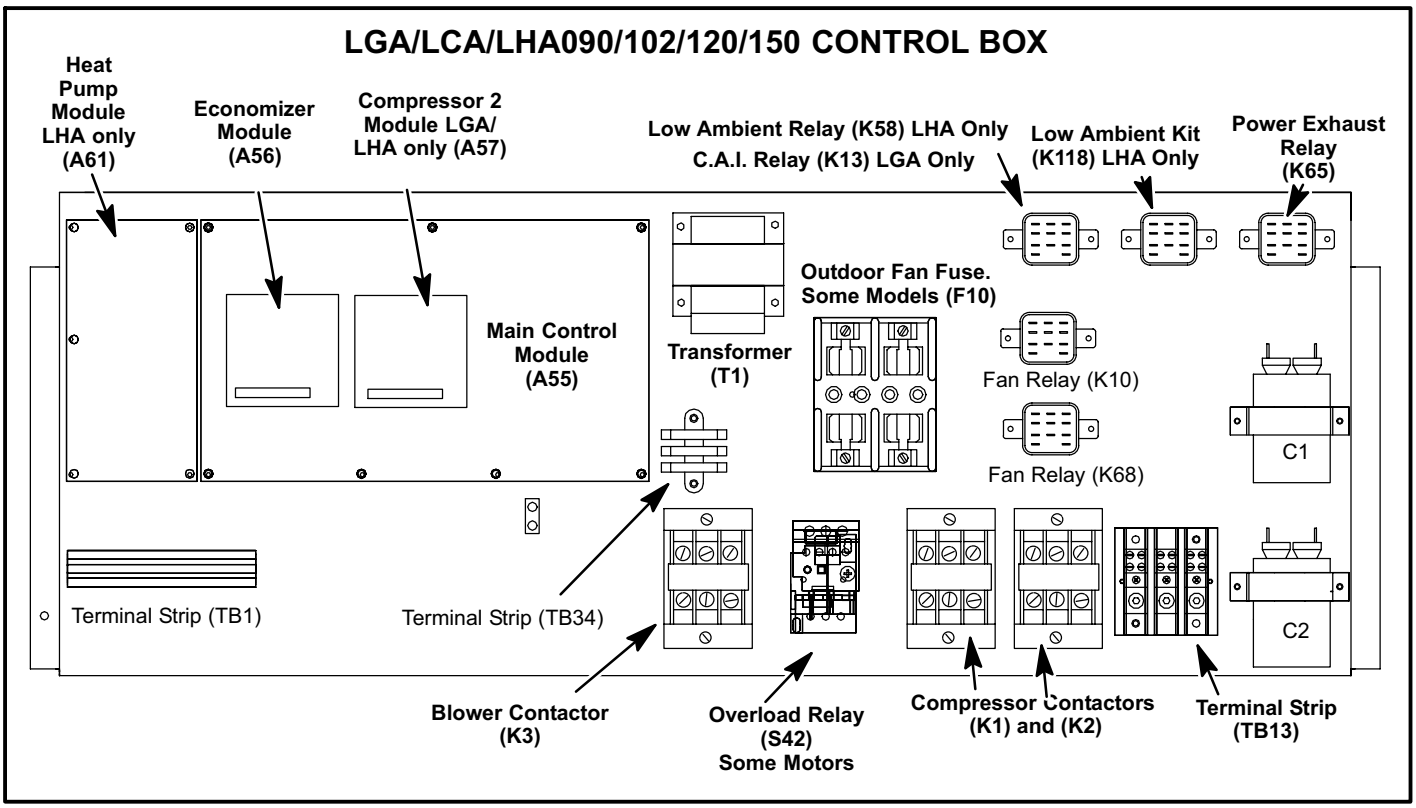

FIGURE 6

I-UNIT COMPONENTS

ELECTROSTATIC DISCHARGE (ESD)
Precautions and Procedures

⚠ CAUTION

Electrostatic discharge can affect electronic components. Take precautions during unit installation and service to protect the unit's electronic controls. Precautions will help to avoid control exposure to electrostatic discharge by putting the unit, the control and the technician at the same electrostatic potential. Neutralize electrostatic charge by touching hand and all tools on an unpainted unit surface before performing any service procedure.

LGA / LCA / LHA 7.5, 8.5, 10 and 12.5 ton (26.3, 35.2 and 44 kW) units are configure to order units (CTO). The LGA/LCA/LHA unit parts arrangement are shown in figures 1 through 4. All L1, L2, and L3 wiring is color coded; L1 is red, L2 is yellow, and L3 is blue. See wiring diagrams in the back of this manual for complete call out of components per LGA/LCA/LHA unit.

A-Control Box Components

LGA/LCA/LHA control box components are shown in figures 5 and 6. The control box is located in the upper portion of the compressor compartment.

1-Disconnect Switch S48 (Optional all units)

LGA/LCA/LHA units may be equipped with an optional disconnect switch S48. Other factory or field installed optional circuit breakers may be used, such as CB10. S48 and CB10 are toggle switches, which can be used by the service technician to disconnect power to the unit.

2-Control Transformer T1 (all units)

All LGA/LCA/LHA series units use a single line voltage to 24VAC transformer mounted in the control box. Transformer supplies power to control circuits in the unit. The transformer is rated at 70VA and is protected by a 3.5 amp circuit breaker (CB8). The 208/230 (Y) voltage transformers use two primary voltage taps as shown in figure 7, while 460 (G) and 575 (J) voltage transformers use a single primary voltage tap.

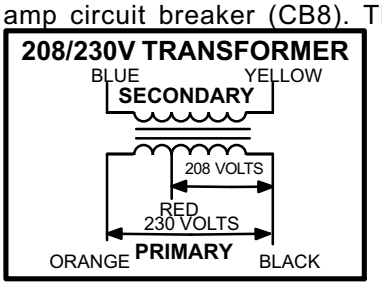

FIGURE 7

3-C. A. I. Transformers T3 (LGA 575V units)

All LGA 575 (J) voltage units use one auto voltage to 230VAC transformer mounted in the control box. The transformer has an output rating of 0.5A. T3 transformer supplies 230 VAC power to combustion air inducer motor (B6).

4-Terminal Strips TB1, TB13, TB34 (all units)

TB1 terminal strip distributes 24V power and common from the thermostat to the control box components. TB13 terminal strip distributes line voltage power to the line voltage items in the unit. TB34 terminal strip distributes 24V power from T1 to the control box components.

5-Unit Fuse Block & Fuses F4 (LHA & LCA units)

Three line voltage fuses F4 provide short circuit and ground fault protection to all cooling components in the LHA and LCA units with electric heat. The fuses are rated in accordance with the amperage of the cooling components.

6-Outdoor Fan Capacitor C1 and C2

Fan capacitors C1 and C2 are 370V/10MF capacitors used to assist in the start up of condenser fan motors B4 and B5. Capacitor ratings will be on outdoor fan motor nameplate.

7-Compressor Contactor K1 & K2

All compressor contactors are three-pole-double-break contactors with a 24VAC coil. In all LGA/LCA/LHA units, K1 (energized by A55) and K2 (energized by A57 or A61),energize compressors B1 and B2 respectively in response to first or second stage cooling demands.

8-Blower Contactor K3

Blower contactor K3, used in all units, is a three-pole-double-break contactor with a 24VAC coil used to energize the indoor blower motor B3 in response to blower demand. K3 is energized by main control panel (A55).

9-Outdoor Fan Relay K10 and K68

Outdoor fan relay K10 and K68 are DPDT relays with a 24VAC coil. K10 (energized by A55) and K68 (energized by A57 or A61) , energizes condenser fan motors B4 and B5 in response to Y1 demand. In all LHA090/150 units, K10 energizes condenser fan B4 in response to Y1 demand and K68 energizes B5 in response to Y2 demand.

10-Combustion Air Inducer Relay K13 (LGA units)

Combustion air inducer relay K13, used in all LGA units, is a DPDT relay with a 24VAC coil. K13 is energized by the main control module A55 after a first stage heating demand from the thermostat. K13 remains energized throughout the heating demand. When energized, K13 N.O. contacts close to energize the combustion air inducer and begin first stage heat. Prove switch S18, located in the gas heat compartment, closes as combustion air static pressure falls to "prove" combustion air inducer operation. When S18 closes, the ignition control and gas valve is energized to begin first stage heat.

11-Low Ambient Bypass Fan Relay K58 and K118 (LHA units)

Low ambient bypass relay K58 and K118, are N.C. DPDT relays with a 24VAC coil. K58 is wired in parallel with the compressor reversing valve (L1) and K118 is wired in parallel with compressor reversing valve (L2). Both are energized by A55. When L1 is energized (stage one) in the cooling cycle, K58 is also energized, opening K58-1. Therefore, K58-1 is always closed during heating demand bypassing S11. This allows the fan to operate during heating demand and to cycle during cooling demand. When L2 is energized (stage two) in the cooling cycle, K118 is also energized, opening K118-1. Therefore, K118-1 is always closed during heating demand bypassing S84. This allows the fan to operate during heating demand and to cycle during cooling demand.

12-Power Exhaust Relay K65 (PED units)

Power exhaust relay K65 is a N.O. DPDT relay with a 24VAC coil. K65 is used in all LGA/LCA/LHA units equipped with the optional power exhaust dampers. K65 is energized by the economizer control panel (A56), after the economizer dampers reach 50% open (adjustable in ECTO). When K65 closes, the exhaust fan B10 is energized.

13-Blower Motor Overload Relay S42 (units with high efficiency motors and 50hz models)

The blower motor overload relay is used in all L series units equipped with high efficiency motors and all 50hz motors. The relay (S42) is connected in line with the blower motor to monitor the current flow to the motor. When the relay senses an overload condition, a set of normally closed contacts open to de-energize pin #9 in plug P110 of the A55 main control module. A55 de-energizes all outputs. The overload relay has an adjustable setting and is set per the nameplate current of the motor. All units are equipped with a relay manufactured by Siemens figure 8 or Telemecanique figure 9 .

INTEGRATED MODULAR CONTROL BOARDS

The Integrated Modular Control (IMC) is a series of control boards which integrates most control functions required for the LGA/LCA/LHA units. The control boards are located in the upper left hand corner of the control box. The control includes complete unit diagnostics with permanent code storage, field programmable control parameters and control options, on-site testing, and serial communications. Three different printed circuit boards (see figure 10) make-up the modular configurations for the LGA/LCA/LHA units. See table 1 for a list of control panels used for each unit. For further information refer to Integrated Modular Control Guide sent with each unit.

TABLE 1

UNIT	CONTROL PANELS		
	A55	A57	A56
LGA	X	X	OPT
LCA	X	X	OPT
LHA	X	A61 (090, 102, 120, 150)	OPT

14-Main Control Module A55 (all units)

The main control module A55 is the heart of the system. It controls one compressor, one two-stage gas valve, one bank of electric heat, one outdoor fan, and one blower. A55 includes the thermostat inputs, serial communications ports, diagnostic code display, control pushbutton, system configuration dip switches, and four expansion ports. A diagnostic code list is located on the back side of the access panel.

15-Compressor 2 Control Module A57 (LGA & LCA units)

The compressor 2 control module A57 controls one additional compressor stage for the LGA/LCA units. A57 includes all inputs and outputs required for compressor and fan control, compressor stages, diagnostics, and low ambient control.

16-Economizer Control Module A56 (Economizer only)

The economizer control module A56 controls the economizer. A56 has four different cooling modes, sensible temperature, outdoor enthalpy, differential enthalpy, and global control.

17-Heat Pump Control Module A61 (LHA only)

The heat pump control module A61 is used to control the second compressor stage on the LHA units. A61 includes all inputs and outputs required for compressor and fan control, compressor stage diagnostics and low ambient control.

SIEMENS OVERLOAD RELAY

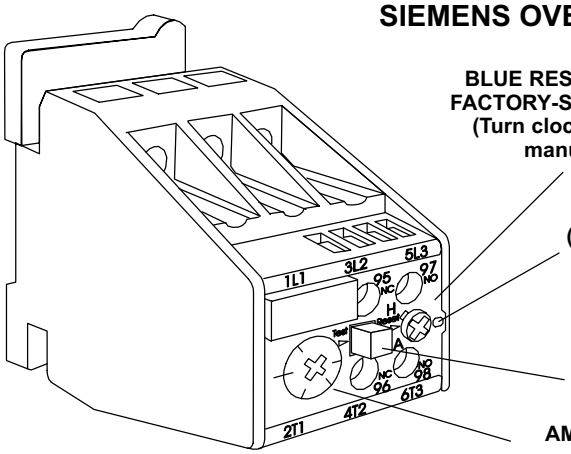

BLUE RESET BUTTON IN FACTORY-SET AUTO MODE (Turn clockwise to H for manual reset)

GREEN TRIP INDICATOR (Flush with surface -- not tripped; Above surface -- tripped)

RED TEST BUTTON

AMP ADJUSTMENT DIAL

Adjust relay amp setting according to value given on the blower motor nameplate. Proper relay amp setting equals motor nameplate FLA X service factor of 1.15 X .95.
Use small slotted screwdriver to adjust control mode from automatic reset (A) to manual reset (H).
Control must be in the manual reset mode (H) to perform a test. Press the red test button. Green trip indicator should pop out. Press the blue reset screw to reset the relay.

FIGURE 8

TELEMECANIQUE OVERLOAD RELAY

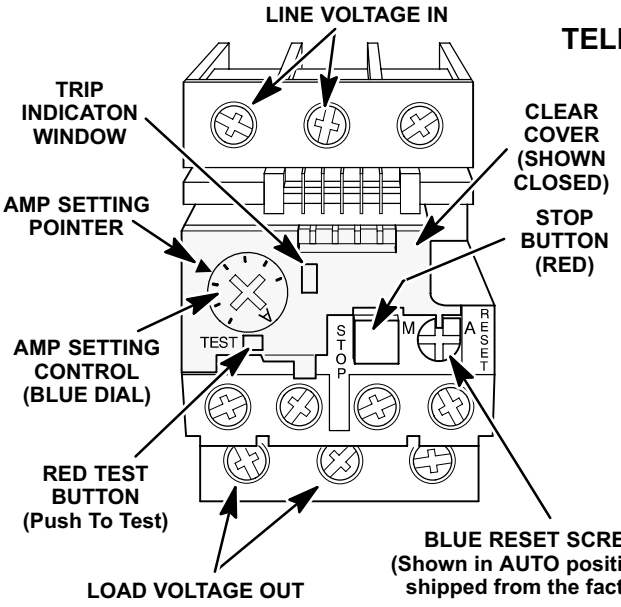

DETAIL SHOWING RESET BUTTON ADJUSTED TO MANUAL POSITION
Lift clear cover and turn adjustment screw counterclockwise. Reset screw will pop out when pointer is in M (manual position). Close cover to lock reset screw into position.

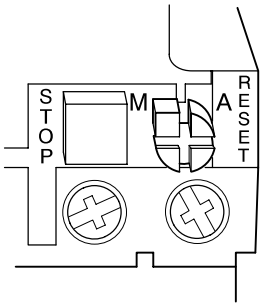

Lift clear cover to adjust relay amp setting according to value given on the blower motor nameplate. Proper relay amp setting equals motor nameplate FLA X service factor of 1.15 X .95.
Cover must also be lifted to adjust control mode from automatic reset to manual reset (see detail above) and to test the control.
Control must be in the manual reset mode to perform a test. Use a pointed object to press the small red test button. A yellow marker should appear in the trip indication window to the right of the amp setting control. Press the blue reset screw to reset the relay.
The red STOP button opens the normally closed contacts which power the blower motor. This button stops blower motor operation as long as it is pressed in.

FIGURE 9

IMC BOARD INPUTS AND OUTPUTS

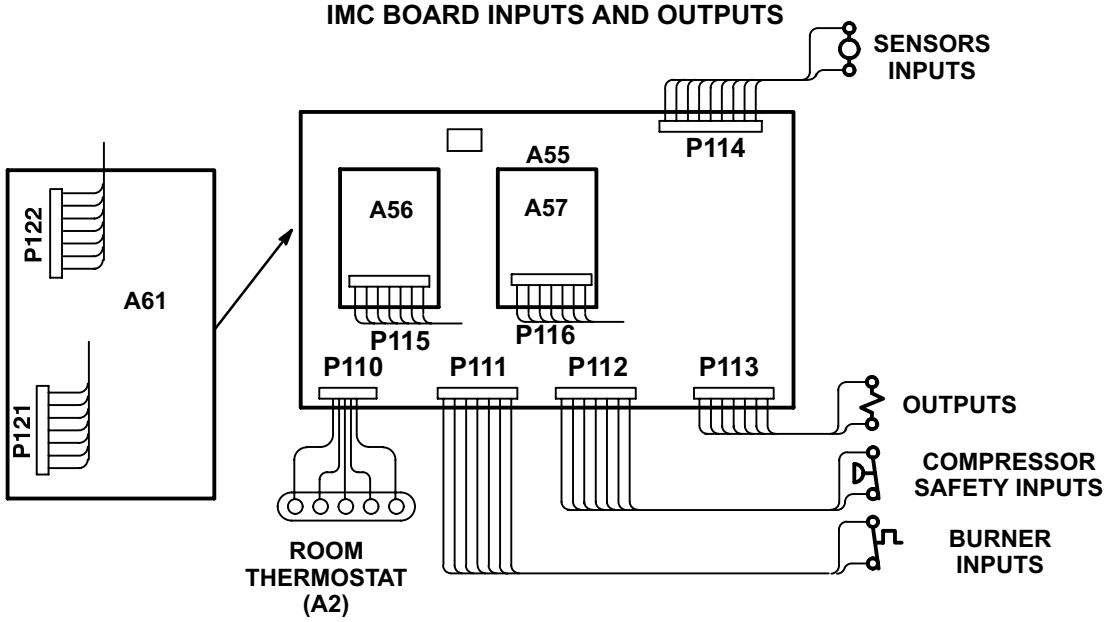

TB1 connects to P110. Room thermostat connects to TB1.

IMC AND ADD-ON BOARD LOCATION AND OPERATION

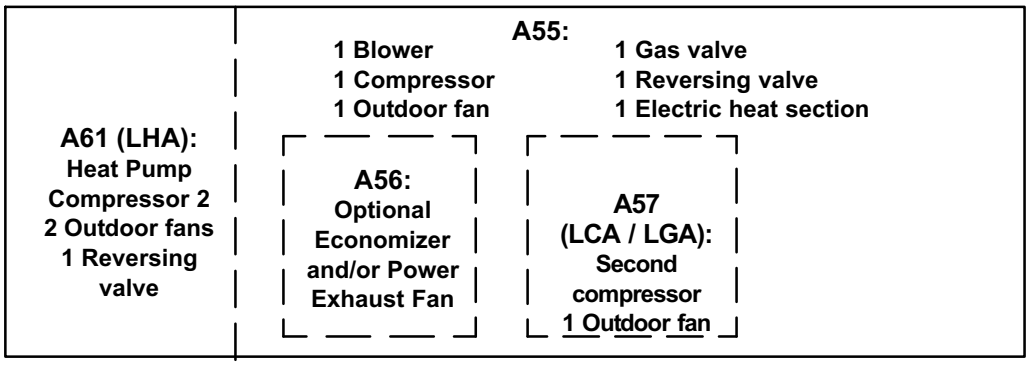

FIGURE 10

LGA/LCA088 & 100 COMPRESSOR DETAIL

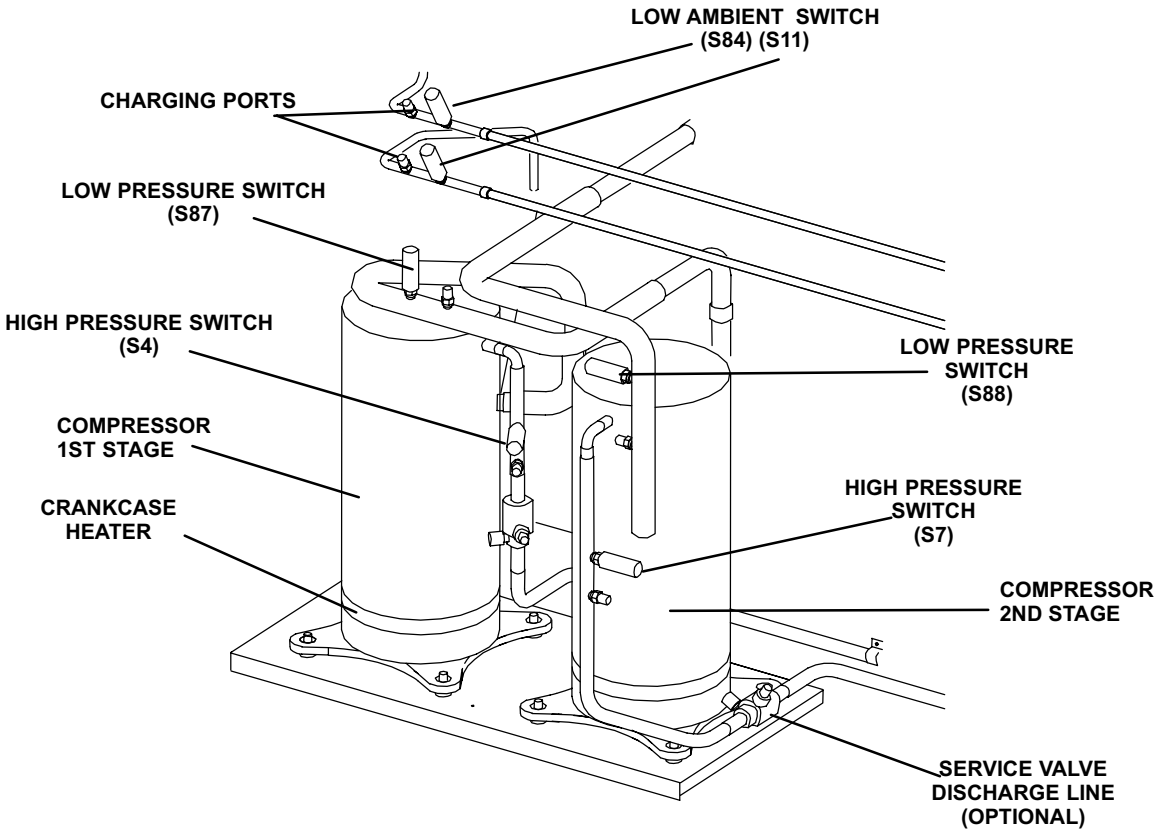

LHA088 COMPRESSOR DETAIL

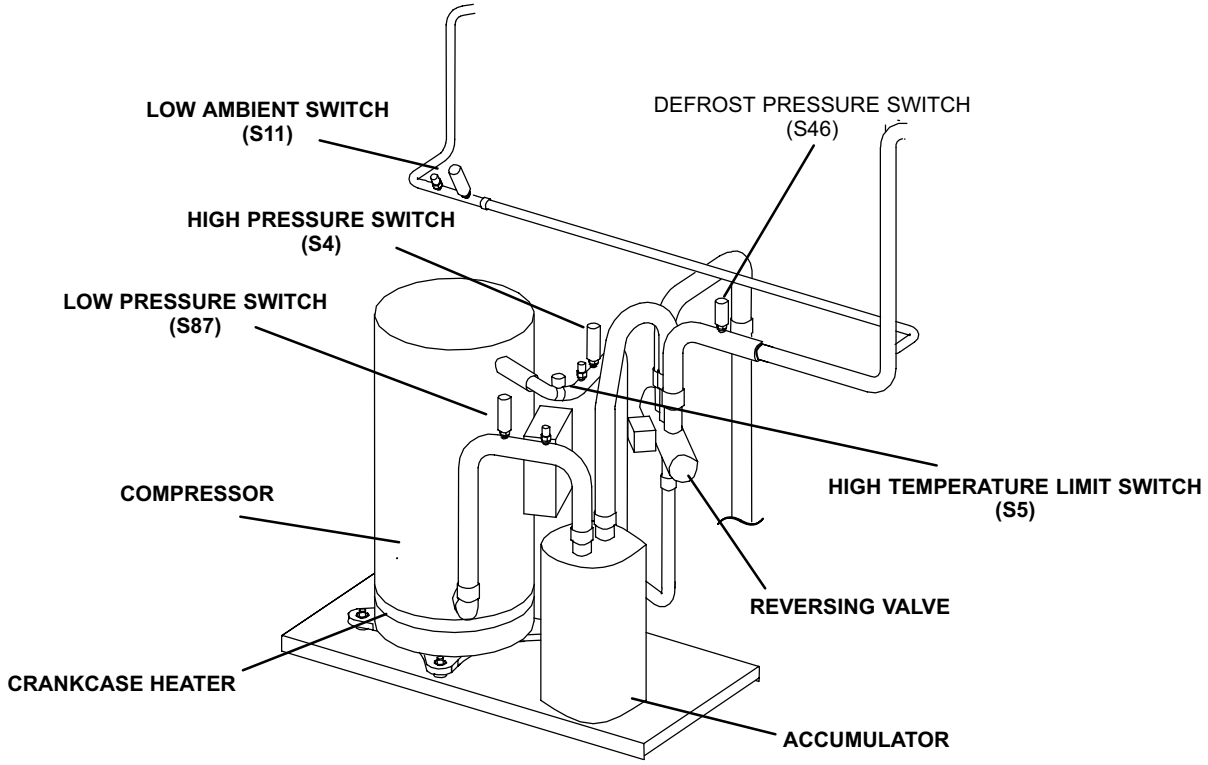

FIGURE 11

LGA/LCA PLUMBING COMPONENTS
LGA102 & 120 Standard Efficiency Shown

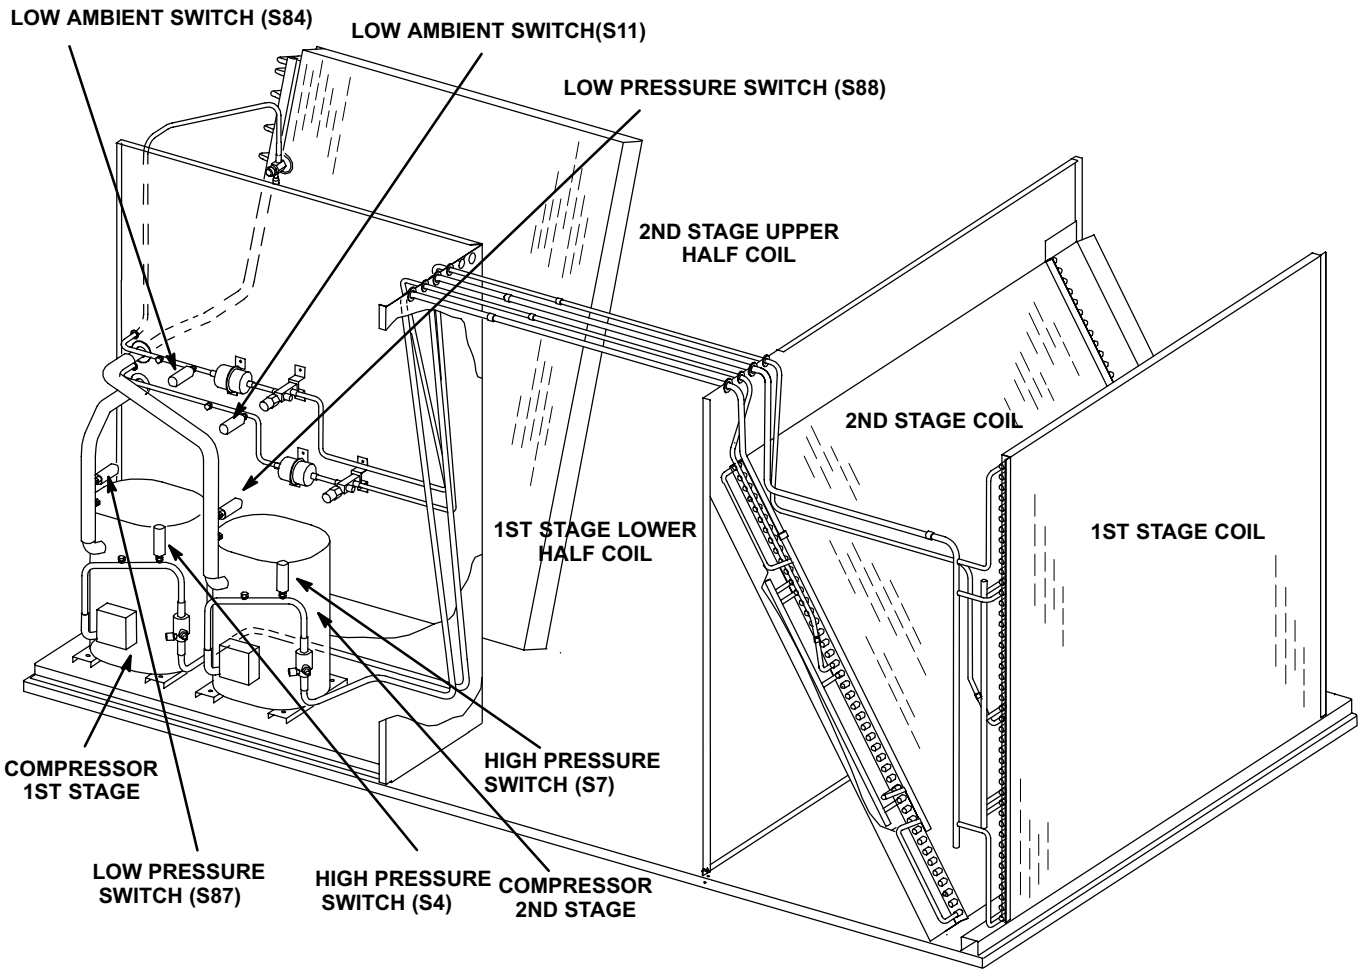

LGA090H, 102H, 120H & 150H High Efficiency
150S Standard Efficiency Shown

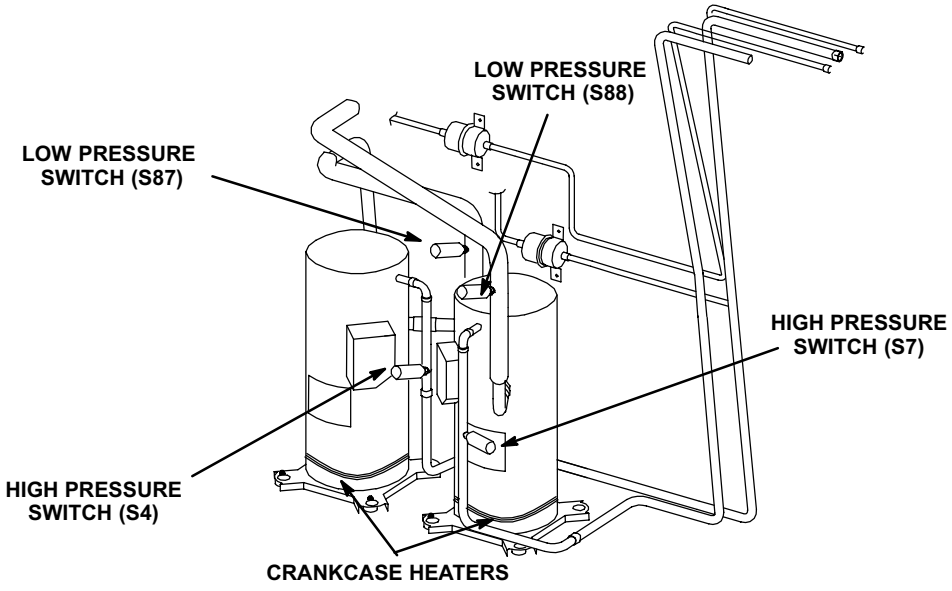

FIGURE 12

LHA090, 102, 120, 150 PLUMBING COMPONENTS

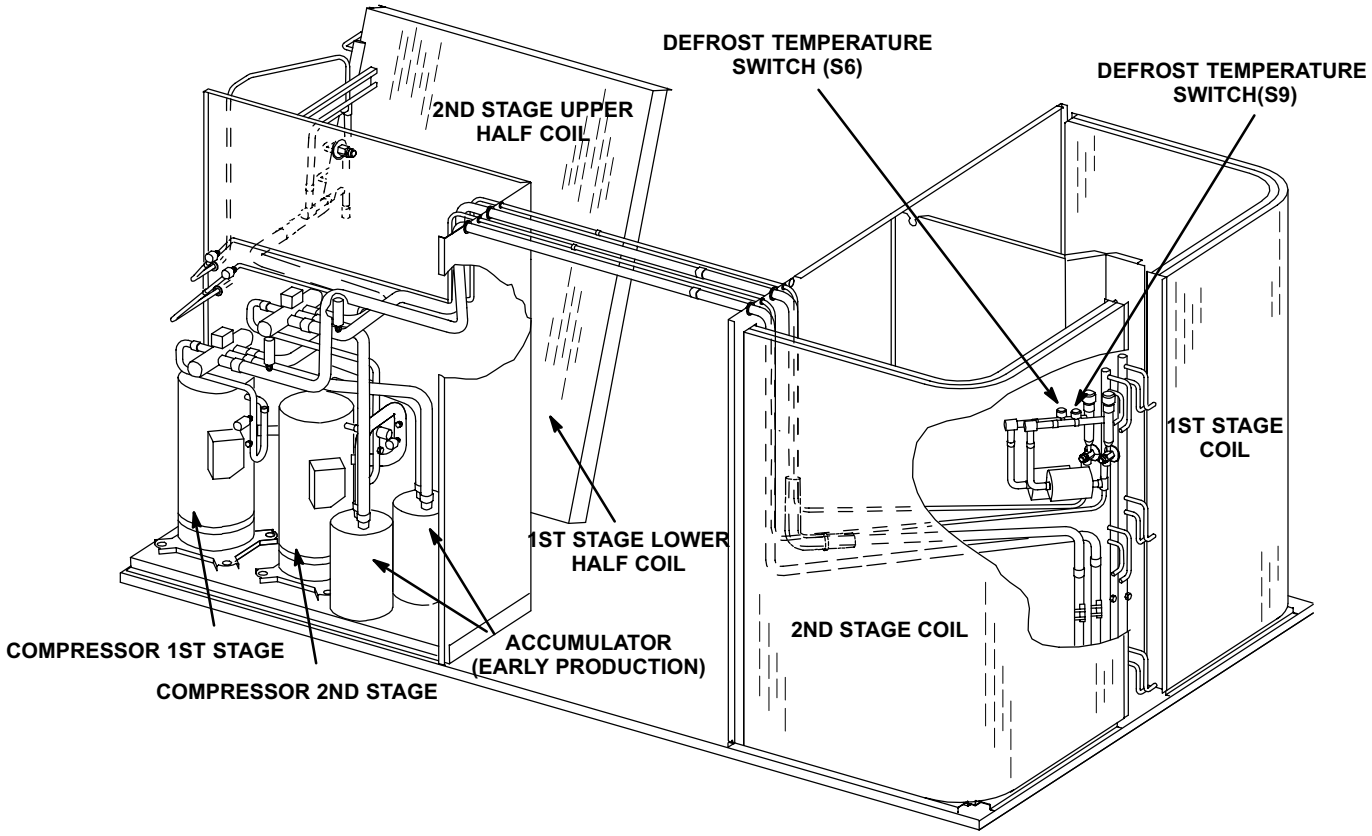

LHA090, 102, 120, 150 COMPRESSOR DETAIL

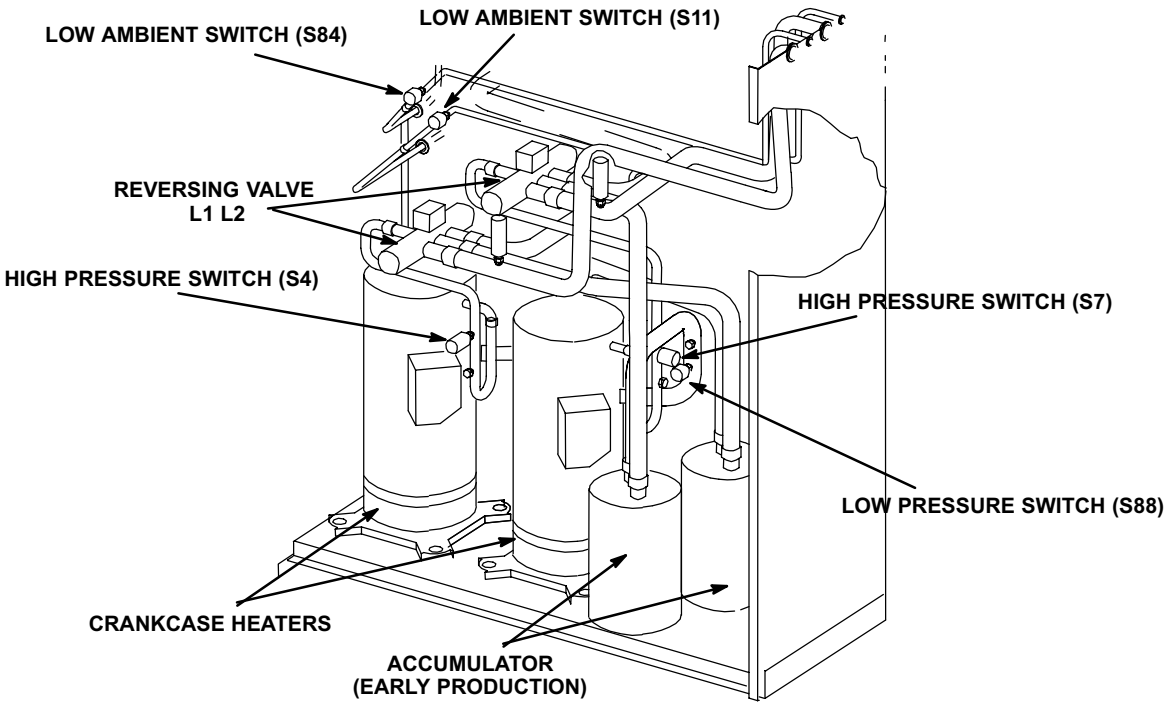

FIGURE 13

B-Cooling Components

Components described in this section may not be shared by all LGA/LCA/LHA model units. See wiring diagram for more specific component listing.

LGA/LCA/LHA units use independent cooling circuits consisting of separate compressors, condenser coils and evaporator coils. See figures 11 through 13. Units are equipped with one or two draw-through type condenser fans. All units are equipped with belt-drive blowers which draw air across the evaporator during unit operation.

Cooling may be supplemented by a factory- or field-installed economizer. The evaporator is slab type and uses a thermostatic expansion valve as the primary expansion device. Each evaporator is also equipped with enhanced fins and rifled tubing. In all units each compressor is protected by a crankcase heater, high pressure switch and low pressure switch. Additional protection is provided by low ambient switches and freezestats (on each evaporator stage).

1-Compressors B1 and B2

See table 2 for compressor type and quantity. Compressors are supplied by various manufacturers and are equipped with independent cooling circuits. Compressor electrical specifications vary by model. See compressor nameplate for specifications.

⚠ WARNING

Electrical shock hazard. Compressor must be grounded. Do not operate without protective cover over terminals. Disconnect power before removing protective cover. Discharge capacitors before servicing unit. Failure to follow these precautions could cause electrical shock resulting in injury or death.

Each compressor is energized by a corresponding compressor contactor.

NOTE-Refer to the wiring diagram section for specific unit operation.

TABLE 2

Unit	Efficiency	Compressor	Quantity
LGA/LCA088S	Standard	Reciprocating	2
LGA/LCA100S	Standard	Scroll	2
LGA/LCA088H	High	Scroll	2
LHA088S	Standard	Scroll	1
LHA090/102/120H	High	Scroll	2
LGA/LCA090/102 120H	High	Scroll	2
LGA/LCA102/120S	Standard	Reciprocating	2
LGA/LCA150S-1	Standard	Reciprocating	2
LGA/LCA150S-2, LHA150S	Standard	Scroll	2

2-Crankcase Heaters HR1 and HR2

All LGA/LCA units with scroll compressors and all LHA units use belly-band type crankcase heaters, while all LGA/LCA units with reciprocating compressors use insertion type heaters. Heater HR1 is used on compressor B1 and heater HR2 is used on compressor B2. Crankcase heater wattage varies by compressor manufacturer.

3-High Pressure Switches S4 and S7

The high pressure switch is an auto-reset SPST N.C. switch which opens on a pressure rise. All LGA/LCA/LHA units are equipped with this switch. Each switch is located in the compressor discharge line. S4 (first circuit) and S7 (second circuit) are wired in series with the respective compressor contactor coils.

Units charged with R-22

When discharge pressure rises to 450 ± 10 psig (3103 ± 69 kPa) (indicating a problem in the system) the switch opens and the respective compressor is de-energized (the economizer can continue to operate). When discharge pressure drops to 300 ± 20 psig (2068 ± 138 kPa) the pressure switch will close.

Units charged with R-410A

When discharge pressure rises to 640 ± 10 psig (4413 ± 69 kPa) (indicating a problem in the system) the switch opens and the respective compressor is de-energized (the economizer can continue to operate). When discharge pressure drops to 475 ± 20 psig (3275 ± 138 kPa) the pressure switch will close.

Main control A55 has a three-strike counter before locking out. This means the control will allow three high pressure trips per one thermostat demand. The control can be reset by breaking and remaking the thermostat demand or manually resetting the control.

4-Low Ambient Switches S11 & S84

The low ambient switch is an auto-reset SPST N.O. pressure switch which allows for mechanical cooling operation at low outdoor temperatures. All LGA/LCA/LHA units are equipped with this switch. In all models a switch is located in each liquid line prior to the indoor coil section.

In LCA/LGA090, 102, 120, 150 units, S11 and S84 wired in parallel, are wired in series with outdoor fan relay K10 (compressor one). Compressor two is under control through the IMC board. In the LHA 090/150, S11 is wired in series with outdoor fan relay K10 (compressor one) and S84 is wired in series with outdoor fan relay K68 (compressor two). LHA088 units **will not** be equipped with S11 or S84.

Units charged with R-22

When liquid pressure rises to 275 ± 10 psig (1896 ± 69 kPa), the switch closes and the condenser fan is energized. When discharge pressure in one refrigerant circuit drops to 150 ± 10 psig (1034 ± 69 kPa), the switch opens and the condenser fan in that refrigerant circuit is de-energized. This intermittent fan operation results in higher evaporating temperature allowing the system to operate without icing the evaporator coil and losing capacity.

Units charged with R-410A

When liquid pressure rises to 450 ± 10 psig (3102 ± 69 kPa), the switch closes and the condenser fan is energized. When discharge pressure in one refrigerant circuit drops to 240 ± 10 psig (1655 ± 69 kPa), the switch opens and the condenser fan in that refrigerant circuit is de-energized. This intermittent fan operation results in higher evaporating temperature allowing the system to operate without icing the evaporator coil and losing capacity.

5-Low Pressure Switches S87 and S88

The low pressure switch is an auto-reset SPST N.O. switch (held N.C. by refrigerant pressure) which opens on a pressure drop. All LGA/LCA/LHA units are equipped with this switch. The switch is located in the compressor suction line.

S87 and S88 are wired directly to the main control module A55.

Units charged with R-22

When suction pressure drops to 25 ± 5 psig (172 ± 34 kPa) (indicating low pressure), the switch opens and the compressor is de-energized. The switch automatically resets when pressure in the suction line rises to 55 ± 5 psig (379 ± 34 kPa), due to many causes such as refrigerant being added.

Units charged with R-410A

When suction pressure drops to 40 ± 5 psig (276 ± 34 kPa) (indicating low pressure), the switch opens and the compressor is de-energized. The switch automatically resets when pressure in the suction line rises to 90 ± 5 psig (620 ± 34 kPa), due to many causes such as refrigerant being added.

The main control module A55 governs the low pressure switches by shunting the switches during start up until pressure is stabilized. After the shunt period, the control has a three-strike counter, during first thermostat demand, before the compressor is locked out. The control is reset by breaking and remaking the thermostat demand.

6-Service Valves (optional on LGA/LCA units)

LGA/LCA units may be equipped with service valves located in the discharge and liquid lines. The service valves are used to store liquid refrigerant in the condenser and shorten recovery time. The valves are manually operated and are also used for service operation.

7-Reversing Valve L1 and L2 (LHA units only)

A refrigerant reversing valve with a 24 volt solenoid coil is used to reverse refrigerant flow during unit operation in all LHA units. The reversing valve is connected in the vapor line of the refrigerant circuit. The reversing valve coil is energized during cooling demand and during defrost.

Reversing valve L1 is controlled by the main control module A55 in response to cooling demand or by defrost. Reversing valve L2 is controlled by heat pump module A61 in response to second stage cooling demand.

8-Accumulator (early production units)

Early production LHA units are equipped with accumulators. The purpose of the accumulator is to trap and evaporate all liquid refrigerant and prevent liquid refrigerant from entering the compressor.

9-Defrost Pressure Switch S46 and S104 (LHA only)

The defrost pressure switch S46 and S104 are auto-reset SPST N.C. pressure switches which open on a pressure rise. All LHA units are equipped with these switches. The switches are located on the suction line during heating cycle (discharge line during cooling and defrost cycle). S46 is wired to the main control board A55 and S104 is wired to heat pump control board A61.

When discharge pressure reaches 275 ± 10 psig (1896 ± 69 kPa) (indicating defrost is completed) the switch opens. The switch automatically resets when pressure in the suction line drops by 80 ± 10 psig (552 ± 69 kPa).

10-High Temperature Limit Switch S5 (LHA088 only)

S5 discharge temperature switch is wired in series with the S4 high pressure switch. S5 is a normally closed switch which opens on temperature rise. The switch will open at 221°F ± 9°F (105°C ± 5°C) and close at 171°F ± 13°F (72°C ± 7.2°C). Actual refrigerant temperature will be higher than the switch setting due to thermal contact losses. The purpose of the switch is to protect the compressor from extreme discharge temperatures during abnormal operating conditions, such as defrost with low system charge. S5 and S4 are wired together to the same IMC contact which means the IMC will not distinguish one fault from the other. **If either switch trips, the IMC will default to the S4 error codes.**

11-Defrost Temperature Switch S6 and S9 (LHA only)

Defrost thermostat switches S6 and S9 have S.P.S.T. N.O. contacts which closes on a temperature fall (initiating defrost). The switches are located on the expansion valve distributor assembly at the inlet to the outdoor coil. The switch monitors the outdoor coil suction temperature to determine when defrost is needed. When the outdoor coil suction temperature falls to 35°F ± 4°F (1.7°C ± 2.2°C) the switch closes (initiating defrost after minimum run time of 30, 60, or 90 minutes). When the temperature rises to 60°F ± 5°F (15.6°C ± 2.8°C) the switch opens.

12-Filter Drier (all units)

LGA/LCA/LHA units have a filter drier located in the liquid line of each refrigerant circuit at the exit of each condenser coil (outdoor coil in LHA units). The drier removes contaminants and moisture from the system.

13-Freezestats S49 and S50

Each unit is equipped with a low temperature switch (freezestat) located on a return bend of each evaporator coil. S49 (first circuit), S50 (second circuit), are located on the corresponding evaporator coils.

Each freezestat is wired to the main control module A55. Each freezestat is a SPST N.C. auto-reset switch which opens at 29°F ± 3°F (-1.7°C ± 1.7°C) on a temperature drop and closes at 58°F ± 4°F (14.4°C ± 2.2°C) on a temperature rise. To prevent coil icing, freezestats open during compressor operation to temporarily disable the respective compressor until the coil warms sufficiently to melt any accumulated frost.

If the freezestats are tripping frequently due to coil icing, check the unit charge, airflow and filters before allowing unit back in operation. Make sure to eliminate conditions which might promote evaporator ice buildup.

14-Condenser Fan Motors B4 and B5

See specifications section of this manual for specifications of condenser fans B4 and B5. LGA/LCA/LHA090/102/120/150 units, are equipped with two condenser fans with 1/3 hp motors. The LGA/LCA/LHA088/100 units have one condenser fan and use 1/2 hp motors. All motors are ball bearing type single-phase motors and have a three pin plug for easy motor lead removal. The fans may be removed for servicing and cleaning by removing the fan grilles.

C-Blower Compartment

The blower compartment in all LGA/LCA/LHA units is located between the evaporator coil and the condenser coil section. The blower assembly is accessed by disconnecting the blower motor and all other plugs and removing the screws in front of the blower housing. The blower pulls out as shown in figure 14.

1-Blower Wheel (all units)

All LGA/LCA/LHA090/102/120/150 units have one 15 in. x 15 in. (381 mm x 381 mm) blower wheel. All LGA/LCA/LHA088/100 units have one 12 in. x 12 in. (305 mm x 305 mm) blower wheel.

2-Indoor Blower Motor B3 (all units)

All LGA/LCA/LHA units use three-phase single-speed blower motors. CFM adjustments are made by adjusting the motor pulley (sheave) to adjust blower speed. Motors are equipped with sealed ball bearings. All motor specifications are listed in the SPECIFICATIONS section at the front of this manual. Units may be equipped with motors manufactured by various manufacturers, therefore electrical FLA and LRA specifications will vary. See unit rating plate for information specific to your unit.

OPERATION / ADJUSTMENT

Blower Operation

NOTE-The following is a generalized procedure and does not apply to all thermostat control systems.

1- Blower operation is dependent on the thermostat control system option that has been installed in the LGA/LCA/LHA units. Refer to operation sequence of the control system installed for detailed descriptions of blower operation.

2- Generally, blower operation is set at the thermostat fan switch. With the fan switch in “ON” position and the **OCP** input is **“ON”**, the blower operates continuously. With the fan switch in “AUTO” position, the blower cycles with demand.

3- In most cases, the blower and entire unit will be off when the system switch is in the “OFF” position. The only exception is immediately after a heating demand when the blower control keeps the blower on until all heat is extracted from the heat exchanger.

Determining Unit Air Volume

1- The following measurements must be made with a dry indoor coil. Run blower without cooling demand. Air filters must be in place when measurements are taken.

2- With all access panels in place, measure static pressure external to unit (from supply to return).

3- Measure the indoor blower wheel RPM.

4- Refer to BLOWER DATA section and use static pressure and RPM readings to determine unit air volume.

5- The RPM can be adjusted at the motor pulley. Loosen Allen screw and turn adjustable pulley clockwise to increase RPM. Turn counterclockwise to decrease RPM. See figure 14.

Blower Belt Adjustment

Proper pulley alignment and belt tension must be maintained for maximum belt life.

NOTE-Tension new belt after 24-48 hours of operation. This will allow belts to stretch and seat in grooves.

1- Loosen four screws securing blower motor to sliding base. See figure 14.

2- *To increase belt tension -*
Turn belt tension adjusting screw to the left, or counterclockwise, to tighten the belt. This increases the distance between the blower motor and the blower housing.

To loosen belt tension -
Turn the adjusting screw to the right, or clockwise to loosen belt tension.

3- Tighten four screws securing blower motor to sliding base once adjustments have been made.

Blower Access

1- Disconnect jack/plug connector to blower motor. Also disconnect jack/plug connector heating limit switches on LGA units.

2- Remove screws on either side of blower assembly sliding base. See figure 14

3- Pull base toward outside of unit.

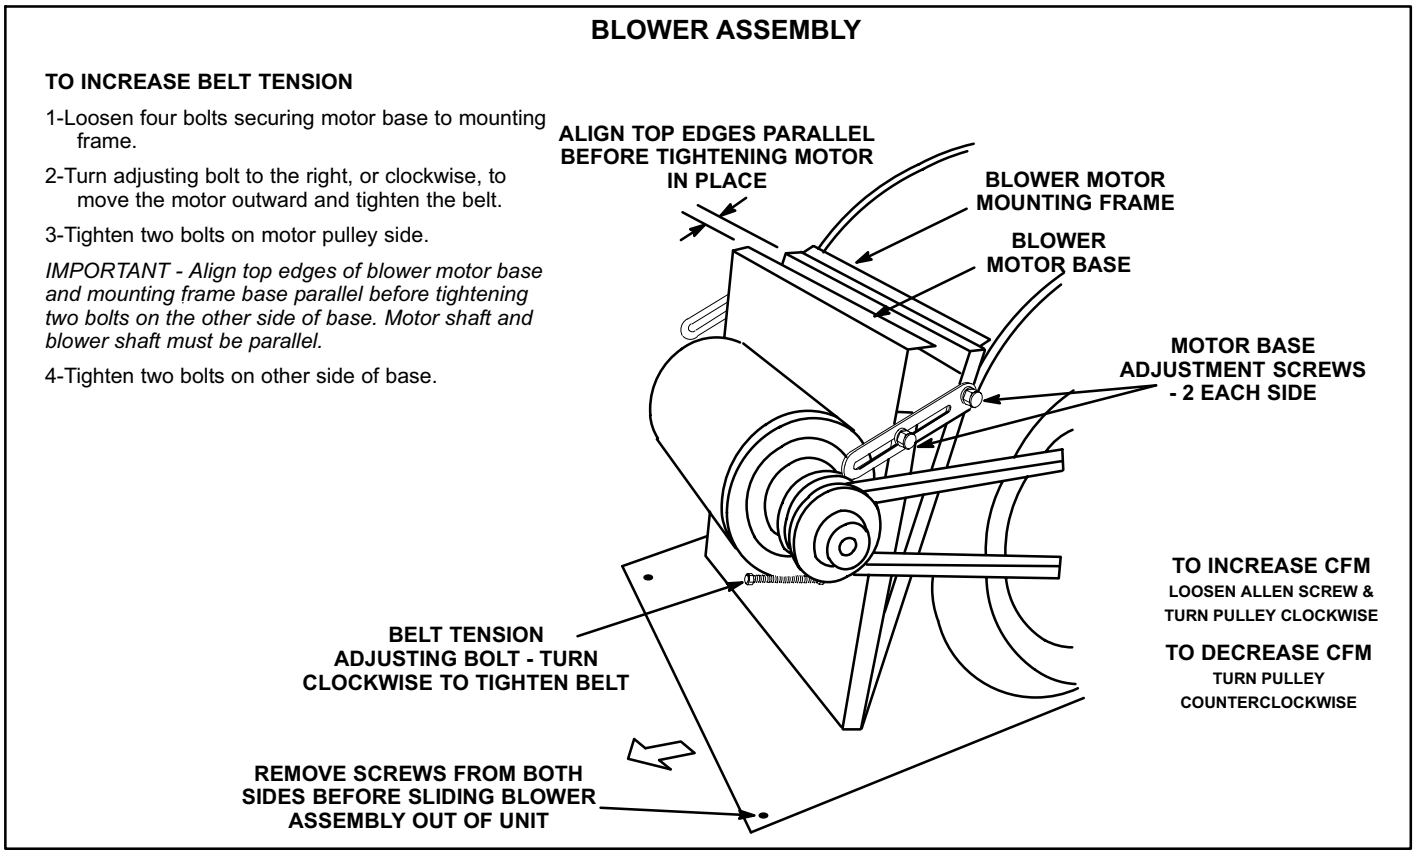

FIGURE 14

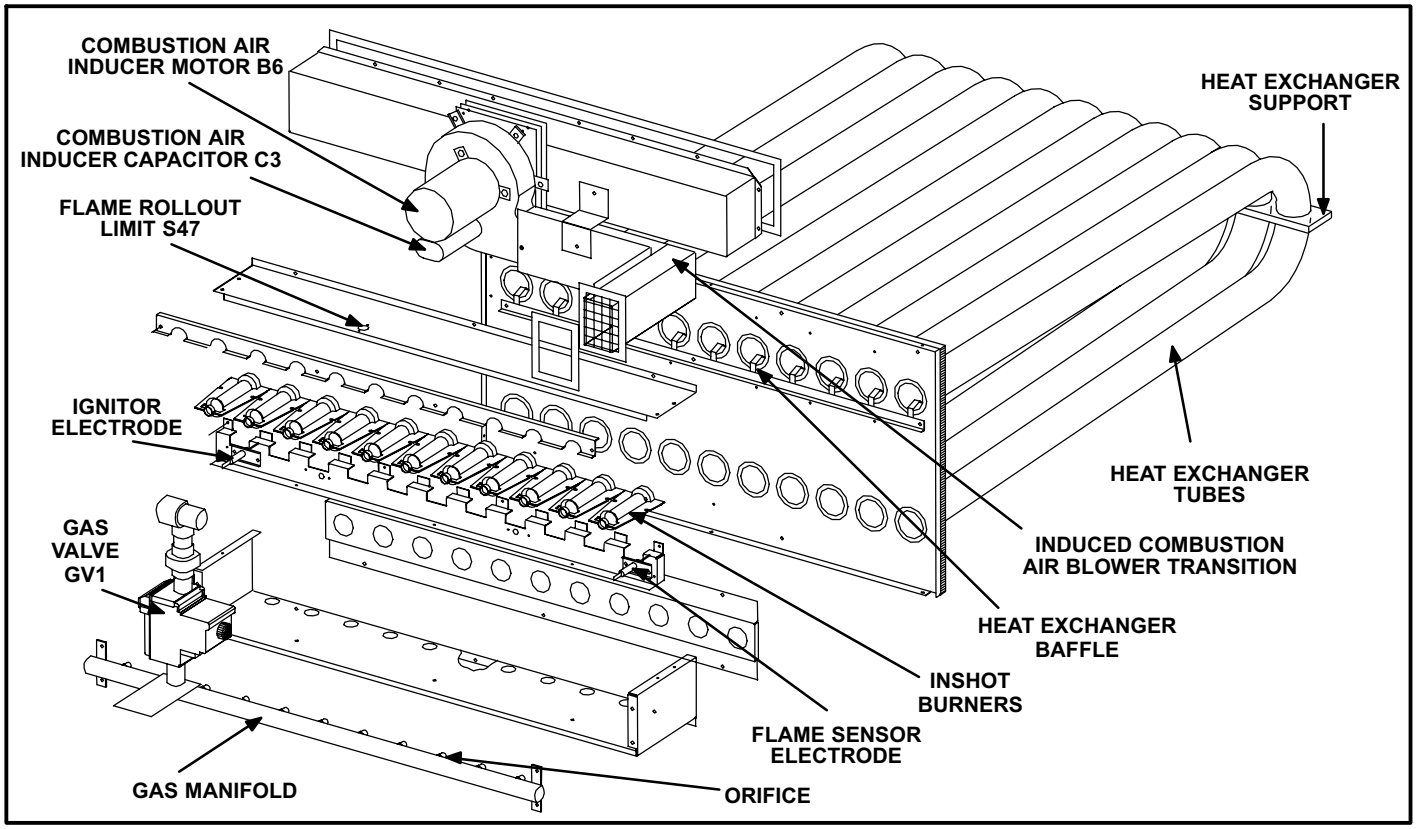

FIGURE 15

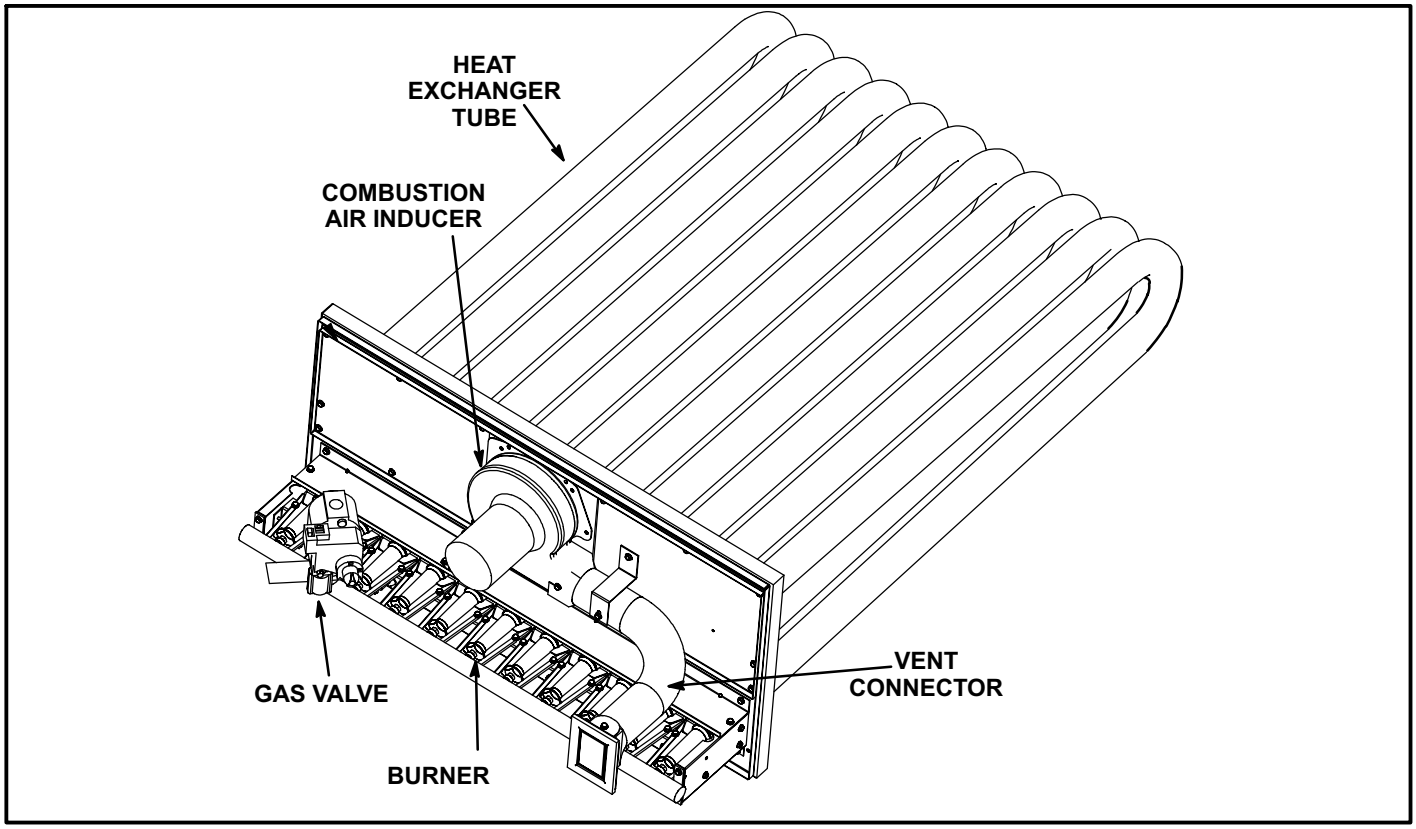

FIGURE 16

D-GAS HEAT COMPONENTS (LGA units)

LGA088/100 units are available in 125,000 BTUH (36.6 kW) (standard heat) or 180,000 BTUH (52.7 kW) (high heat) sizes. All LGA090, 102, 120 and 150 units are available in 130,000 BTUH (38.1 kW) (standard heat) and 235,000 BTUH (68.8kW) (high heat) sizes with some units available in 180,000 (52.7 kW) (medium heat). Unit nameplate will list Btuh capacities.

1-Burner Ignition Control A3

The ignition control is located below the control box. Three different manufacturers' (Fenwal, Johnson Controls, and RAM) controls are used in the LGA units. All three ignition controls operate the same.

The ignition control provides three main functions: gas valve control, ignition, and flame sensing. The unit will usually ignite on the first attempt; however, the ignition attempt sequence provides three trials for ignition before locking out. The lockout time for the Johnson control is 5 minutes. The lockout time for the Ram control and Fenwall control is 1 hour. After lockout, the ignition control automatically resets and provides three more attempts at ignition. Manual reset after lockout requires breaking and remaking power to the ignition control. See figure 18 for a normal ignition sequence and figure 19 for the ignition attempt sequence with retrials (nominal timings given for simplicity). Specific timings for the ignition controls are shown in figure 20. The RAM and JOHNSON control will have an LED to help troubleshoot and show control operation. See table 3 for LED codes.

Flame rectification sensing is used on all LGA units. Loss of flame during a heating cycle is indicated by an absence of flame signal (0 microamps). If this happens, the control will immediately restart the ignition sequence and then lock out if ignition is not gained after the third trial. See Service System Checks section for flame current measurement.

The control shuts off gas flow immediately in the event of a power failure. Upon restoration of gas and power, the control will restart the ignition sequence and continue until flame is established or system locks out.

On a heating demand, the ignition control is energized by the main control module A55. The ignition control then allows 30 seconds for the combustion air blower to vent exhaust gases from the burners. When the combustion air blower is purging the exhaust gases, the combustion air prove switch is closing proving that the combustion air blower is operating before allowing the ignition control to energize. When the combustion air prove switch is closed and the delay is over, the ignition control activates gas valve, the spark electrode and the flame sensing electrode. Sparking stops immediately after flame is sensed. The combustion air blower continues to operate throughout the heating demand. If the flame fails or if the burners do not ignite, the ignition control will attempt to ignite the burners up to two more times. If ignition cannot be obtained after the third attempt, the control will lock out. The ignition control is not adjustable.

The RAM control is illustrated in figure 17. The four quick connect terminals are used to wire the control to unit. Each of the four quick terminals are identified by function. The spark electrode wire connects to the spark-plug-type connector on top of the control.

TABLE 3

Manufacturer	LED Code	Description
RAM	Steady "ON"	Normal
	2 Flash	Reset Mode
	Steady Flash	Failure
Johnson	Steady "ON"	Normal
	.5 sec on / 2.5 sec off	Reset Mode
	"OFF"	No Power or Detected Failure

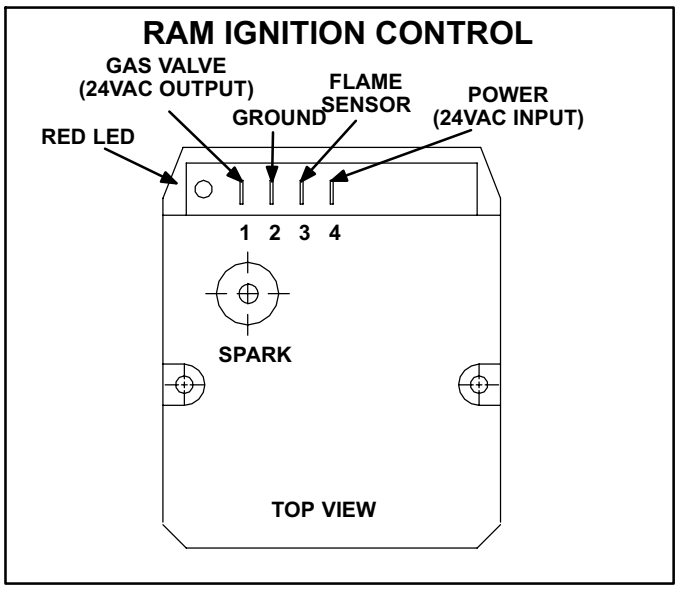

FIGURE 17

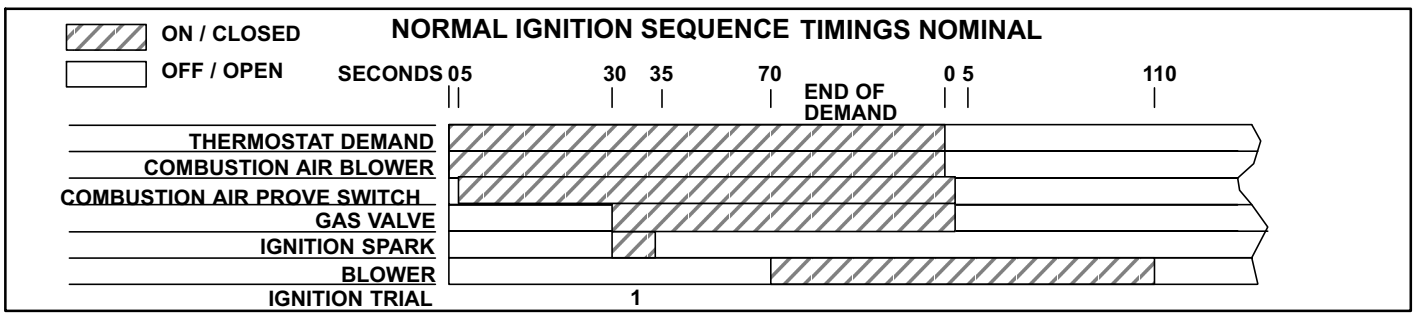

FIGURE 18

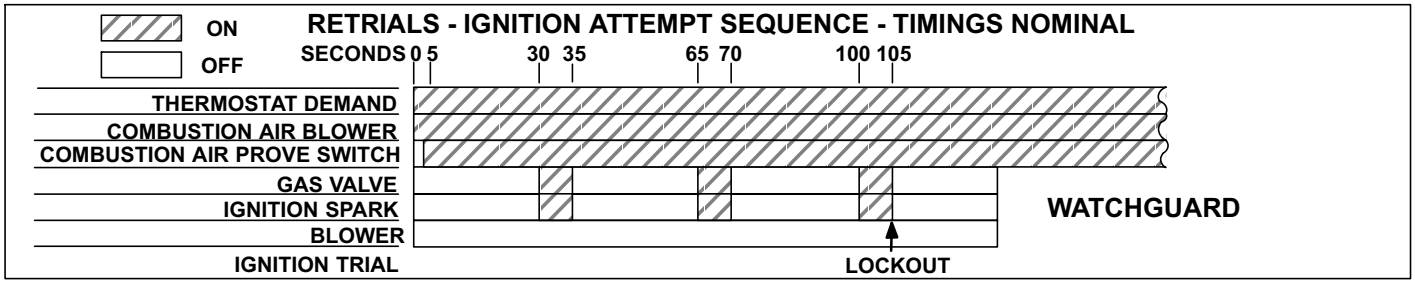

FIGURE 19

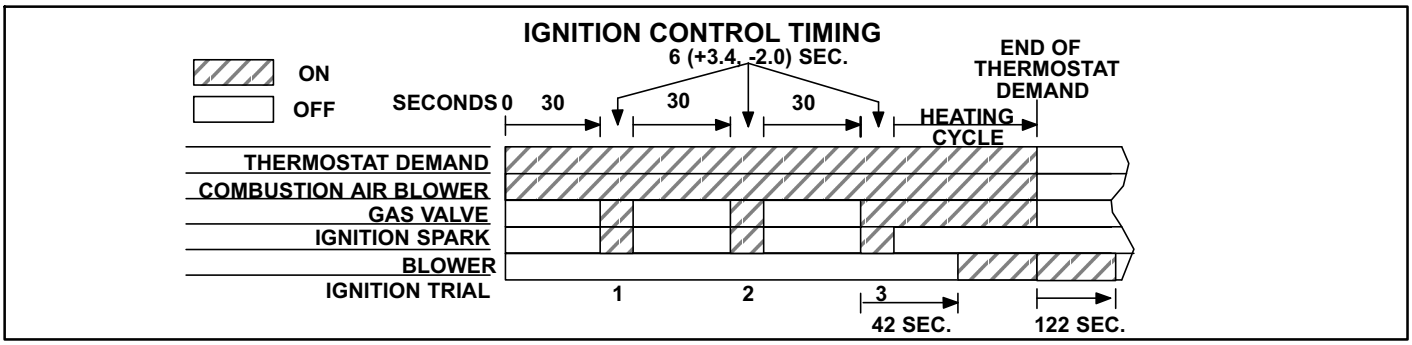

FIGURE 20

⚠ WARNING

SHOCK HAZARD. SPARK RELATED COMPONENTS CONTAIN HIGH VOLTAGE WHICH CAN CAUSE PERSONAL INJURY OR DEATH. DISCONNECT POWER BEFORE SERVICING. CONTROL IS NOT FIELD REPAIRABLE. UNSAFE OPERATION WILL RESULT. IF THE CONTROL IS INOPERABLE, SIMPLY REPLACE THE ENTIRE CONTROL.

2-Heat Exchanger (Two styles used. Figures 15 and 16)

The LGA units use aluminized steel inshot burners with matching tubular aluminized or optional stainless steel heat exchangers and two-stage redundant gas valve. LGA uses one eleven-tube/burner section for high heat and one seven-tube/burner section for standard heat. Each burner uses a burner venturi to mix gas and air for proper combustion. Combustion takes place at each tube entrance. As hot combustion gases are drawn upward through each tube by the combustion air blower, exhaust gases are drawn out the top and fresh air/gas mixture is drawn in at the bottom. Heat is transferred to the air stream from all surfaces of the heat exchanger tubes. The supply air blower controlled by the main control panel A55, forces air across all surfaces of the tubes to extract the heat of combustion. The shape of the tubes ensures maximum heat exchange.

The gas valve accomplishes staging by allowing more or less gas to the burners as called for by heating demand.

3-Burner Assembly (Figure 21)

The spark electrode, flame sensing electrode and gas valve are directly controlled by ignition control. Ignition control and combustion air blower is controlled by main control panel A55.

Burners

All units use inshot burners (see figure 21). Burners are factory set and do not require adjustment. A peep hole with cover is furnished in the heating access panel for flame viewing. Always operate the unit with the access panel in place. Burners can be removed individually for service. Burner maintenance and service is detailed in the SERVICE CHECKS sections of this manual.

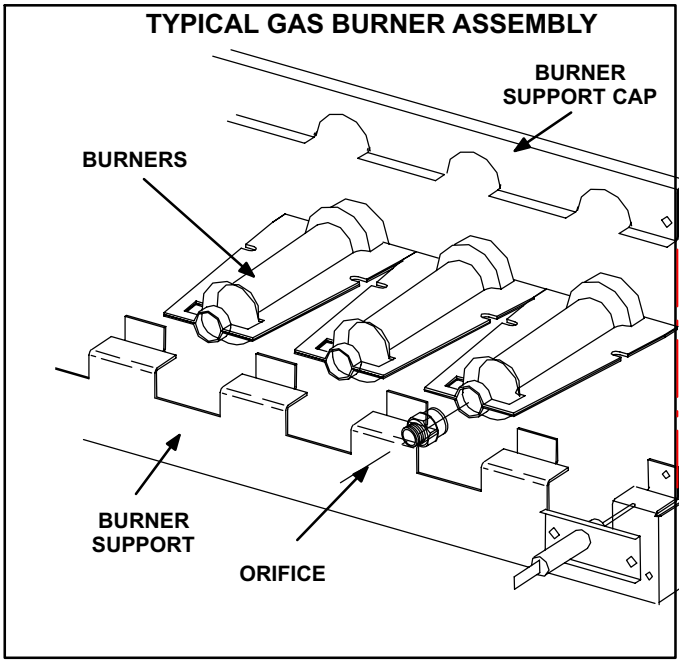

FIGURE 21

Orifice

Each burner uses an orifice which is precisely matched to the burner input. The orifice is threaded into the burner manifold. The burner is supported by the orifice and will easily slide off for service.

NOTE-Do not use thread sealing compound on the orifices. Using thread sealing compound may plug the orifices.

Each orifice and burner are sized specifically to the unit. Refer to Lennox Repair Parts Listing for correct sizing information.

4-Primary High Temperature Limit S10

S10 is the primary high temperature limit for gas heat. S10 is located on the blower deck behind the blower.

Primary limit S10 is wired to the main control panel A55 which energizes burner control (A3). Its N.C. contacts open to de-energize the ignition control when excessive temperature is reached in the blower compartment. At the same time, the N.O. contacts of S10 close energizing the blower relay coil K3 through control A55.

Limit S10 in all gas heat units is factory preset to open at 170°F ± 6°F (76°C ± 3.3°C) on a temperature rise and automatically reset at 140°F ± 7°F (60°C ± 3.9°C) on a temperature fall.

5-Flame Rollout Limit S47

Flame rollout limit S47 is a SPST N.C. high temperature limit located just above the burner air intake opening in the burner enclosure (see figure 16). S47 is wired to the main control panel A55. When S47 senses flame rollout (indicating a blockage in the combustion air passages), the flame rollout limit trips, and the ignition control immediately closes the gas valve.

Limit S47 is factory preset to open at 250°F ± 12°F (121.1°C ± 6.7°C) for standard heat units, and 270°F ± 12°F (132°C ± 6.7°C) for high heat units on a temperature rise. All flame rollout limits are manual reset.

6-Combustion Air Prove Switch S18

The combustion air prove switch S18 is a SPST N.O. pressure switch located in the vestibule area. S18 monitors combustion air inducer operation. Switch S18 is wired to the ignition control A3. The switch closes at *negative* 0.46"W.C. ± 0.05" (114 Pa ± 12.4 Pa) on pressure fall.This negative pressure fall and switch actuation allows the ignition sequence to continue (proves, by closing, that the combustion air inducer is operating before allowing the gas valve to open.) The combustion air prove switch is factory set and not adjustable. The switch will automatically open on a pressure rise (less negative pressure) at 0.31" W.C. ± 0.05" W.C. (77.2 Pa ± 12.4 Pa). The combustion air prove switch is factory set and not adjustable.

7-Combustion Air Inducer B6

Combustion air inducer B6 provides fresh air to the burners while clearing the combustion chamber of exhaust gases. The inducerbegins operating immediately upon receiving a thermostat demand and is de-energized immediately when thermostat demand is satisfied.

The combustion air inducer uses a 208/230V single-phase PSC motor and a 4.81in. x 1.25in. (122mm x 32mm) inducerwheel. The motor operates at 3200RPM and is equipped with auto-reset overload protection. Blowers are supplied by various manufacturers. Ratings may vary by manufacturer. Specific inducerelectrical ratings can be found on the unit rating plate.

All combustion air inducer motors are sealed and cannot be oiled. The inducercannot be adjusted but can be disassembled for cleaning.

8-Combustion Air Motor Capacitor C3

The combustion air inducermotor in all LGA units requires a run capacitor. Capacitor C3 is connected to combustion air inducerB6. All capacitors are rated at 3 MFD and 370VAC.

9-Gas Valve GV1

Gas valve GV1 is a two-stage redundant gas valve used in all LGA units. Units are equipped with valves manufactured by White-Rodgers or Honeywell. For both valves first stage (low fire) is quick opening (on and off in less than 3 seconds). For the WhiteRodgers valve second stage is slow opening (on to high fire pressure in 40 seconds and off to low fire pressure in 30 seconds). Second stage for the Honeywell valve is quick opening and close. On a call for first stage heat (low fire), the valve is energized by the ignition control simultaneously with the spark electrode. On a call for second stage heat (high fire), the second stage operator is energized directly from A55. The WhiteRodgers valve is adjustable on high fire only. The Honeywell valve is adjustable for both high and low fire. A manual shut-off knob is provided on all valves for shut-off. Manual shut-off knob immediately closes both stages without delay. Figure 22 shows White-Rodgers gas valve components. Table 4 shows factory gas valve regulation for LGA series units.

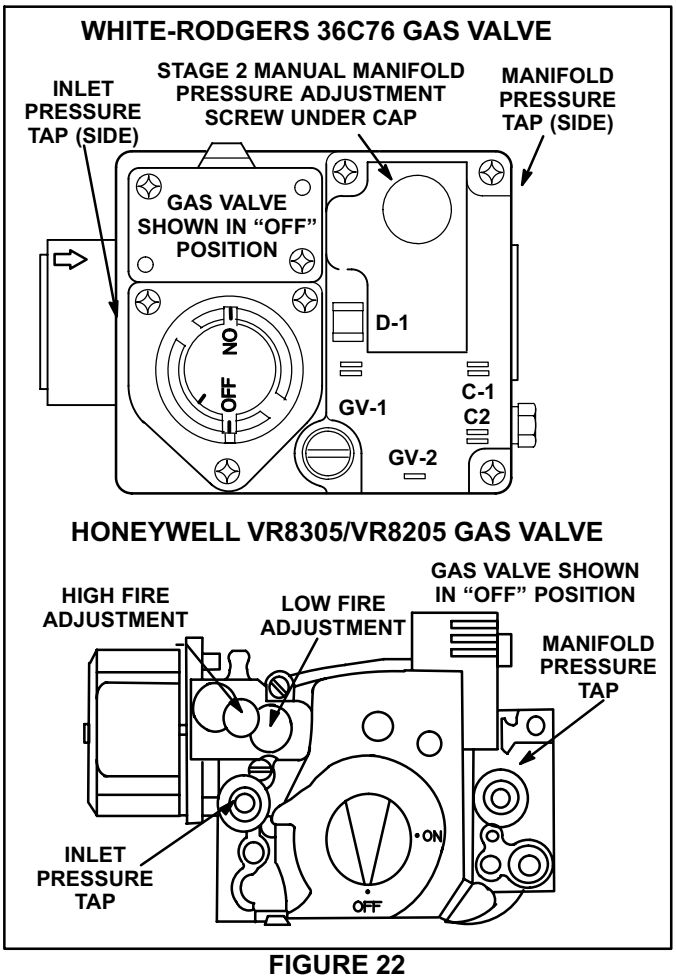

FIGURE 22

TABLE 4

GAS VALVE REGULATION FOR LGA UNITS				
Maximum Inlet Pressure	Operating Pressure (outlet factory setting)			
	Natural		LP	
	Low	High	Low	High
13.0"W.C. 3232Pa	1.6± 0.2" 3232Pa	3.7± 0.2" 920 ± 75Pa	5.5± 0.3" 1368 ± 75Pa	10.5± 0.5" 2611 ± 124Pa

10-Spark Electrodes

An electrode assembly is used for ignition spark. The electrode is mounted through holes on the left-most end of the burner support. The electrode tip protrudes into the flame envelope of the adjacent burner. The electrode assembly is fastened to burner supports and can be removed for service without removing any part of the burners.

During ignition, spark travels through the spark electrode (figure 23) and ignites the left burner. Flame travels from burner to burner until all are lit.

The spark electrode is connected to the ignition control by a 8 mm silicone-insulated stranded high voltage wire. The wire uses 1/4" (6.35 mm)female quick connect on the electrode end and female spark plug-type terminal on the ignition control end.

NOTE-IN ORDER TO MAXIMIZE SPARK ENERGY TO ELECTRODE, HIGH VOLTAGE WIRE SHOULD TOUCH UNIT CABINET AS LITTLE AS POSSIBLE.

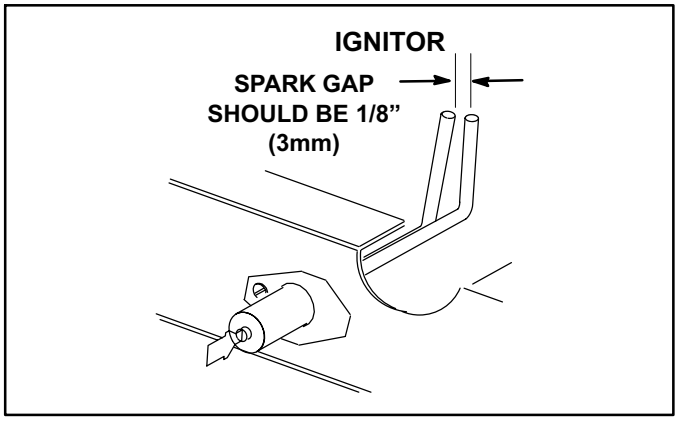

FIGURE 23

11-Flame Sensors

A flame sensor is located on the right side of the burner support. The sensor is mounted through a hole in the burner support and the tip protrudes into the flame envelope of the right most burner. The sensor assembly is fastened to burner supports and can be removed for service without removing any part of the burners.

When flame is sensed by the flame sensor (indicated by microamp signal through the flame) sparking stops immediately. During operation, flame is sensed by current passed along the ground electrode (located on the spark electrode), through the flame and into the sensing electrode. The ignition control allows the gas valve to stay open as long as a flame signal (current passed through the flame) is sensed.

E-Optional Electric Heat Components

See ELECTRIC HEAT CAPACITIES and ELECTRIC HEAT / ELECTRICAL DATA for LCA090/102/120. For LCA088, 100 and 150 and all LHA electric heat data see Tables 6 through 15.

All electric heat sections consist of electric heating elements exposed directly to the airstream. See figure 24. EHA parts arrangement is shown in figures 25 and 26. Multiple-stage elements are sequenced on and off in response to thermostat demand.

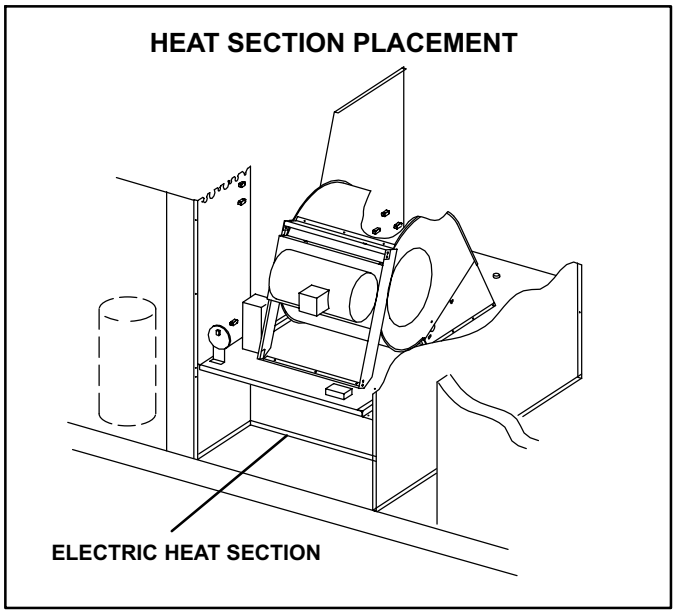

FIGURE 24

1-Main Control Box Components A55 and F4

The main control box (see figure 26) houses a few of the electric heat controls, such as: the main control module A55 and unit fuse block F4. For a description of module A55 and fuse block F4 see section I-A.

2-Contactors K15, K16

Contactors K15 and K16 are three-pole double-break contactors located on the electric heat vestibule. All contactors are equipped with a 24VAC coil. The coils in the K15 and K16 contactors are energized by the main panel A55. Contactor K15 energizes the first stage heating elements, while K16 energizes the second stage heating elements.

3-High Temperature Limits S15 (Primary)

S15 is a SPST N.C. auto-reset thermostat located on the back panel of the electric heat section below the heating elements. S15 is the high temperature limit for the electric heat section. When S15 opens, indicating a problem in the system, contactor K15 is de-energized. When K15 is de-energized, first stage and all subsequent stages of heat are de-energized. For EHA102/150 units, the electric heat section thermostat is factory set to open at 170°F ± 5°F (76°C ± 2.8°C) on a temperature rise and automatically reset at 130°F ± 6°F (54.4°C ± 3.3°C) on a temperature fall. For EHA100 units, the electric heat section thermostat is factory set to open at 160°F ± 5°F (71.0°C ± 2.8°C) on a temperature rise and automatically reset at 120°F ± 6°F (49.0°C ± 3.3°C) on a temperature fall. the thermostat is not adjustable.

4-High Temperature Limit S20 (Secondary)

S20 is a SPST N.C. manual-reset thermostat . Like the primary temperature limit, S20 is wired in series with the first stage contactor coil (K15) and second stage contactor coil (K16). When S20 opens, contactors (K15, K16) are de-energized. When the contactors are de-energized, first stage and all subsequent stages of heat are de-energized. The thermostat is factory set to open at 220°F ± 6 °F (104°C ± 3.3°C) on a temperature rise and can be manually reset when temperature falls below 160°F (71.0°C).

5-Terminal Strip TB3

Electric heat line voltage connections are made to terminal strip TB3 (or a fuse block on some models) located in the upper left corner of the electric heat vestibule.

6-Heating Elements HE1, HE2, HE6 and HE7

Heating elements are composed of helix wound bare nichrome wire exposed directly to the airstream. Three elements are connected in a three-phase arrangement. The elements in 208/230V units are connected in a “Delta” arrangement. Elements in 460 and 575V units are connected in “Wye” arrangement. Each stage is energized independently by the corresponding contactors located on the electric heat vestibule panel. Once energized, heat transfer is instantaneous. High temperature protection is provided by primary and redundant high temperature limits and overcurrent protection is provided by fuses.

7-Fuse F3

Fuse F3 are housed in a fuse block which holds three fuses. Each F3 fuse is connected in series with each leg of electric heat. Figure 25 and table 5 show the fuses used with each electric heat section. For simplicity, the service manual labels the fuses F3 - 1 through F3 - 4.

TABLE 5

LCA / LHA ELECTRIC HEAT SECTION FUSE RATING					
EHA QUANTITY & SIZE	**VOLTAGES**	**FUSE (3 each)**			
		F3 - 1	**F3 - 2**	**F3 - 3**	**F3 - 4**
EHA100-7.5	208/230V	25 Amp 250V	—	—	—
	460V	15 Amp 600V	—	—	—
	575V	10 Amp 600V	—	—	—
EHA100-15	208/230V	50 Amp 250V	—	—	—
	460V	25 Amp 600V	—	—	—
	575V	20 Amp 600V	—	—	—
EHA100-22.5	208/230V	50 Amp250V	—	—	25 Amp 250V
	460V	25 Amp 600V	—	—	15 Amp 600V
	575V	20 Amp 600V	—	—	10 Amp 600V
EHA100-30	208/230V	50 Amp 250V	—	—	50 Amp 250V
	460V	25 Amp 600V	—	—	25 Amp 600V
	575V	20 Amp 600V	—	—	20 Amp 600V
EHA100-45	208/230V	50 Amp 250V	—	60 Amp 250V	60 Amp 250V
	460V	25 Amp 600V	—	—	50 Amp 600V
	575V	20 Amp 600V	—	—	40 Amp 600V
EHA102-7.5	208/230V	25 Amp 250V	—	—	—
	460V	15 Amp 600V	—	—	—
	575V	10 Amp 600V	—	—	—
EHA150-15	208/230V	50 Amp 250V	—	—	—
	460V	25 Amp 600V	—	—	—
	575V	20 Amp 600V	—	—	—
EHA360-22.5	208/230V	50 Amp 250V	—	—	25 Amp 250V
	460V	25 Amp 600V	—	—	15 Amp 600V
	575V	20 Amp 600V	—	—	10 Amp 600V
EHA150-30	208/230V	50 Amp 250V	—	—	50 Amp 250V
	460V	25 Amp 600V	—	—	25 Amp 600V
	575V	20 Amp 600V	—	—	20 Amp 600V
EHA150-45	208/230V	50 Amp 250V	—	60 Amp 250V	60 Amp 250V
	460V	25 Amp 600V	—	—	50 Amp 600V
	575V	20 Amp 600V	—	—	40 Amp 600V
EHA150-60	208/230V	60 Amp 250V	60 Amp 250V	60 Amp 250V	60 Amp 250V
	460V	50 Amp 600V	—	—	50 Amp 600V
	575V	40 Amp 600V	—	—	40 Amp 600V

EHA 7.5, 15, 22.5, 30, 45, 60KW
ELECTRIC HEAT SECTION PARTS ARRANGEMENT

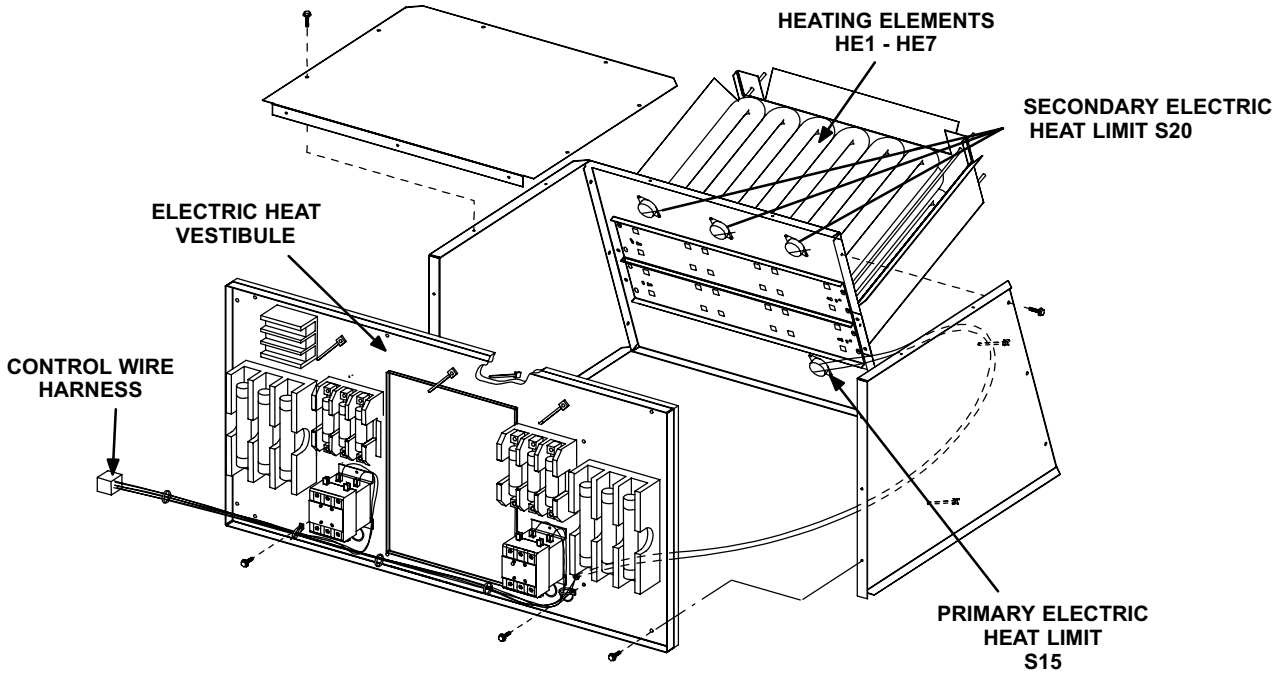

FIGURE 25

ELECTRIC HEAT VESTIBULE PARTS ARRANGEMENT

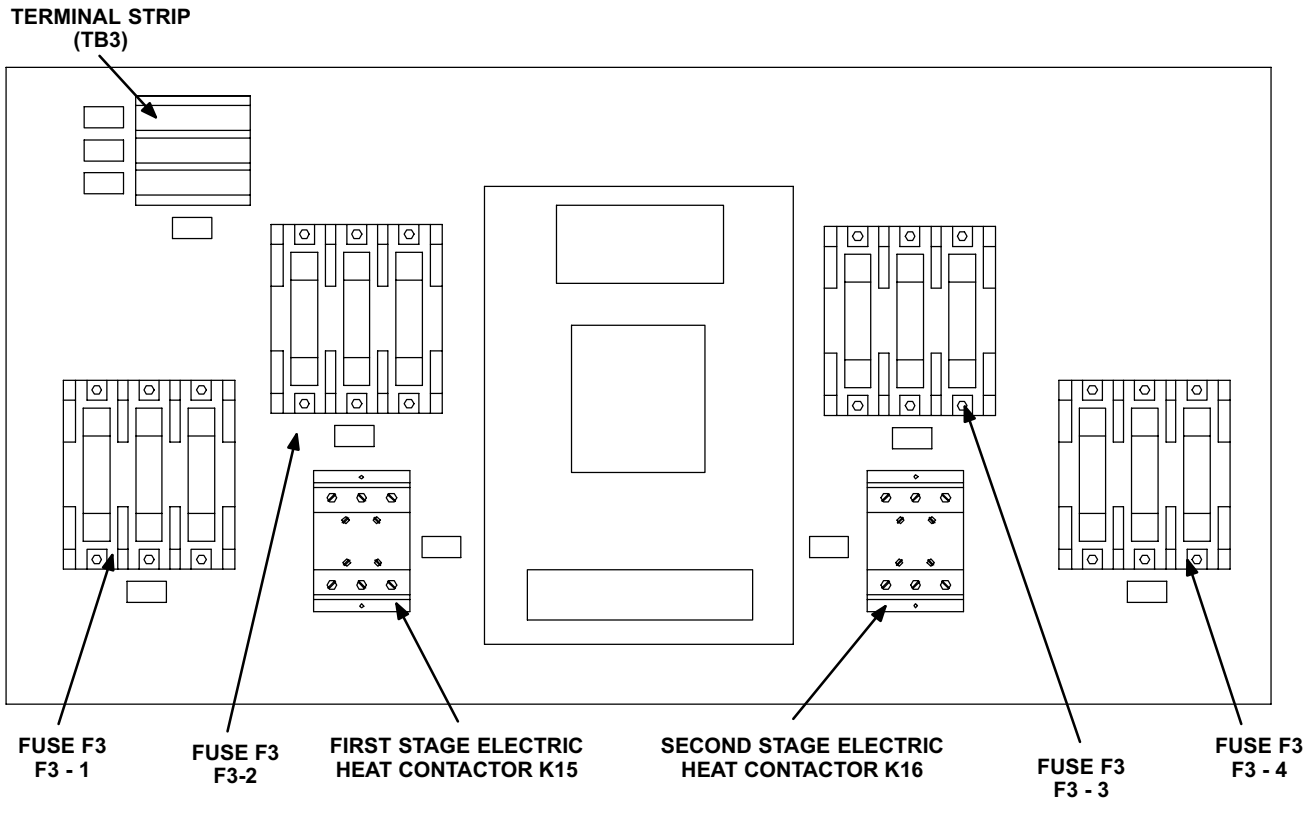

FIGURE 26

Electric Heat Data

TABLE 6

LCA088S

kW Size Required	Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	†Total Unit (with Power Exhaust Fan) & Electric Heat Minimum Circuit Ampacity	
						2 hp (1.5 kW)	3 hp (2.2 kW)
7.5 kW	EHA100-7.5 208/230v **(16L08)** 460v **(16L09)** 575v **(16L10)** 31 lbs. (14 kg)	1	208	5.6	19,100	41	44
		1	220	6.3	21,500		
		1	230	6.9	23,600		
		1	240	7.5	25,600		
		1	440	6.9	21,500	23	24
		1	460	6.9	23,600		
		1	480	7.5	25,600		
		1	550	6.3	21,500	18	20
		1	575	6.9	23,600		
		1	600	7.5	25,600		
15 kW	EHA100-15 208/230v **(16L11)** 460v **(16L12)** 575v **(16L13)** 31 lbs. (14 kg)	1	208	11.3	38,600	58	62
		1	220	12.6	43,000		
		1	230	13.8	47,100		
		1	240	15.0	51,200		
		1	440	12.6	43,000	29	31
		1	460	13.8	47,100		
		1	480	15.0	51,200		
		1	550	12.6	43,000	23	25
		1	575	13.8	47,100		
		1	600	15.0	51,200		
22.5 kW	EHA100-22.5 208/230v **(32L95)** 460v **(32L96)** 575v **(32L97)** 38 lbs. (17 kg)	‡2	208	16.9	57,700	73	77
		‡2	220	18.9	64,500		
		‡2	230	20.7	70,700		
		‡2	240	22.5	76,800	82	86
		‡2	440	18.9	64,500		
		‡2	460	20.7	70,700		
		‡2	480	22.5	76,800	41	43
		‡2	550	18.9	64,500		
		‡2	575	20.7	70,700		
		‡2	600	22.5	76,800	33	34
30 kW	EHA100-30 208/230v **(16L14)** 460v **(16L15)** 575v **(16L16)** 38 lbs. (17 kg)	‡2	208	22.5	76,800	91	95
		‡2	220	25.2	86,000	103	107
		‡2	230	27.5	93,900		
		‡2	240	30.0	102,400		
		‡2	440	25.2	86,000	51	53
		‡2	460	27.5	93,900		
		‡2	480	30.0	102,400		
		‡2	550	25.2	86,000	41	43
		‡2	575	27.5	93,900		
		‡2	600	30.0	102,400		
45 kW	EHA100-45 208/230v **(16L17)** 460v **(16L18)** 575v **(16L19)** 42 lbs. (19 kg)	‡2	208	33.8	115,300	130	134
		‡2	220	37.8	129,000	148	152
		‡2	230	41.3	141,000		
		‡2	240	45.0	153,600		
		‡2	440	37.8	129,000	74	76
		‡2	460	41.3	141,000		
		‡2	480	45.0	153,600		
		‡2	550	37.8	129,000	59	61
		‡2	575	41.3	141,000		
		‡2	600	45.0	153,600		

NOTE - (H) indicates high efficiency units. (S) indicates standard efficiency units.
†Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).
‡May be used with two stage control.
NOTE — Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in unit with field installed heaters. Also requires LTB2 Terminal Block.

TABLE 7

LCA088H

kW Size Required	Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	†Total Unit (with Power Exhaust Fan) & Electric Heat Minimum Circuit Ampacity	
						2 hp (1.5 kW)	3 hp (2.2 kW)
7.5 kW	EHA100-7.5 208/230v **(16L08)** 460v **(16L09)** 575v **(16L10)** 31 lbs. (14 kg)	1	208	5.6	19,100	41	44
		1	220	6.3	21,500		
		1	230	6.9	23,600		
		1	240	7.5	25,600		
		1	440	6.9	21,500	21	20
		1	460	6.9	23,600		
		1	480	7.5	25,600		
		1	550	6.3	21,500	17	18
		1	575	6.9	23,600		
		1	600	7.5	25,600		
15 kW	EHA100-15 208/230v **(16L11)** 460v **(16L12)** 575v **(16L13)** 31 lbs. (14 kg)	1	208	11.3	38,600	52	56
		1	220	12.6	43,000	58	62
		1	230	13.8	47,100		
		1	240	15.0	51,200		
		1	440	12.6	43,000	29	31
		1	460	13.8	47,100		
		1	480	15.0	51,200		
		1	550	12.6	43,000	23	25
		1	575	13.8	47,100		
		1	600	15.0	51,200		
22.5 kW	EHA100-22.5 208/230v **(32L95)** 460v **(32L96)** 575v **(32L97)** 38 lbs. (17 kg)	‡2	208	16.9	57,700	73	77
		‡2	220	18.9	64,500		
		‡2	230	20.7	70,700		
		‡2	240	22.5	76,800	82	86
		‡2	440	18.9	64,500		
		‡2	460	20.7	70,700		
		‡2	480	22.5	76,800	41	43
		‡2	550	18.9	64,500		
		‡2	575	20.7	70,700		
		‡2	600	22.5	76,800	33	34
30 kW	EHA100-30 208/230v **(16L14)** 460v **(16L15)** 575v **(16L16)** 38 lbs. (17 kg)	‡2	208	22.5	76,800	91	95
		‡2	220	25.2	86,000	103	107
		‡2	230	27.5	93,900		
		‡2	240	30.0	102,400		
		‡2	440	25.2	86,000	51	53
		‡2	460	27.5	93,900		
		‡2	480	30.0	102,400		
		‡2	550	25.2	86,000	41	43
		‡2	575	27.5	93,900		
		‡2	600	30.0	102,400		
45 kW	EHA100-45 208/230v **(16L17)** 460v **(16L18)** 575v **(16L19)** 42 lbs. (19 kg)	‡2	208	33.8	115,300	130	134
		‡2	220	37.8	129,000	148	152
		‡2	230	41.3	141,000		
		‡2	240	45.0	153,600		
		‡2	440	37.8	129,000	74	76
		‡2	460	41.3	141,000		
		‡2	480	45.0	153,600		
		‡2	550	37.8	129,000	59	61
		‡2	575	41.3	141,000		
		‡2	600	45.0	153,600		

NOTE - (H) indicates high efficiency units. (S) indicates standard efficiency units.
†Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).
‡May be used with two stage control.
NOTE — Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in unit with field installed heaters. Also requires LTB2 Terminal Block.

TABLE 8

LCA100S

kW Size Required	Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	†Total Unit (with Power Exhaust Fan) & Electric Heat Minimum Circuit Ampacity	
						2 hp (1.5 kW)	3 hp (2.2 kW)
7.5 kW	EHA100-7.5 208/230v **(16L08)** 460v **(16L09)** 575v **(16L10)** 31 lbs. (14 kg)	1	208	5.6	19,100	44	47
		1	220	6.3	21,500		
		1	230	6.9	23,600		
		1	240	7.5	25,600		
		1	440	6.9	21,500	22	23
		1	460	6.9	23,600		
		1	480	7.5	25,600		
		1	550	6.3	21,500	17	18
		1	575	6.9	23,600		
		1	600	7.5	25,600		
15 kW	EHA100-15 208/230v **(16L11)** 460v **(16L12)** 575v **(16L13)** 31 lbs. (14 kg)	1	208	11.3	38,600	58	62
		1	220	12.6	43,000		
		1	230	13.8	47,100		
		1	240	15.0	51,200		
		1	440	12.6	43,000	29	31
		1	460	13.8	47,100		
		1	480	15.0	51,200		
		1	550	12.6	43,000	23	25
		1	575	13.8	47,100		
		1	600	15.0	51,200		
22.5 kW	EHA100-22.5 208/230v **(32L95)** 460v **(32L96)** 575v **(32L97)** 38 lbs. (17 kg)	‡2	208	16.9	57,700	73	77
		‡2	220	18.9	64,500		
		‡2	230	20.7	70,700		
		‡2	240	22.5	76,800	82	86
		‡2	440	18.9	64,500		
		‡2	460	20.7	70,700		
		‡2	480	22.5	76,800	41	43
		‡2	550	18.9	64,500		
		‡2	575	20.7	70,700		
		‡2	600	22.5	76,800	33	34
30 kW	EHA100-30 208/230v **(16L14)** 460v **(16L15)** 575v **(16L16)** 38 lbs. (17 kg)	‡2	208	22.5	76,800	91	95
		‡2	220	25.2	86,000	103	107
		‡2	230	27.5	93,900		
		‡2	240	30.0	102,400		
		‡2	440	25.2	86,000	51	53
		‡2	460	27.5	93,900		
		‡2	480	30.0	102,400		
		‡2	550	25.2	86,000	41	43
		‡2	575	27.5	93,900		
		‡2	600	30.0	102,400		
45 kW	EHA100-45 208/230v **(16L17)** 460v **(16L18)** 575v **(16L19)** 42 lbs. (19 kg)	‡2	208	33.8	115,300	130	133
		‡2	220	37.8	129,000	148	152
		‡2	230	41.3	141,000		
		‡2	240	45.0	153,600		
		‡2	440	37.8	129,000	74	76
		‡2	460	41.3	141,000		
		‡2	480	45.0	153,600		
		‡2	550	37.8	129,000	59	61
		‡2	575	41.3	141,000		
		‡2	600	45.0	153,600		

NOTE - (H) indicates high efficiency units. (S) indicates standard efficiency units.
†Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).
‡May be used with two stage control.
NOTE — Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in unit with field installed heaters. Also requires LTB2 Terminal Block.

TABLE 9

LCA150

kW Size Required	Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	*Total Unit (with Power Exhaust Fan) & Electric Heat Minimum Circuit Ampacity		
						2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
15 kW	EHA150-15 208/230v **(99J04)** 460v **(99J05)** 575v **(99J06)** 31 lbs. (14 kg)	1	208	11.3	38,600	57	60	66
		1	220	12.6	43,000			
		1	230	13.8	47,100			
		1	240	15.0	51,200			
		1	440	12.6	43,000	28	29	32
		1	460	13.8	47,100			
		1	480	15.0	51,200			
		1	550	12.6	43,000	23	24	26
		1	575	13.8	47,100			
		1	600	15.0	51,200			
22.5 kW	EHA360-22.5 208/230v **(99J28)** 460v **(99J29)** 575v **(99J30)** 38 lbs. (17 kg)	**2	208	16.9	57,700	73	77	85
		**2	220	18.9	64,500	82	86	94
		**2	230	20.7	70,700			
		**2	240	22.5	76,800			
		**2	440	18.9	64,500	41	43	46
		**2	460	20.7	70,700			
		**2	480	22.5	76,800			
		**2	550	18.9	64,500	33	34	37
		**2	575	20.7	70,700			
		**2	600	22.5	76,800			
30 kW	EHA150-30 208/230v **(99J07)** 460v **(99J08)** 575v **(99J09)** 38 lbs. (17 kg)	**2	208	22.5	76,800	91	95	102
		**2	220	25.2	86,000	103	106	114
		**2	230	27.5	93,900			
		**2	240	30.0	102,400			
		**2	440	25.2	86,000	51	53	56
		**2	460	27.5	93,900			
		**2	480	30.0	102,400			
		**2	550	25.2	86,000	41	42	45
		**2	575	27.5	93,900			
		**2	600	30.0	102,400			
45 kW	EHA150-45 208/230v **(99J10)** 460v **(99J11)** 575v **(99J12)** 42 lbs. (19 kg)	**2	208	33.8	115,300	130	133	141
		**2	220	37.8	129,000	148	151	159
		**2	230	41.3	141,000			
		**2	240	45.0	153,600			
		**2	440	37.8	129,000	74	75	78
		**2	460	41.3	141,000			
		**2	480	45.0	153,600			
		**2	550	37.8	129,000	59	61	63
		**2	575	41.3	141,000			
		**2	600	45.0	153,600			
60 kW	EHA150-60 208/230v **(99J13)** 460v **(99J14)** 575v **(99J15)** 49 lbs. (22 kg)	**2	208	45.0	153,600	138	141	149
		**2	220	50.4	172,000	157	161	168
		**2	230	55.1	188,000			
		**2	240	60.0	204,800			
		**2	440	50.4	172,000	78	80	83
		**2	460	55.1	188,000			
		**2	480	60.0	204,800			
		**2	550	50.4	172,000	62	64	67
		**2	575	55.1	188,000			
		**2	600	60.0	204,800			

*Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).
**May be used with two stage control.
NOTE — Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in unit with field installed heaters. Also requires LTB2 Terminal Block.

TABLE 10

LHA088S							
kW Size Required	Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	†Total Unit (with Power Exhaust Fan) & Electric Heat Minimum Circuit Ampacity	
						2 hp (1.5 kW)	3 hp (2.2 kW)
7.5 kW	EHA100-7.5 208/230v **(16L08)** 460v **(16L09)** 575v **(16L10)** 31 lbs. (14 kg)	1	208	5.6	19,100	72	75
		1	220	6.3	21,500		
		1	230	6.9	23,600		
		1	240	7.5	25,600		
		1	440	6.9	21,500	36	38
		1	460	6.9	23,600		
		1	480	7.5	25,600		
		1	550	6.3	21,500	28	29
		1	575	6.9	23,600		
		1	600	7.5	25,600		
15 kW	EHA100-15 208/230v **(16L11)** 460v **(16L12)** 575v **(16L13)** 31 lbs. (14 kg)	1	208	11.3	38,600	95	98
		1	220	12.6	43,000		
		1	230	13.8	47,100		
		1	240	15.0	51,200		
		1	440	12.6	43,000	48	49
		1	460	13.8	47,100		
		1	480	15.0	51,200		
		1	550	12.6	43,000	37	39
		1	575	13.8	47,100		
		1	600	15.0	51,200		
22.5 kW	EHA100-22.5 208/230v **(32L95)** 460v **(32L96)** 575v **(32L97)** 38 lbs. (17 kg)	‡2	208	16.9	57,700	108	112
		‡2	220	18.9	64,500	117	121
		‡2	230	20.7	70,700		
		‡2	240	22.5	76,800		
		‡2	440	18.9	64,500	59	61
		‡2	460	20.7	70,700		
		‡2	480	22.5	76,800		
		‡2	550	18.9	64,500	47	48
		‡2	575	20.7	70,700		
		‡2	600	22.5	76,800		
30 kW	EHA100-30 208/230v **(16L14)** 460v **(16L15)** 575v **(16L16)** 38 lbs. (17 kg)	‡2	208	22.5	76,800	128	131
		‡2	220	25.2	86,000	140	143
		‡2	230	27.5	93,900		
		‡2	240	30.0	102,400		
		‡2	440	25.2	86,000	70	72
		‡2	460	27.5	93,900		
		‡2	480	30.0	102,400		
		‡2	550	25.2	86,000	55	56
		‡2	575	27.5	93,900		
		‡2	600	30.0	102,400		
45 kW	EHA100-45 208/230v **(16L17)** 460v **(16L18)** 575v **(16L19)** 42 lbs. (19 kg)	‡2	208	33.8	115,300	167	170
		‡2	220	37.8	129,000	185	188
		‡2	230	41.3	141,000		
		‡2	240	45.0	153,600		
		‡2	440	37.8	129,000	93	94
		‡2	460	41.3	141,000		
		‡2	480	45.0	153,600		
		‡2	550	37.8	129,000	73	74
		‡2	575	41.3	141,000		
		‡2	600	45.0	153,600		

NOTE - (H) indicates high efficiency units. (S) indicates standard efficiency units.

†Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

‡May be used with two stage control.

NOTE — Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in unit with field installed heaters. Also requires LTB2 Terminal Block.

TABLE 11

7.5 TON - LHA090H

[1] REQUIRES UNIT FUSE BLOCK AND TERMINAL BLOCK

Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	[2] Minimum Circuit Ampacity Total Unit + Electric Heat (with Power Exhaust Fans)			[3] Maximum Overcurrent Protection Total Unit + Electric Heat (with Power Exhaust Fans)		
					2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)	2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
7.5 kW Heat	1	208	5.6	19,100	66	69	75	70	70	80
EHA102-7.5	1	220	6.3	21,500						
	1	230	6.9	23,600						
208/230V **99J01**	1	240	7.5	25,600						
	1	440	6.3	21,500	33	35	38	35	35	40
460V **99J02**	1	460	6.9	23,600						
	1	480	7.5	25,600						
575V **99J03**	1	550	6.3	21,500	26	27	29	30	30	30
	1	575	6.9	23,600						
31 lbs. (14 kg)	1	600	7.5	25,600						
15 kW	1	208	11.3	38,600	88	91	97	90	100	100
EHA150-15	1	220	12.6	43,000						
	1	230	13.8	47,100						
208/230V **99J04**	1	240	15.0	51,200						
	1	440	12.6	43,000	45	46	49	45	50	50
460V **99J05**	1	460	13.8	47,100						
	1	480	15.0	51,200						
575V **99J06**	1	550	12.6	43,000	35	36	38	35	40	40
	1	575	13.8	47,100						
31 lbs. (14 kg)	1	600	15.0	51,200						
22.5 kW	[4] 2	208	16.9	57,700	111	114	120	125	125	125
EHA360-22.5	[4] 2	220	18.9	64,500						
	[4] 2	230	20.6	70,700						
208/230V **99J28**	[4] 2	240	22.5	76,800						
	[4] 2	440	18.9	64,500	56	57	60	60	60	60
460V **99J29**	[4] 2	460	20.7	70,700						
	[4] 2	480	22.5	76,800						
575V **99J30**	[4] 2	550	19.0	64,500	44	45	47	45	45	50
	[4] 2	575	20.7	70,700						
38 lbs. (17 kg)	[4] 2	600	22.5	76,800						
30 kW	[4] 2	208	22.5	76,800	133	136	143	150	150	150
EHA150-30	[4] 2	220	25.2	86,000						
	[4] 2	230	27.6	93,900						
208/230V **99J07**	[4] 2	240	30.0	102,400						
	[4] 2	440	25.2	86,000	67	69	72	70	70	80
460V **99J08**	[4] 2	460	27.6	93,900						
	[4] 2	480	30.0	102,400						
575V **99J09**	[4] 2	550	25.2	86,000	53	54	56	60	60	60
	[4] 2	575	27.6	93,900						
38 lbs. (17 kg)	[4] 2	600	30.0	102,400						
45 kW	[4] 2	208	33.8	115,300	178	182	188	200	200	200
EHA150-45	[4] 2	220	37.8	129,000						
	[4] 2	230	41.3	141,000						
208/230V **99J10**	[4] 2	240	45.0	153,600						
	[4] 2	440	37.8	129,000	90	91	94	100	100	100
460V **99J11**	[4] 2	460	41.3	141,000						
	[4] 2	480	45.0	153,600						
575V **99J12**	[4] 2	550	37.8	129,000	71	72	75	80	80	80
	[4] 2	575	41.3	141,000						
42 lbs. (19 kg)	[4] 2	600	45.0	153,600						

NOTE - Circuit breaker option is available on any unit configuration with Maximum Overcurrent Protection of 150A or less.

[1] Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in field installed heaters. Also requires LTB2 Terminal Block. See Optional Electric Heat Accessories tables.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

[3] HACR type breaker or fuse.

[4] May be used with two stage control.

TABLE 12

8.5 TON - LHA102H

[1] REQUIRES UNIT FUSE BLOCK AND TERMINAL BLOCK

Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	[2] Total Unit + Electric Heat Minimum Circuit Ampacity (with Power Exhaust Fans)			[3] Total Unit + Electric Heat Maximum Fuse Size (with Power Exhaust Fans)		
					2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)	2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
7.5 kW Heat	1	208	5.6	19,100						
EHA102-7.5	1	220	6.3	21,500	71	74	80	80	80	90
	1	230	6.9	23,600						
208/230V **99J01**	1	240	7.5	25,600						
	1	440	6.9	21,500						
460V **99J02**	1	460	6.9	23,600	35	36	39	35	40	40
	1	480	7.5	25,600						
575V **99J03**	1	550	6.3	21,500						
	1	575	6.9	23,600	27	28	30	30	30	30
31 lbs. (14 kg)	1	600	7.5	25,600						
15 kW	1	208	11.3	38,600						
EHA150–15	1	220	12.6	43,000	93	96	103	100	100	110
	1	230	13.8	47,100						
208/230V **99J04**	1	240	15.0	51,200						
	1	440	12.6	43,000						
460V **99J05**	1	460	13.8	47,100	46	48	51	50	50	60
	1	480	15.0	51,200						
575V **99J06**	1	550	12.6	43,000						
	1	575	13.8	47,100	36	37	39	40	40	40
31 lbs. (14 kg)	1	600	15.0	51,200						
22.5 kW	[4] 2	208	16.9	57,700						
EHA360–22.5	[4] 2	220	18.9	64,500	116	119	125	125	125	125
	[4] 2	230	20.7	70,700						
208/230V **99J28**	[4] 2	240	22.5	76,800						
	[4] 2	440	18.9	64,500						
460V **99J29**	[4] 2	460	20.7	70,700	58	59	62	60	60	70
	[4] 2	480	22.5	76,800						
575V **99J30**	[4] 2	550	18.9	64,500						
	[4] 2	575	20.7	70,700	45	46	48	45	50	50
38 lbs. (17 kg)	[4] 2	600	22.5	76,800						
30 kW	[4] 2	208	22.5	76,800						
EHA150–30	[4] 2	220	25.2	86,000	138	142	148	150	150	150
	[4] 2	230	27.5	93,900						
208/230V **99J07**	[4] 2	240	30.0	102,400						
	[4] 2	440	25.2	86,000						
460V **99J08**	[4] 2	460	27.5	93,900	69	70	73	70	70	80
	[4] 2	480	30.0	102,400						
575V **99J09**	[4] 2	550	25.2	86,000						
	[4] 2	575	27.5	93,900	54	55	57	60	60	60
38 lbs. (17 kg)	[4] 2	600	30.0	102,400						
45 kW	[4] 2	208	33.8	115,300						
EHA150–45	[4] 2	220	37.8	129,000	184	187	193	200	200	200
	[4] 2	230	41.3	141,000						
208/230V **99J10**	[4] 2	240	45.0	153,600						
	[4] 2	440	37.8	129,000						
460V **99J11**	[4] 2	460	41.3	141,000	91	93	96	100	100	100
	[4] 2	480	45.0	153,600						
575V **99J12**	[4] 2	550	37.8	129,000						
	[4] 2	575	41.3	141,000	72	73	75	80	80	80
42 lbs. (19 kg)	[4] 2	600	45.0	153,600						

NOTE - Circuit breaker option is available on any unit configuration with Maximum Overcurrent Protection of 150A or less.

[1] Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in field installed heaters. Also requires LTB2 Terminal Block. See Optional Electric Heat Accessories tables.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

[3] HACR type breaker or fuse.

[4] May be used with two stage control.

TABLE 13

10 TON - LHA120H

[1] REQUIRES UNIT FUSE BLOCK AND TERMINAL BLOCK

Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	[2] Minimum Circuit Ampacity Total Unit + Electric Heat (with Power Exhaust Fans)			[3] Maximum Overcurrent Protection Total Unit + Electric Heat (with Power Exhaust Fans)		
					2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)	2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
15 kW	1	208	11.3	38,600						
EHA150-15	1	220	12.6	43,000	99	102	108	100	110	110
	1	230	13.8	47,100						
208/230V **99J04**	1	240	15.0	51,200						
	1	440	12.6	43,000						
460V **99J05**	1	460	13.8	47,100	51	52	55	60	60	60
	1	480	15.0	51,200						
575V **99J06**	1	550	12.6	43,000						
	1	575	13.8	47,100	40	41	44	40	45	45
31 lbs. (14 kg)	1	600	15.0	51,200						
22.5 kW	[4] 2	208	16.9	57,700						
EHA360-22.5	[4] 2	220	18.9	64,500	122	125	131	125	125	150
	[4] 2	230	20.7	70,700						
208/230V **99J28**	[4] 2	240	22.5	76,800						
	[4] 2	440	18.9	64,500						
460V **99J29**	[4] 2	460	20.7	70,700	62	63	66	70	70	70
	[4] 2	480	22.5	76,800						
575V **99J30**	[4] 2	550	18.9	64,500						
	[4] 2	575	20.7	70,700	49	50	53	50	50	60
38 lbs. (17 kg)	[4] 2	600	22.5	76,800						
30 kW	[4] 2	208	22.5	76,800						
EHA150-30	[4] 2	220	25.2	86,000	144	147	154	150	150	175
	[4] 2	230	27.5	93,900						
208/230V **99J07**	[4] 2	240	30.0	102,400						
	[4] 2	440	25.2	86,000						
460V **99J08**	[4] 2	460	27.5	93,900	73	75	77	80	80	80
	[4] 2	480	30.0	102,400						
575V **99J09**	[4] 2	550	25.2	86,000						
	[4] 2	575	27.5	93,900	58	59	62	60	60	70
38 lbs. (17 kg)	[4] 2	600	30.0	102,400						
45 kW	[4] 2	208	33.8	115,300						
EHA150-45	[4] 2	220	37.8	129,000	189	193	199	200	200	200
	[4] 2	230	41.3	141,000						
208/230V **99J10**	[4] 2	240	45.0	153,600						
	[4] 2	440	37.8	129,000						
460V **99J11**	[4] 2	460	41.3	141,000	96	97	100	100	100	100
	[4] 2	480	45.0	153,600						
575V **99J12**	[4] 2	550	37.8	129,000						
	[4] 2	575	41.3	141,000	76	78	80	80	80	80
42 lbs. (19 kg)	[4] 2	600	45.0	153,600						
60 kW	[4] 2	208	45.0	153,600						
EHA150-60	[4] 2	220	50.4	172,000	198	202	208	200	225	225
	[4] 2	230	55.1	188,000						
208/230V **99J13**	[4] 2	240	60.0	204,800						
	[4] 2	440	50.4	172,000						
460V **99J14**	[4] 2	460	55.1	188,000	100	102	104	100	110	110
	[4] 2	480	60.0	204,800						
575V **99J15**	[4] 2	550	50.4	172,000						
	[4] 2	575	55.1	188,000	80	81	83	80	90	90
49 lbs. (22 kg)	[4] 2	600	60.0	204,800						

NOTE - Circuit breaker option is available on any unit configuration with Maximum Overcurrent Protection of 150A or less.

[1] Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in field installed heaters. Also requires LTB2 Terminal Block. See Optional Electric Heat Accessories tables.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

[3] HACR type breaker or fuse.

[4] May be used with two stage control.

TABLE 14

12.5 TON - LHA150S

[1] REQUIRES UNIT FUSE BLOCK AND TERMINAL BLOCK

Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	[2] Total Unit + Electric Heat Minimum Circuit Ampacity (with Power Exhaust Fans)			[3] Total Unit + Electric Heat Maximum Fuse Size (with Power Exhaust Fans)		
					2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)	2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
15 kW	1	208	11.3	38,600						
EHA150–15	1	220	12.6	43,000	104	107	113	110	110	125
	1	230	13.8	47,100						
208/230V **99J04**	1	240	15.0	51,200						
	1	440	12.6	43,000						
460V **99J05**	1	460	13.8	47,100	51	52	55	60	60	60
	1	480	15.0	51,200						
575V **99J06**	1	550	12.6	43,000						
	1	575	13.8	47,100	41	42	44	45	45	45
31 lbs. (14 kg)	1	600	15.0	51,200						
22.5 kW	[4] 2	208	16.9	57,700						
EHA360–22.5	[4] 2	220	18.9	64,500	126	129	135	150	150	150
	[4] 2	230	20.7	70,700						
208/230V **99J28**	[4] 2	240	22.5	76,800						
	[4] 2	440	18.9	64,500						
460V **99J29**	[4] 2	460	20.7	70,700	62	63	66	70	70	70
	[4] 2	480	22.5	76,800						
575V **99J30**	[4] 2	550	18.9	64,500						
	[4] 2	575	20.7	70,700	50	51	53	50	60	60
38 lbs. (17 kg)	[4] 2	600	22.5	76,800						
30 kW	[4] 2	208	22.5	76,800						
EHA150–30	[4] 2	220	25.2	86,000	149	152	158	150	175	175
	[4] 2	230	27.5	93,900						
208/230V **99J07**	[4] 2	240	30.0	102,400						
	[4] 2	440	25.2	86,000						
460V **99J08**	[4] 2	460	27.5	93,900	73	75	77	80	80	80
	[4] 2	480	30.0	102,400						
575V **99J09**	[4] 2	550	25.2	86,000						
	[4] 2	575	27.5	93,900	59	60	62	60	60	70
38 lbs. (17 kg)	[4] 2	600	30.0	102,400						
45 kW	[4] 2	208	33.8	115,300						
EHA150-45	[4] 2	220	37.8	129,000	194	197	203	200	200	225
	[4] 2	230	41.3	141,000						
208/230V **99J10**	[4] 2	240	45.0	153,600						
	[4] 2	440	37.8	129,000						
460V **99J11**	[4] 2	460	41.3	141,000	96	97	100	100	100	100
	[4] 2	480	45.0	153,600						
575V **99J12**	[4] 2	550	37.8	129,000						
	[4] 2	575	41.3	141,000	77	78	80	80	80	80
42 lbs. (19 kg)	[4] 2	600	45.0	153,600						
60 kW	[4] 2	208	45.0	153,600						
EHA150–60	[4] 2	220	50.4	172,000	203	206	212	225	225	225
	[4] 2	230	55.1	188,000						
208/230V **99J13**	[4] 2	240	60.0	204,800						
	[4] 2	440	50.4	172,000						
460V **99J14**	[4] 2	460	55.1	188,000	100	102	104	100	110	110
	[4] 2	480	60.0	204,800						
575V **99J15**	[4] 2	550	50.4	172,000						
	[4] 2	575	55.1	188,000	81	82	84	90	90	90
49 lbs. (22 kg)	[4] 2	600	60.0	204,800						

NOTE - Circuit breaker option is available on any unit configuration with Maximum Overcurrent Protection of 150A or less.

[1] Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in field installed heaters. Also requires LTB2 Terminal Block. See Optional Electric Heat Accessories tables.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

[3] HACR type breaker or fuse.

[4] May be used with two stage control.

TABLE 15

12.5 TON - LHA150S-3 UNITS

[1] REQUIRES UNIT FUSE BLOCK AND TERMINAL BLOCK

Electric Heat Model No. & Net Weight	No. of Steps	Volts Input	kW Input	Btuh Output	[2] Total Unit + Electric Heat Minimum Circuit Ampacity (with Power Exhaust Fans)			[3] Total Unit + Electric Heat Maximum Fuse Size (with Power Exhaust Fans)		
					2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)	2 hp (1.5 kW)	3 hp (2.2 kW)	5 hp (3.7 kW)
15 kW	1	208	11.3	38,600						
EHA150–15	1	220	12.6	43,000	106	109	115	110	110	125
	1	230	13.8	47,100						
208/230V **99J04**	1	240	15.0	51,200						
	1	440	12.6	43,000						
460V **99J05**	1	460	13.8	47,100	52	54	56	60	60	60
	1	480	15.0	51,200						
575V **99J06**	1	550	12.6	43,000						
	1	575	13.8	47,100	42	43	46	45	45	50
31 lbs. (14 kg)	1	600	15.0	51,200						
22.5 kW	[4] 2	208	16.9	57,700						
EHA360–22.5	[4] 2	220	18.9	64,500	128	131	137	150	150	150
	[4] 2	230	20.7	70,700						
208/230V **99J28**	[4] 2	240	22.5	76,800						
	[4] 2	440	18.9	64,500						
460V **99J29**	[4] 2	460	20.7	70,700	63	65	68	70	70	70
	[4] 2	480	22.5	76,800						
575V **99J30**	[4] 2	550	18.9	64,500						
	[4] 2	575	20.7	70,700	51	52	55	60	60	60
38 lbs. (17 kg)	[4] 2	600	22.5	76,800						
30 kW	[4] 2	208	22.5	76,800						
EHA150–30	[4] 2	220	25.2	86,000	1151	154	160	175	175	175
	[4] 2	230	27.5	93,900						
208/230V **99J07**	[4] 2	240	30.0	102,400						
	[4] 2	440	25.2	86,000						
460V **99J08**	[4] 2	460	27.5	93,900	75	76	79	80	80	80
	[4] 2	480	30.0	102,400						
575V **99J09**	[4] 2	550	25.2	86,000						
	[4] 2	575	27.5	93,900	60	61	64	60	70	70
38 lbs. (17 kg)	[4] 2	600	30.0	102,400						
45 kW	[4] 2	208	33.8	115,300						
EHA150-45	[4] 2	220	37.8	129,000	196	199	205	200	200	225
	[4] 2	230	41.3	141,000						
208/230V **99J10**	[4] 2	240	45.0	153,600						
	[4] 2	440	37.8	129,000						
460V **99J11**	[4] 2	460	41.3	141,000	97	99	101	100	100	110
	[4] 2	480	45.0	153,600						
575V **99J12**	[4] 2	550	37.8	129,000						
	[4] 2	575	41.3	141,000	78	79	82	80	80	90
42 lbs. (19 kg)	[4] 2	600	45.0	153,600						
60 kW	[4] 2	208	45.0	153,600						
EHA150–60	[4] 2	220	50.4	172,000	205	208	214	225	225	225
	[4] 2	230	55.1	188,000						
208/230V **99J13**	[4] 2	240	60.0	204,800						
	[4] 2	440	50.4	172,000						
460V **99J14**	[4] 2	460	55.1	188,000	102	103	106	110	110	110
	[4] 2	480	60.0	204,800						
575V **99J15**	[4] 2	550	50.4	172,000						
	[4] 2	575	55.1	188,000	82	83	85	90	90	90
49 lbs. (22 kg)	[4] 2	600	60.0	204,800						

NOTE - Circuit breaker option is available on any unit configuration with Maximum Overcurrent Protection of 150A or less.

[1] Fuse block must be ordered extra. Factory installed heaters will have the fuse block factory installed. Fuse block must be installed in field installed heaters. Also requires LTB2 Terminal Block. See Optional Electric Heat Accessories tables.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F (75°C).

[3] HACR type breaker or fuse.

[4] May be used with two stage control.

II-PLACEMENT AND INSTALLATION

Make sure the unit is installed in accordance with the installation instructions and all applicable codes. See accessories section for conditions requiring use of the optional roof mounting frame (LARMF).

III-CHARGING

WARNING-Do not exceed nameplate charge under any condition.

⚠ IMPORTANT

Units equipped with Humiditro® system MUST be charged in standard cooling mode.

This unit is factory charged and should require no further adjustment. If the system requires charge, *reclaim the charge, evacuate the system,* and *add required nameplate charge.*

*NOTE - System charging is not recommended below 60°F (15°C). In temperatures below 60°F (15°C) , the charge **must** be weighed into the system.*

If weighing facilities are not available, or to check the charge, use the following procedure:

1- Attach gauge manifolds and operate unit in cooling mode until system stabilizes (approximately five minutes). Make sure outdoor air dampers are closed.

2- Check each system separately with all stages operating.

3- Use a thermometer to accurately measure the outdoor ambient temperature.

4- Apply the outdoor temperature to tables 16 through 37 to determine normal operating pressures.

5- Compare the normal operating pressures to the pressures obtained from the gauges. Minor variations in these pressures may be expected due to differences in installations. Significant differences could mean that the system is not properly charged or that a problem exists with some component in the system. **Correct any system problems before proceeding.**

6- If discharge pressure is high, remove refrigerant from the system. If discharge pressure is low, add refrigerant to the system.

- Add or remove charge in increments.
- Allow the system to stabilize each time refrigerant is added or removed.

7- Use the following approach method along with the normal operating pressures to confirm readings.

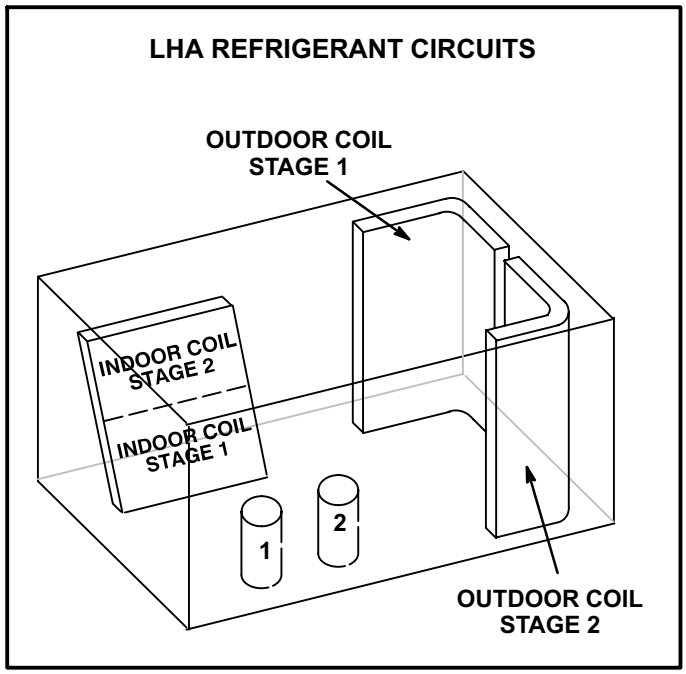

FIGURE 27

TABLE 16
LGA/LCA088S

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65_F	186	71	183	70
75_F	211	72	208	72
85_F	238	74	235	74
95_F	270	77	269	77
105_F	304	78	302	78
115_F	342	81	340	80

TABLE 17
LGA/LCA088H

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65_F	176	74	176	76
75_F	202	75	203	77
85_F	231	77	232	78
95_F	264	78	265	80
105_F	300	80	301	81
115_F	339	82	341	82

TABLE 18
LHA088

Outdoor Coil Entering Air Temp.	Discharge ± 10 psig	Suction ± 5 psig
65°F	172	68
75°F	198	70
85°F	228	72
95°F	261	73
105°F	297	74
115°F	336	77

TABLE 19
LGA/LCA090H NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dls. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	160	78	165	78
75°F	184	80	190	80
85°F	211	82	218	81
95°F	241	83	248	82
105°F	272	84	279	83
115°F	310	86	319	85

TABLE 20
LGA/LCA090H with Humiditrol

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dls. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	167	78	165	78
75°F	188	80	190	80
85°F	216	82	218	81
95°F	248	83	248	82
105°F	280	84	279	83
115°F	313	86	319	85

TABLE 21
LHA090 NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	OUTDOOR FAN CYCLES AT 65°F			
75°F	180	82	178	77
85°F	210	83	210	79
95°F	240	84	242	81
105°F	270	85	277	83
115°F	300	86	310	85

TABLE 22
LGA/LCA Series 090H R-410A Std. & Humiditrol®

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dls. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	248	129	260	134
75°F	286	133	299	136
85°F	328	136	342	139
95°F	373	140	388	141
105°F	421	143	438	144
115°F	473	147	492	146

TABLE 23
LGA/LCA100S NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65_F	185	73	185	73
75_F	212	74	213	74
85_F	241	75	242	75
95_F	275	76	277	76
105_F	312	78	314	78
115_F	352	79	355	79

TABLE 24
LHA102H NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suct. ±5 psig
65°F	156	77	154	77
75°F	185	78	185	78
85°F	215	80	216	79
95°F	244	81	247	80
105°F	273	82	277	82
115°F	303	83	309	83

TABLE 25
LGA/LCA102S NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	185	75	198	76
75°F	216	77	230	78
85°F	247	79	262	80
95°F	278	82	293	82
105°F	310	84	326	84
115°F	340	86	357	86

TABLE 26
LCA/LGA102H NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	155	78	163	78
75°F	185	79	193	79
85°F	216	80	222	80
95°F	246	81	252	82
105°F	277	82	282	84
115°F	308	83	311	85

TABLE 27
LGA/LCA102H with Humiditrol

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dls. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	166	77	163	78
75°F	192	79	193	79
85°F	221	80	222	80
95°F	252	82	252	82
105°F	285	83	282	84
115°F	323	85	311	85

TABLE 28
LGA/LCA102H R-410A Std. & Humiditrol

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suc. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	259	128	267	133
75°F	298	130	307	135
85°F	341	133	351	138
95°F	388	136	398	141
105°F	437	139	450	143
115°F	491	142	505	146

TABLE 29
LHA120 NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Dis.± 10 psig	Suct. ± 5 psig	Dis. ± 10 psig	Suct. ± 5 psig
65°F	166	77	166	75
75°F	196	78	196	76
85°F	228	80	228	78
95°F	260	82	260	79
105°F	290	84	290	81
115°F	321	85	321	82

TABLE 30
LCA/LGA120S NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	183	76	186	73
75°F	212	78	215	75
85°F	242	80	246	77
95°F	272	82	276	79
105°F	303	84	306	81
115°F	333	85	337	83

TABLE 31
LCA/LGA120H NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	166	75	172	74
75°F	197	76	203	75
85°F	227	78	233	77
95°F	258	80	264	79
105°F	288	82	295	82
115°F	320	84	326	84

TABLE 32
LCA/LGA120H with Humiditrol

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	182	78	172	74
75°F	205	77	203	75
85°F	233	77	233	77
95°F	264	79	264	79
105°F	298	80	295	82
115°F	339	83	326	84

TABLE 33
LGA/LCA120H R-410A

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suc. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	275	139	287	136
75°F	315	142	327	139
85°F	358	144	371	142
95°F	406	145	419	145
105°F	458	149	470	148
115°F	516	152	527	151

TABLE 34
LGA/LCA120H R-410A & Humiditrol

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suc. ±5 psig	Dis. ±10 psig	Suc. ±5 psig
65°F	287	139	287	136
75°F	327	142	327	139
85°F	370	144	371	142
95°F	418	145	419	145
105°F	470	149	470	148
115°F	528	152	527	151

TABLE 35
LGA/LCA150S NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp.	CIRCUIT 1		CIRCUIT 2	
	Discharge ± 10 psig	Suction ± 5 psig	Discharge ± 10 psig	Suction ± 5 psig
65°F	183	65	187	66
75°F	215	68	219	69
85°F	248	71	252	72
95°F	281	74	285	74
105°F	313	77	317	77
115°F	347	79	350	80

TABLE 36
LHA150S NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suct. ±5 psig
65°F	150	77	148	76
75°F	178	78	176	77
85°F	207	80	208	79
95°F	236	81	240	81
105°F	266	83	270	83
115°F	295	84	300	84

TABLE 37
LHA150S-3 units NORMAL OPERATING PRESSURES

Outdoor Coil Entering Air Temp	CIRCUIT 1		CIRCUIT 2	
	Dis. ±10 psig	Suct. ±5 psig	Dis. ±10 psig	Suct. ±5 psig
65°F	169	66	182	69
75°F	196	71	212	74
85°F	226	75	244	76
95°F	258	77	277	78
105°F	293	80	314	79
115°F	331	81	352	80

Charge Verification - Approach Method

8- Using the same thermometer, compare liquid temperature to outdoor ambient temperature.

Approach Temperature = Liquid temperature minus ambient temperature.

9- Approach temperature should match values in tables 38, 39 or 40. An approach temperature greater than value shown indicates an undercharge. An approach temperature less than value shown indicates an overcharge.

10- Do not use the approach method if system pressures do not match pressures in tables 16 through 37. The approach method is not valid for grossly over or undercharged systems.

TABLE 38
APPROACH TEMPERATURES

LHA Unit	Liquid Temp. Minus Ambient Temp.	
	1st Stage	2nd Stage
088S	15°F ± 1 (8°C ± 0.5)	N/A
090H	8°F ± 1 (4.4°C ± 0.5)	8°F ± 1 (4.4°C ± 0.5)
102H	10°F ± 1 (5.6°C ± 0.5)	10°F ± 1 (5.6°C ± 0.5)
120H	10°F ± 1 (5.6°C ± 0.5)	11°F ± 1 (6.1°C ± 0.5)
150S	11°F ± 1 (6.1°C ± 0.5)	11°F ± 1 (6.1°C ± 0.5)
150S-3	13°F ± 1 (7.2°C ± 0.5)	13°F ± 1 (7.2°C ± 0.5)

TABLE 39

LGA/ LCAUnit	APPROACH TEMPERATURE	
	Liquid Temp. Minus Ambient Temp.	
	1st Stage	2nd Stage
088S	8°F±1 (4.4°C±0.5)	9°F±1 (5°C±0.5)
088H	7°F±1 (3.9°C±0.5)	8°F±1 (4.4°C±0.5)
090H	7°F±1 (3.8°C±0.5)	7°F±1 (3.8°C±0.5)
100S	9°F±1 (5°C±0.5)	10°F±1 (5.6°C±0.5)
102S	9°F±1 (5°C±0.5)	14°F±1 (7.7°C±0.5)
102H	8°F±1 (4.4°C±0.5)	8°F±1 (4.4.8°C±0.5)
120S	11°F±1 (6.1°C±0.5)	13°F±1 (7.1°C±0.5)
120H	9°F±1 (5.0°C±0.5)	9°F±1 (5.0°C±0.5)
150S	7°F±1 (3.8°C±0.5)	7°F±1 (3.8°C±0.5)

TABLE 40
Humiditrol Units

LGA/LCAUnit	APPROACH TEMPERATURE	
	Liquid Temp. Minus Ambient Temp.	
	1st Stage	2nd Stage
090H	4°F±1 (2.2°C±0.5)	7°F±1 (3.8°C±0.5)
102H	5°F±1 (2.7°C±0.5)	8°F±1 (4.4°C±0.5)
120H	5°F±1 (2.7°C±0.5)	7°F±1 (3.8°C±0.5)
R-410A		
090H Std. & Humiditrol	8°F ± 1 (4.4°C ± 0.5)	7°F ± 1 (3.9°C ± 0.5)
102H Std. & Humiditrol	4°F ± 1 (2.2°C ± 0.5)	6°F ± 1 (3.3°C ± 0.5)
120H	7°F ± 1 (3.8°C ± 0.5)	10°F ± 1 (5.5°C ± 0.5)
120H Humiditrol	5°F±1 (2.7°C±0.5)	10°F±1 (5.5°C±0.5)

IV-STARTUP - OPERATION

Refer to startup directions and refer closely to the unit wiring diagram when servicing. See unit nameplate for minimum circuit ampacity and maximum fuse size.

A-Preliminary and Seasonal Checks

1- Make sure the unit is installed in accordance with the installation instructions and applicable codes.

2- Inspect all electrical wiring, both field and factory installed for loose connections. Tighten as required. Refer to unit diagram located on inside of unit control box cover.

3- Check to ensure that refrigerant lines are in good condition and do not rub against the cabinet or other refrigerant lines.

4- Check voltage at the disconnect switch. Voltage must be within the range listed on the nameplate. If not, consult the power company and have the voltage corrected before starting the unit.

5- Recheck voltage and amp draw with unit running. If voltage is not within range listed on unit nameplate, stop unit and consult power company. Refer to unit nameplate for maximum rated load amps.

6- Inspect and adjust blower belt (see section on Blower Compartment - Blower Belt Adjustment).

B-Cooling Startup LGA/LCA

NOTE-Crankcase heaters must be energized 24 hours before attempting to start compressor. Set thermostat so that there is no demand to prevent compressor from cycling. Apply power to unit.

1- Initiate first and second stage cooling demands according to instructions provided with thermostat.

2- First-stage thermostat demand will energize compressor 1. Second-stage thermostat demand will energize compressor 2. On units with an economizer, when outdoor air is acceptable, a first-stage demand will energize the economizer; a second-stage demand will energize compressor 1.

3- Units contain two refrigerant circuits or stages. See figure 28.

4- Each refrigerant circuit is separately charged with R-22 refrigerant. See unit rating plate for correct amount of charge.

5- Refer to Cooling Operation and Adjustment section for proper method to check refrigerant charge.

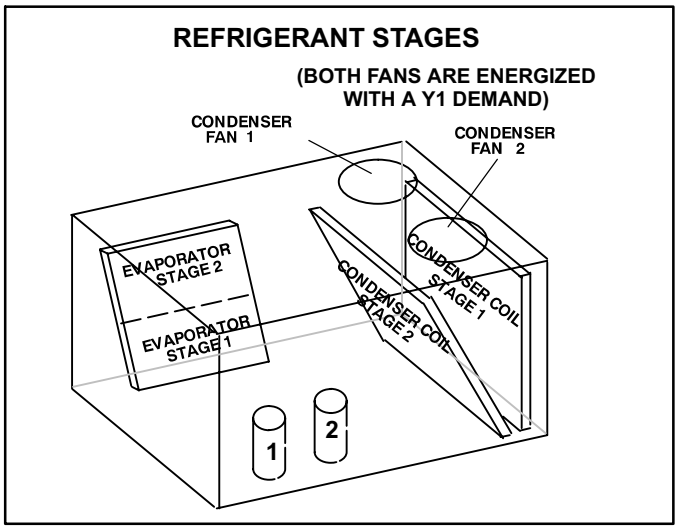

FIGURE 28

Three Phase Scroll Compressor Voltage Phasing

Three phase scroll compressors must be phased sequentially to ensure correct compressor and blower rotation and operation. Compressor and blower are wired in phase at the factory. Power wires are color-coded as follows: line 1-red, line 2-yellow, line 3-blue.

1- Observe suction and discharge pressures and blower rotation on unit start-up.

2- Suction pressure must drop, discharge pressure must rise, and blower rotation must match rotation marking.

If pressure differential is not observed or blower rotation is not correct:

3- Disconnect all remote electrical power supplies.

4- Reverse any two field-installed wires connected to the line side of S48 disconnect or TB13 terminal strip. Do not reverse wires at blower contactor.

5- Make sure the connections are tight.

Discharge and suction pressures should operate at their normal start-up ranges.

C-Cooling Startup LHA

NOTE-Crankcase heaters must be energized 24 hours before attempting to start compressor. Set thermostat so that there is no demand to prevent compressor from cycling. Apply power to unit.

1- Set thermostat or temperature control device fan switch to **AUTO** or **ON.** Set thermostat or temperature control device to initiate a first-stage cooling demand. A Y1 cooling demand will energize compressor B1.
Units With Optional Economizer -
The optional economizer will start on a first stage (Y1) cooling demand when outdoor air enthalpy is suitable. An increased cooling demand (Y2) will energize compressor B2.

2- Refrigerant circuit is factory charged with R-22 refrigerant. See unit rating plate for correct amount of charge.

D-Heating Startup LGA

FOR YOUR SAFETY READ BEFORE LIGHTING

⚠ WARNING

Electric shock hazard. Can cause injury or death. Do not use this furnace if any part has been under water. Immediately call a qualified service technician to inspect the furnace and to replace any part of the control system and any gas control which has been under water.

⚠ WARNING

Danger of explosion. Can cause injury or product or property damage. If overheating occurs or if gas supply fails to shut off, shut off the manual gas valve to the appliance before shutting off electrical supply.

BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, do not try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.

⚠ WARNING

Danger of explosion. Can cause injury or death. Do not attempt to light manually. Unit has a direct spark ignition system.

This unit is equipped with an automatic spark ignition system. There is no pilot. In case of a safety shutdown, move thermostat switch to **OFF** and return the thermostat switch to **HEAT** to reset ignition control.

1-Placing Furnace In Operation

Gas Valve Operation for White Rodgers 36C and Honeywell VR8205Q/VR8305Q (figure 29)

1- Set thermostat to lowest setting.
2- Turn off all electrical power to appliance.
3- This appliance is equipped with an ignition device which automatically lights the burner. Do **not** try to light the burner by hand.
4- Open or remove the heat section access panel.
5- Turn the knob on the gas valve clockwise ↷ to **"OFF"**. Depress 36C knob slightly. Do not force.
6- Wait five (5) minutes to clear out any gas. If you then smell gas, **STOP!** Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you do not smell gas, go to the next step.

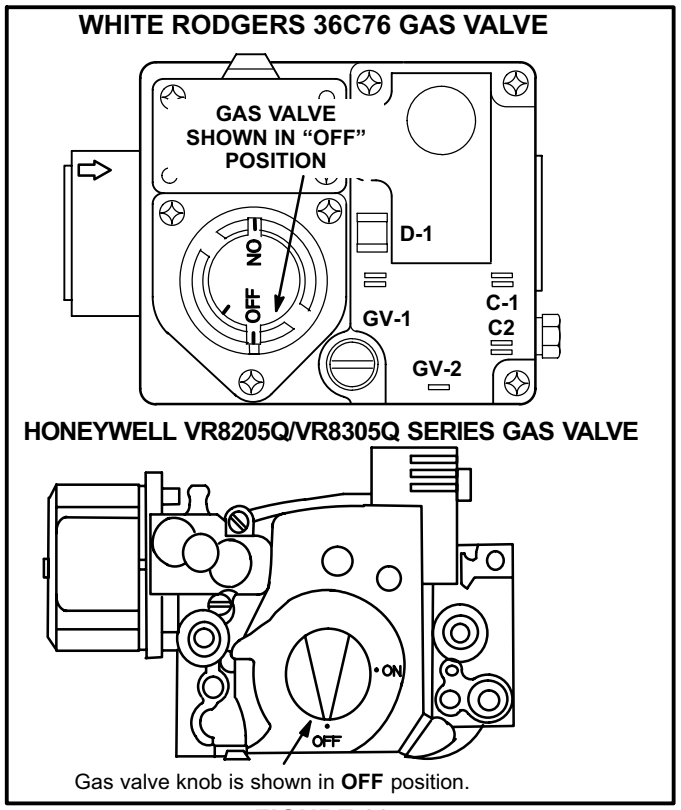

FIGURE 29

7- Turn the knob on the gas valve counterclockwise ↶ to **"ON"**. Do not force.
8- Close or replace the heat section access panel.
9- Turn on all electrical power to appliance.
10- Set thermostat to desired setting.
11- The combustion air inducer will start. The burners will light within 40 seconds.
12- If the appliance does not light the first time (gas line not fully purged), it will attempt up to two more ignitions before locking out.
13- If lockout occurs, repeat steps 1 through 10.
14- If the appliance will not operate, follow the instructions "Turning Off Gas to Appliance" and call your service technician or gas supplier.

Turning Off Gas to Appliance

1- If using an electromechanical thermostat, set to the lowest setting.
2- Before performing any service, turn off all electrical power to the appliance.
3- Open or remove the heat section access panel.
4- Turn the knob on the gas valve clockwise ↷ to **"OFF"**. Depress 36C knob slightly. Do not force.

E-Heating Startup LHA

1- Set thermostat or temperature control device to initiate a first-stage heating demand.

A first-stage heating demand (W1) will energize compressor. Outdoor fan is energized with a W1 demand.

LHA Units With Optional Electric Heat -

An increased heating demand (W2) will energize electric heat.

F-Safety or Emergency Shutdown

Turn off power to the unit.

V- SYSTEMS SERVICE CHECKS

A-LGA Heating System Service Checks

All LGA units are A.G.A and C.G.A. design certified without modification.

Before checking piping, check with gas company or authorities having jurisdiction for local code requirements. Refer to the LGA Installation, Operation and Adjustments instruction for more information.

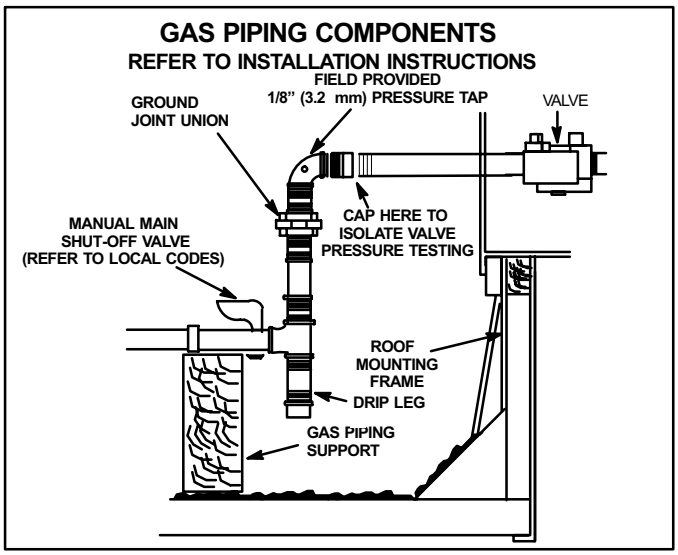

FIGURE 30

1-Gas Piping

Gas supply piping must not allow more than 0.5"W.C. (124.3 Pa) drop in pressure between the gas meter and the unit. Supply gas pipe must not be smaller than the unit gas connection. Refer to installation instructions for details.

2-Testing Gas Piping

NOTE-In case emergency shutdown is required, turn off the main manual shut-off valve and disconnect the main power to the unit. These controls should be properly labeled by the installer.

When pressure testing gas lines, the gas valve must be disconnected and isolated. **Gas valves can be damaged if subjected to more than 0.5 psig [14"W.C. (3481 Pa)].** See figure 30.

When checking piping connection for gas leaks, use the preferred means. Common kitchen detergents can cause harmful corrosion on various metals used in gas piping. The use of specialty Gas Leak Detector is strongly recommended. It is available through Lennox under part number 31B2001.

Do not use matches, candles, flame or any other source of ignition to check for gas leaks.

3-Testing Gas Supply Pressure

When testing gas supply pressure, connect test gauge to the inlet pressure tap (field provided - figure 30). Test supply gas pressure with unit firing at maximum rate (both stages energized). Make sure the reading falls within the range of the following values. Low pressure may result in erratic operation or “underfire.” High pressure can result in permanent damage to the gas valve or “overfire.” For natural gas units, operating pressure at the unit gas connection must be between 4.7”W.C. and 10.5”W.C. (1168 Pa and 2610 Pa) For L.P. gas units, operating pressure at the unit gas connection must be between 10.8”W.C. and 13.5”W.C. (2685.3 Pa and 3356.7 Pa).

On multiple unit installations, each unit should be checked separately while operating at maximum rate, beginning with the one closest to the supply gas main and progressing to the one furthest from the main. Multiple units should also be tested with and without the other units operating. Supply pressure must fall within the range listed in the previous paragraph.

4-Check and Adjust Manifold Pressure

After line pressure has been checked and adjusted, check manifold pressure. Move test gauge to the outlet pressure tap located on unit gas valve GV1. See figure 22 for location of pressure tap on the gas valve.

The manifold pressure is factory set and should not require adjustment. If manifold pressure is incorrect and no other source of improper manifold pressure can be found, the valve must be replaced. White-Rodgers gas valve can be adjusted for high fire only. Honeywell valves are adjustable for both high and low fire. Refer to figure 22 for location of gas valve (manifold pressure) adjustment screw. See table 4 for factory set manifold pressure.

All gas valves are factory regulated. The gas valve should completely and immediately cycle off in the event of gas or power failure. The manual shut-off knob can be used to immediately shut off gas supply.

⚠ CAUTION

For safety, connect a shut-off valve between the manometer and the gas tap to permit shut off of gas pressure to the manometer.

Manifold Adjustment Procedure

1- Connect test gauge to the outlet pressure tap on the gas valve. Start the unit (call for second stage heat) and allow five minutes for the unit to reach steady state.

2- While waiting for the unit to stabilize, notice the flame. The flame should be stable without flashback and should not lift from the burner heads. Natural gas should burn basically blue with some clear streaks. L.P. gas should burn mostly blue with some clear yellow streaks.

3- After allowing the unit to stabilize for five minutes, record the manifold pressure and compare to the values given for gas supply pressure (above).

⚠ CAUTION

Disconnect heating demand as soon as an accurate reading has been obtained.

5-Proper Gas Flow

To check for proper gas flow to burners, determine Btuh input from unit rating plate or the gas heating capacity table on page 3. Divide this input rating by the Btuh per cubic foot of available gas. Result is the number of cubic feet per hour required. Determine the flow of gas through gas meter for two minutes and multiply by 30 to get hourly flow of gas to the burners.

NOTE - To obtain accurate reading, shut off all other gas appliances connected to meter.

6-High Altitude Derate

Natural gas units may be installed at altitudes up to 2000 feet (610m) above sea level without any modification. At altitudes above 2000 feet (610 m), units must be derated to match gas manifold pressures shown in the following table.

NOTE-This is the only permissible derate for these units.

TABLE 41

Altitude - ft. (m)	Gas Manifold Pressure - in. w.g. (kPa)
2001 - 3000 (610 - 915)	3.6 (0.90)
3001 - 4000 (915 - 1220)	3.5 (0.87)
4001 - 5000 (1220 - 1525)	3.4 (0.85)
5001 - 6000 (1525 - 1830)	3.3 (0.82)
6001 - 7000 (1830 - 2135)	3.2 (0.80)
7001 - 8000 (2135 - 2440)	3.1 (0.77)

Derate Procedure:

1- Check manifold pressure at the gas valve pressure tap with unit operating at high fire (second stage).

2- To reduce maximum input, turn regulator adjusting screw (figure 22) counterclockwise.

3- Re-check manifold pressure.

7-Inshot Burner (two styles used)

Burners are factory set for maximum air and cannot be adjusted. Always operate unit with access panel in place. A peep hole is furnished in the heating access panel for flame viewing. Natural gas should burn basically blue with some clear streaks. L.P. gas should burn mostly blue with some clear yellow streaks.

Figures 31 and 32 show how to remove burner assembly.

Turn off power to unit and shut off gas supply.

Remove two screws securing burners to burner support (figure 31). For the earlier style assembly, remove screws holding the burner support cap (figure 32).

Slide each burner off its orifice.

Clean and reassemble (reverse steps 1-3).

Be sure to secure all wires and check plumbing.

Turn on power to unit. Follow lighting instructions attached to unit and operate unit in heating mode. Check burner flames. They should be blue with yellow streaks.

8-Spark Electrode Gap

The spark electrode assembly can be removed for inspection by removing two screws securing the electrode assembly and sliding it out of unit.

For proper unit operation, electrodes must be positioned and gapped correctly.

Spark gap may be checked with appropriately sized twist drills or feeler gauges. Disconnect power to the unit and remove electrode assembly. The gap should be between 0.125" ± 0.015" (3.2 mm ± .4 mm). See figure 23.

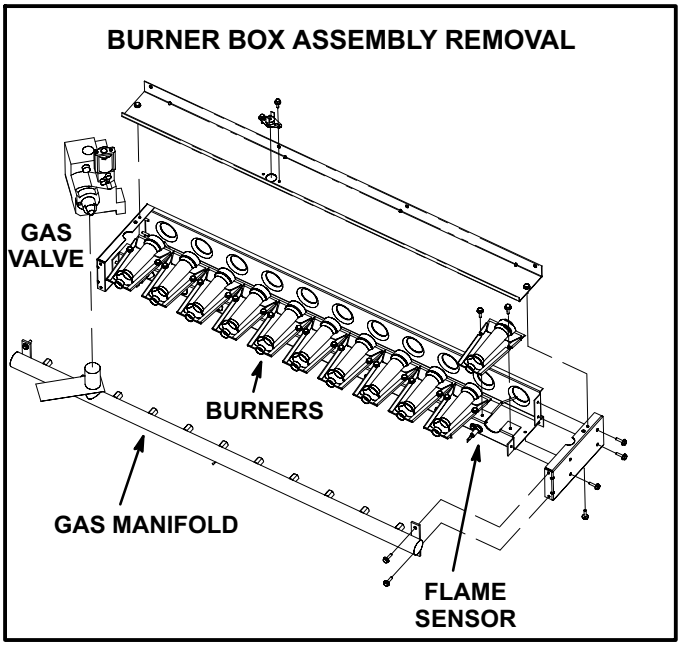

FIGURE 31

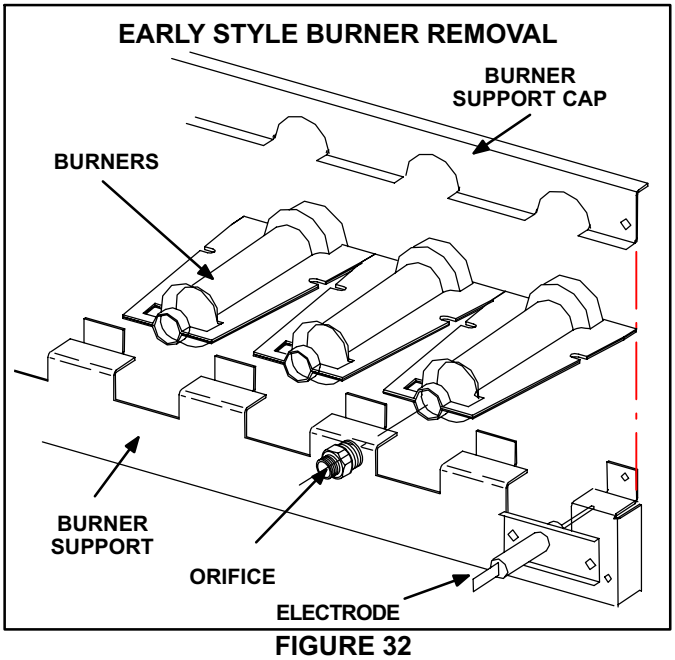

FIGURE 32

9-Heat Exchanger

To Access or Remove Heat Exchanger From Unit:

Turn off gas and electric power.

Remove access panel(s) and unit center mullion.

Remove gas valve, manifold assembly and burners.

Remove combustion air blower and flue box. Pay careful attention to the order in which gaskets and orifice are removed.

Support heat exchanger (to prevent it from falling when final screws are removed.)

Remove screws supporting heat exchanger.

To install heat exchanger, reverse procedure. Be sure to secure all wires and check plumbing and burner plate for airtight seal. Screws must be torqued to 35 in.-lbs. (4N.m) to ensure proper operation.

10-Flame Sensing

Flame current is an electrical current which passes from the ignition control through the sensor electrode during unit operation. The current passes from the sensor through the flame to the ground electrode (located on the flame electrode) to complete a safety circuit. The electrodes should be located so the tips are at least 1/2" (12.7 mm) inside the flame envelope. Do not bend electrodes. To measure flame current, follow the procedure below:

⚠ DANGER

Electrodes are not field adjustable. Any alterations to the electrode may cause a hazardous condition that can cause property damage or personal injury.

1- Disconnect power to unit.

2- Remove lead from sensing electrode and install a microamp meter in series between the sensing electrode and the sensing lead.

3- Reconnect power and adjust thermostat for heating demand.

4- When flame is established compare to table 42. Do not bend electrodes.

5- Disconnect power to unit before disconnecting meter. Make sure sensor wire is securely reconnected before reconnecting power to unit.

TABLE 42

Manufacturer	Nominal Signal Microamps	Drop Out
RAM	1.7-3.6	0.5
JOHNSON	0.5-1.0	.09
FENWAL	1.7-3.6	0.7

NOTE-If the meter scale reads 0, the leads are reversed. Disconnect power and reconnect leads for proper polarity.

11-Combustion Air Inducer

The combustion air inducer is factory set and is not field adjustable. However, operation should be monitored to ensure proper operation. The combustion air inducer is used to draw fresh air into the combustion chamber while simultaneously expelling exhaust gases. The inducer operates throughout the heating cycle.

On a heating demand, the ignition control is energized by the main control module A55. The ignition control then allows 30 to 40 seconds for the combustion air inducer to vent exhaust gases from the burners. When the combustion air inducer is purging the exhaust gases, the combustion air prove switch is closing proving that the combustion air inducer is operating before allowing the ignition control to energize. When the combustion air prove switch is closed and the delay is over, the ignition control activates the first stage operator of the gas valve (low fire), the spark and the flame sensing electrode. Sparking stops immediately after flame is sensed.

B-Cooling System Service Checks

See Charging section of this manual for Cooling service checks.

VI-MAINTENANCE

⚠ CAUTION

Electrical shock hazard. Turn off power to unit before performing any maintenance, cleaning or service operation on the unit.

A-Filters

LGA / LCA / LHA090/102/120/150 units are equipped with four 18" x 24" x 2" (457mm x 610mm x 51mm) pleated throw-away type filters. LGA/LCA/LHA088/100 units are equipped with four 18" x 20" x 2" (457mm x 508mm x 51mm). Filters may be accessed through the economizer / filter access door at the end of the unit. Filters should be checked monthly (or more frequently in severe use) and cleaned or replaced regularly. Take note of the "AIR FLOW DIRECTION" marking on the filter frame when reinstalling.

NOTE-Filters must be U.L.C. certified or equivalent for use in Canada.

B-Lubrication

All blower motors used in LGA / LCA / LHA units are prelubricated; no further lubrication is required.

C-Supply Air Blower Wheel

Annually inspect supply air blower wheel for accumulated dirt or dust. Turn off power before attempting to remove access panel or to clean blower wheel.

⚠ CAUTION

Be careful when servicing unit to avoid accidental contact with sharp metallic edges which may cause personal injury.

D-Evaporator Coil

Inspect and clean coil at beginning of each season. Clean using mild detergent or commercial coil cleanser. Check condensate drain pan and line, if necessary. Flush coil and condensate drain with water taking care not to get insulation, filters and return air ducts wet. Check connecting lines and coil for evidence of oil and refrigerant leaks.

E-Condenser Coil

Clean condenser coil annually with detergent or commercial coil cleaner and inspect monthly during the cooling season. Check connecting lines and coil for evidence of oil and refrigerant leaks.

NOTE-If owner complains of insufficient cooling, the unit should be gauged and refrigerant charge checked. Refer to Gauge Manifold Attachment and Charging sections in this manual.

F-Electrical

1- Check all wiring for loose connections.

2- Check for correct voltage at unit (unit operating).

3- Check amp-draw on both condenser fan motor and blower motor.
Fan Motor Rating Plate ____ Actual _____
Indoor Blower Motor Rating Plate____ Actual____

VII-ACCESSORIES

The accessories section describes the application of most of the optional accessories which can be factory or field installed to either the LGA / LCA / LHA units. OPTIONAL FIELD INSTALLED ACCESSORIES section (see table of contents) show specific size per unit.

A-LARMF Mounting Frames

When installing either the LGA / LCA / LHA units on a combustible surface for downflow discharge applications, the Lennox LARMF08/10 or 10/15 14-inch or 24-inch (356 mm or 610mm) height roof mounting frame is used. The roof mounting frames are recommended in all other applications but not required. If the LGA / LCA / LHA units are not mounted on a flat (roof) surface, they MUST be supported under all edges and under the middle of the unit to prevent sagging. The units MUST be mounted level within 1/16" per linear foot or 5mm per meter in any direction.

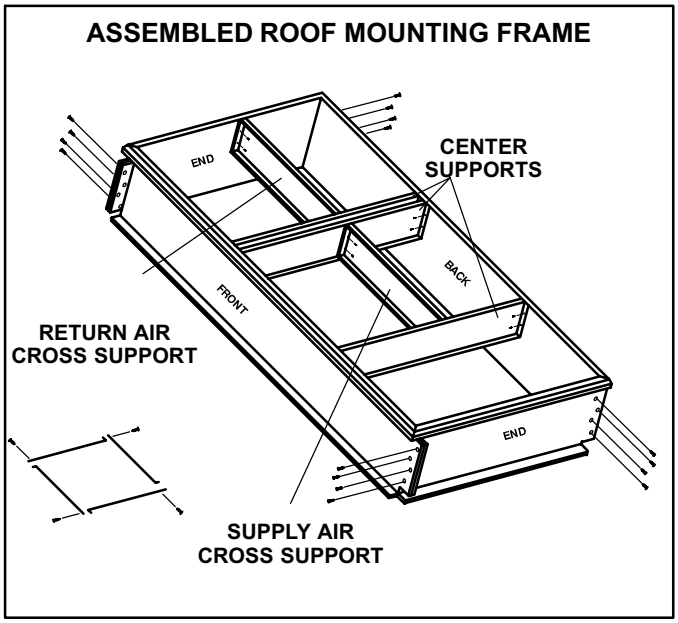

FIGURE 33

The assembled LARMF mounting frame is shown in figure 33. Refer to the roof mounting frame installation instructions for details of proper assembly and mounting. The roof mounting frame MUST be squared to the roof and level before mounting. Plenum system MUST be installed before the unit is set on the mounting frame. Typical roof curbing and flashing is shown in figure 34. Refer to the roof mounting frame installation instructions for proper plenum construction and attachment.

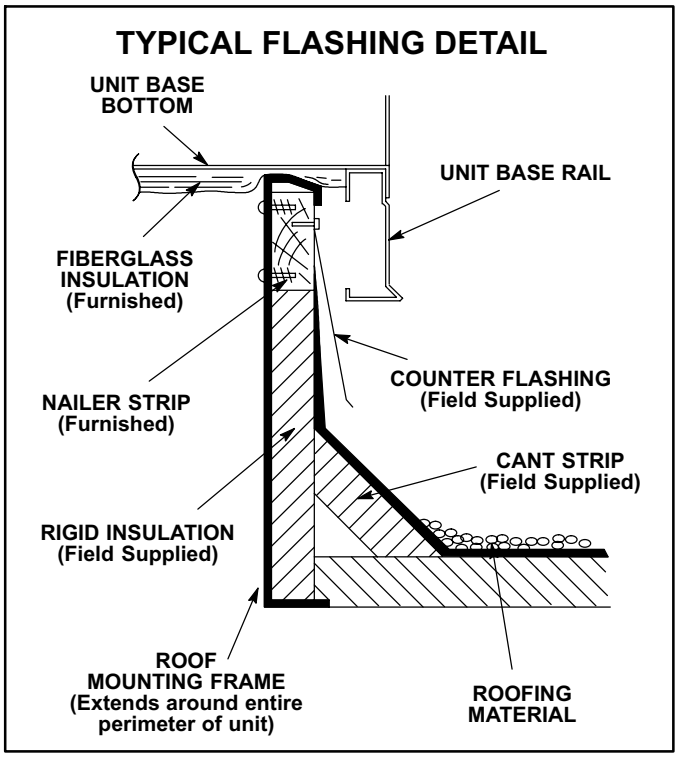

FIGURE 34

B-Transitions

Optional supply/return transitions LASRT08/10 and 10/12 are available for use with LGA / LCA / LHA 7.5, 8.5, and 10 ton series units, utilizing optional LARMF08/10 and 10/15 roof mounting frame. LGA / LCA / LHA 12.5 ton units will use LASRT15 with LARMF10/15 roof mounting frame. Transition must be installed in the LARMF mounting frame before mounting the unit to the frame. Refer to the manufacturer's instructions included with the transition for detailed installation procedures. LASRT10/12 and LASTR15 are included with factory installed economizers.

C-Supply and Return Diffusers

Optional flush mount diffuser/return FD11 and extended mount diffuser/return RTD11 are available for use with the LGA / LCA / LHA units. Refer to manufacturer's instructions included with transition for detailed installation procedures.

D-LAOADM08/10, 10/15 and LAOD10/15 Outdoor Air Dampers Field or Factory Installed

LAOADM08/10 and 10/15 and LAOAD10/15 consists of dampers which may be manually or motor (M) operated to allow up to 25 percent outside air into the system at all times (see figure 35). Washable filters supplied with the outdoor air dampers can be cleaned with water and a mild detergent. It should be sprayed with Filter Handicoater when dry prior to reinstallation. Filter Handicoater is R.P. Products coating no. 418 and is available as Lennox Part No. P-8-5069.

E-LAREMD08/10 and 10/15 Economizer

(Field or Factory Installed)

The optional LAREMD08/10 and 10/15 economizer can be used with LGA / LCA / LHA units in downflow and horizontal air discharge applications. The LAREMD08/10 and 10/15 economizer uses outdoor air for free cooling when temperature and/or humidity is suitable. An economizer hood is required and must be ordered separately with the field installed economizer.

NOTE - Gravity exhaust dampers are optional with economizers.

The economizer is controlled by the economizer control module A56 which connects to the main control module A55. Both boards are part of the Integrated Modular Control (IMC) which controls "L" series unit operation.

The economizer will operate in one of four modes. Each mode requires a different EM1 economizer DIP switch setting. Each mode also requires different sensors.

LAOAD MANUAL OUTDOOR AIR DAMPER

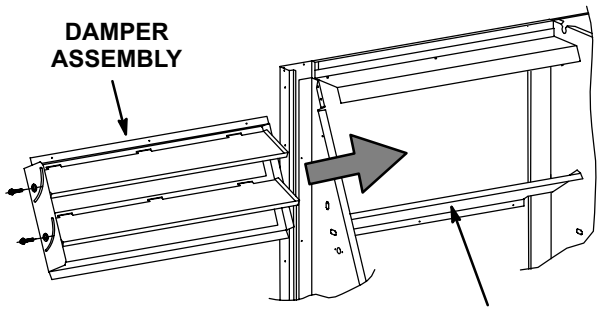

LAOADM MOTORIZED OUTDOOR AIR DAMPER

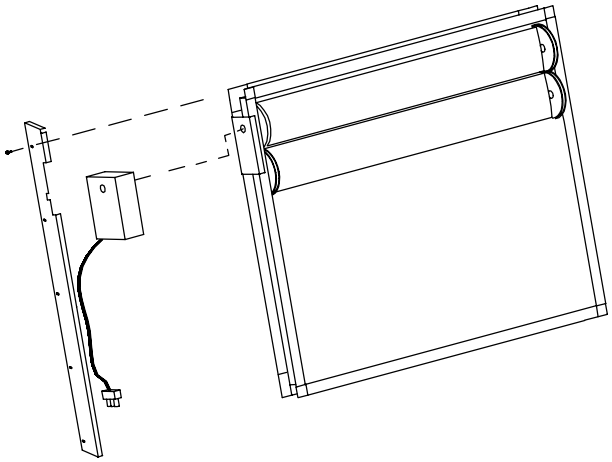

FILTER BRACKET SIDE VIEW

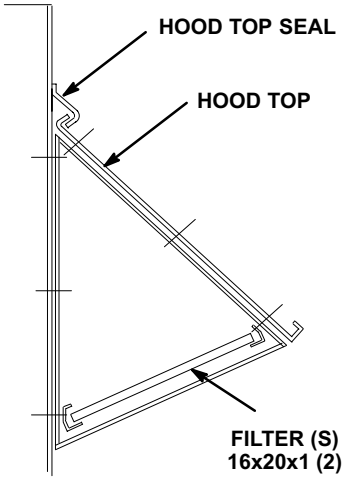

FIGURE 35

1-"TMP" MODE (SENSIBLE TEMPERATURE)

In the "TMP" mode, the IMC uses input from the factory installed RT6 Supply Air Sensor, RT16 Return Air Sensor, and RT17 Outdoor Air Sensor to determine suitability of outside air and economizer damper operation. When outdoor sensible temperature is less than return air sensible temperature, outdoor air is used for cooling. This may be supplemented by mechanical cooling to meet comfort demands. This application does not require additional optional sensors.

2-"ODE" MODE (OUTDOOR ENTHALPY)

The "ODE" or outdoor enthalpy mode requires a field (16K96) or factory provided and installed Honeywell C7400 enthalpy sensor. The sensor monitors outdoor air temperature and humidity (enthalpy). When outdoor air enthalpy is below the enthalpy control setpoint, the economizer modulates to allow outdoor air for free cooling.

3-"DIF" MODE (DIFFERENTIAL ENTHALPY)

The "DIF" or differential enthalpy mode requires two field (16K97) or factory provided and installed Honeywell C7400 enthalpy sensors . One sensor is installed in the outside air opening and the other sensor is installed in the return air opening. When the outdoor air enthalpy is below the return air enthalpy, the economizer opens to bring in outdoor air for free cooling.

4-"GLO" MODE (GLOBAL)

Global Mode - The "GLO" or global mode is used with an energy management system which includes a global control feature. Global control is used when multiple units (in one location) respond to a single outdoor air sensor. Each energy management system uses a specific type of outdoor sensor which is installed and wired by the controls contractor.

Motorized Outdoor Air Damper - The "GLO" mode is also used when a motorized outdoor air damper is installed in the system regardless of whether an energy management system is used.

NOTE - All economizer modes of operation will modulate dampers to 55° F (13° C) supply air.

F-LAGED08/10 and 10/15 and LAGEDH10/15 Gravity Exhaust Dampers

LAGED08/10 and 10/15 and LAGEDH10/15 dampers are used with LGA / LCA / LHA series units. LAGED dampers are used in downflow (see figure 36) and LAGEDH are used in horizontal air discharge applications. LAGEDH gravity exhaust dampers are installed in the return air duct. The dampers must be used any time an economizer and a power exhaust fan is applied to LGA / LCA / LHA series units.

Gravity exhaust dampers allow exhaust air to be discharged from the system when an economizer and/or power exhaust is operating. Gravity exhaust dampers also prevent outdoor air infiltration during unit off cycle. See installation instructions for more detail.

NOTE- GED is optional except required with power exhaust dampers.

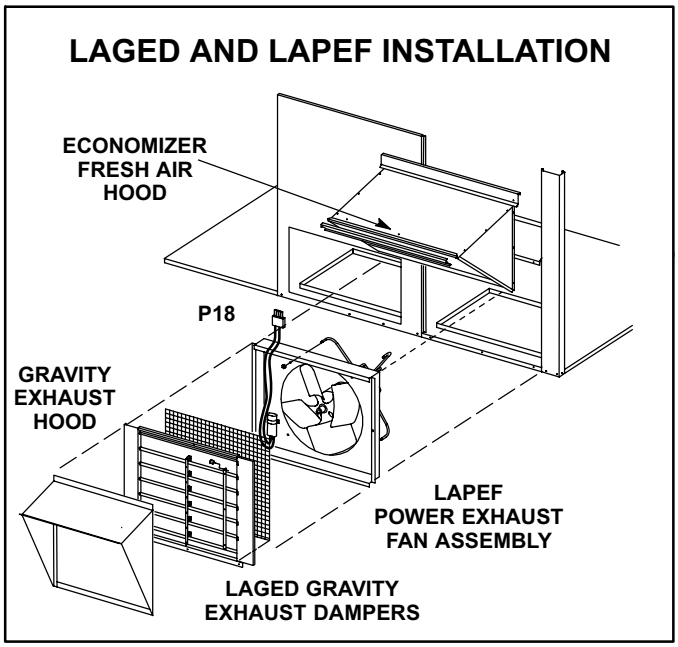

FIGURE 36

G-LAPEF08/10 and 10/15 Power Exhaust Fan

LAPEF10/15 power exhaust fan is used with LGA / LCA / LHA series units. LAPEF (requires optional down-flow gravity exhaust dampers and LAREMD economizers) is used in downflow applications only. The power exhaust fan provides exhaust air pressure relief and also runs when return air dampers are closed and the supply air blower is operating. Figure 36 shows location of the LAPEF. See installation instructions for more detail.

H-Optional Cold Weather Kit (Canada only)

Electric heater is available to automatically control the minimum temperature in the gas burner compartment. Heater is C.G.A. certified to allow cold weather operation of unit down to -60°F (-50°C).

The kit includes the following parts:

1- Transformer (T20) is a 600V to 120/240V stepdown transformer mounted in the blower compartment.

2- T20 has two in line fuses (F20), one on each leg of the transformer. Both are rated at 15 amps.

3- The strip heater (HR6) is located as close as possible to the gas valve. It is wired in series with T20. The strip heater is rated at 500 Watts

4- A thermostat mounting box is installed on the vestibule of the heating compartment. Included in the box are the following thermostat switches:

a - Thermostat switch (S59) is an auto-reset SPST . switch which acts as a low limit and opens on a temperature drop. The switch is wired to open 24v power to the burner control. When the temperature drops below -35°C (-30°F) the switch opens and the gas heat section is de-energized. The switch automatically resets when the heating compartment temperature reaches -12°C (10°F).

b - Thermostat switch (S60) is an auto-reset SPST switch and is the controller of HR6. When the temperature rises above -7°C (20°F) the switch opens and the electric heater is de-energized. The switch automatically resets when the heating compartment temperature reaches -23.3°C (-10°F).

c -Thermostat switch (S61) is an auto-reset SPST switch which acts as a high limit and closes on a temperature drop. S61 remains closed during low ambient conditions and opens when temperatures rise. When temperature drops below -6.7°C (20°F) the switch closes. The switch automatically opens when heating compartment temperature reaches 24°C (76°F).

I-Control Systems

Three different types of control systems may be used with the LGA / LCA / LHA series units. All thermostat wiring is connected to terminal block TB1 located in the control box of the unit. Each thermostat has additional control options available. See thermostat installation instructions for more detail.

NOTE-Lennox LHA heat pumps use standard heat cool type thermostats. Attempted use of heat pump type thermostat on LHA unit will result in improper operation.

1- Electro-mechanical thermostat (13F06)

The electro-mechanical thermostat is a two stage heat / two stage cool thermostat with dual temperature levers. A non-switching or manual system switch subbase may be used.

2- Electronic thermostat (see price book)

Any two stage heat / two stage cool electronic thermostat may be used.

3- Honeywell T7300 thermostat (81G59)

The Honeywell T7300 thermostat is a programmable, internal or optional remote temperature sensing thermostat. The T7300 provides occupied and unoccupied changeover control.

J-Smoke Detectors A17 and A64

Photoelectric smoke detectors are a factory installed option. The smoke detectors can be installed in the supply air section (A64), return air section (A17), or in both the supply and return air section. Wiring for the smoke detector is shown on the ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT diagram in the back of this manual.

K-Blower Proving Switch S52

The blower proving switch monitors blower operation and locks out the unit in case of blower failure. The switch is N.O. and closes at .14" W.C. (34.9 Pa) The switch is mounted on the upper left hand corner of the blower deck. Wiring for the blower prove switch is shown on the ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT diagram in the back of this manual.

L-Dirty Filter Switch S27

The dirty filter switch senses static pressure increase indicating a dirty filter condition. The switch is N.O. and closes at 1" W.C. (248.6 Pa) The switch is mounted on the top filter channel corner. Wiring for the dirty filter switch is shown on the ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT diagram in the back of this manual.

M-Indoor Air Quality (CO_2) Sensor A63

The indoor air quality sensor monitors CO_2 levels and reports the levels to the main control module A55. The board adjusts the economizer dampers according to the CO_2 levels. The sensor is mounted next to the indoor thermostat or in the return air duct. Refer to the indoor air quality sensor installation instructions for proper adjustment. Wiring for the indoor air quality switch is shown on the ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT diagram in the back of this manual.

N-LP / Propane Kit

A natural to LP / propane gas changeover kit is required for gas conversion on LGA088, 090, 100, 102, 120, 150 series units. The kit includes a gas valve and burner orifices.

O-Factory Installed Humiditrol®

LGA/LCA090, 102, 120

Humiditrol units provide a dehumidifying mode of operation. These units contain a reheat coil adjacent to and downstream of the evaporator coil. Reheat coil solenoid valve, L14, routes hot discharge gas from the compressor to the reheat coil. Return air pulled across the evaporator coil is cooled and dehumidified; the reheat coil adds heat to supply air. See figure 37 for reheat refrigerant routing and figure 38 for standard cooling refrigerant routing.

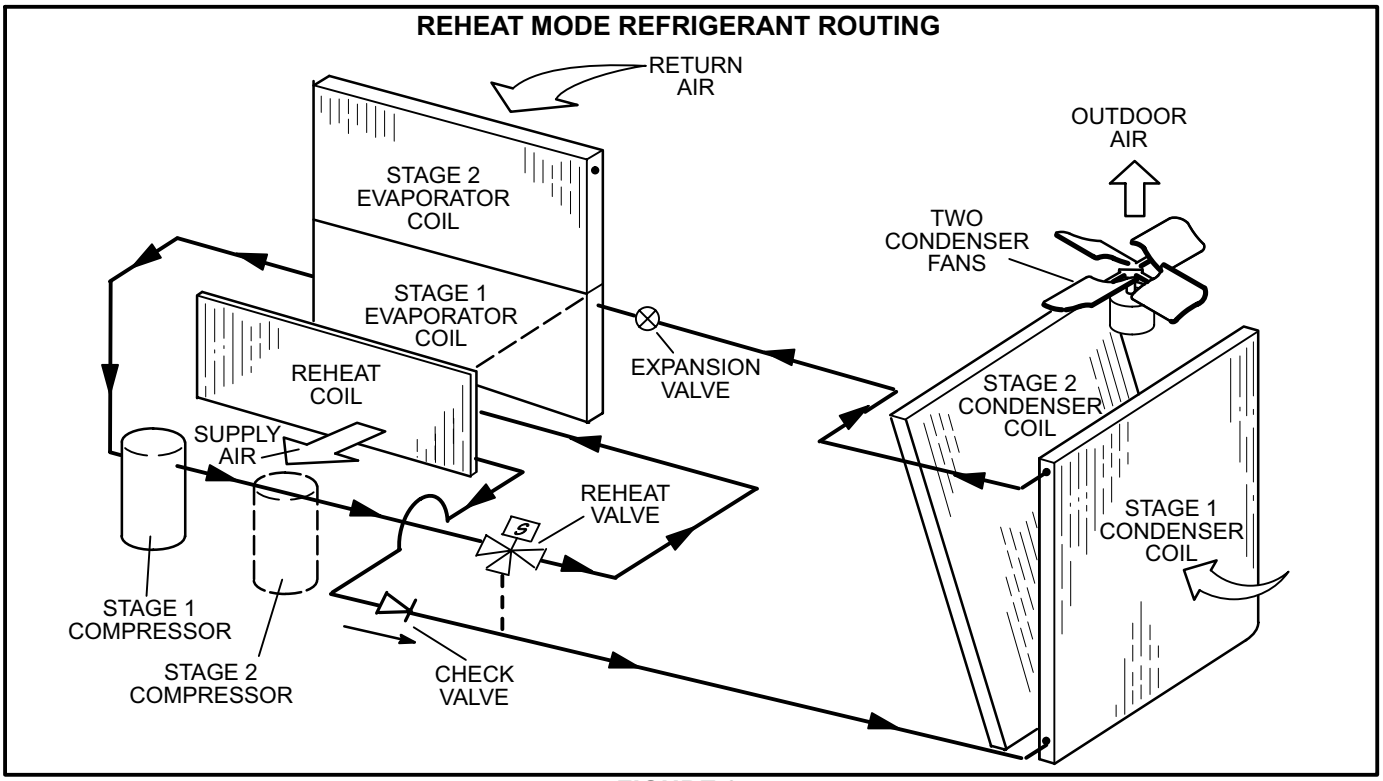

FIGURE 37

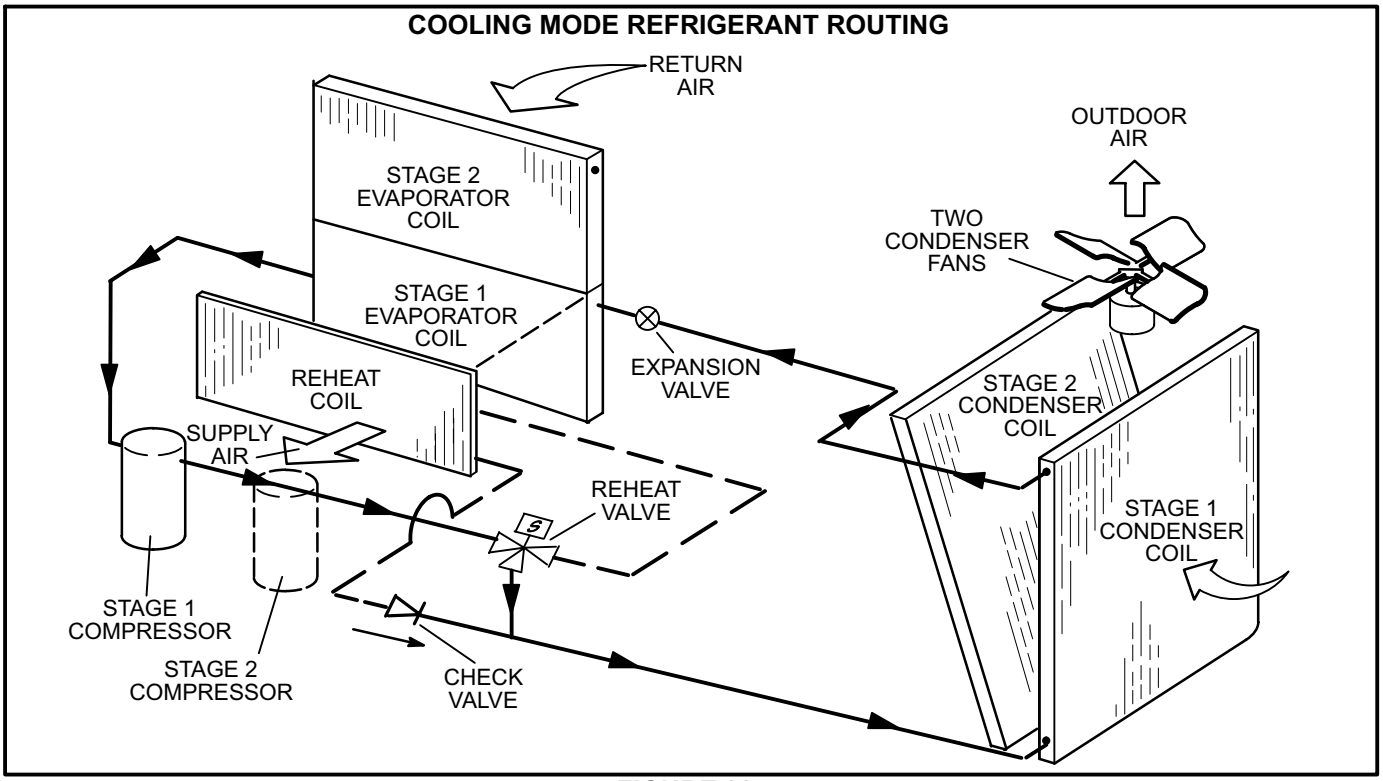

FIGURE 38

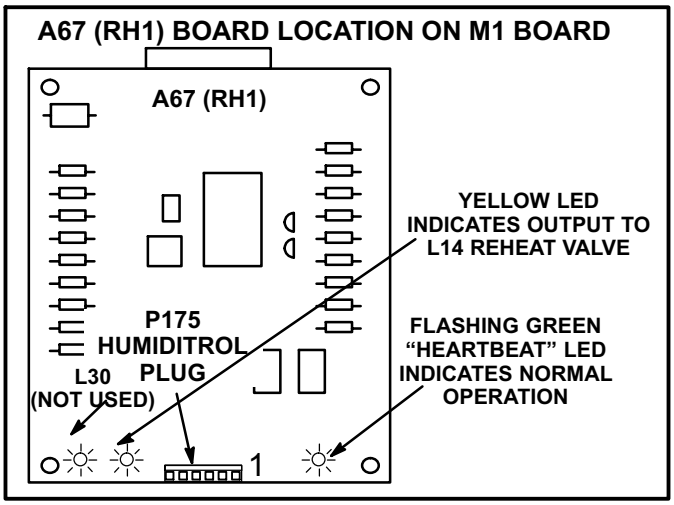

FIGURE 39

L14 Reheat Coil Solenoid Valve

When IMC board input (P114-10) indicates room conditions require dehumidification, L14 reheat valve is energized (RH1 board P175-3) and refrigerant is routed to the reheat coil.

RH1 Humiditrol Board

The RH1 add-on board is factory-installed in all Humiditrol units. RH1 is located on the M1 board as shown in figure 39.

Reheat Setpoint

Reheat is factory-set to energize when indoor relative humidity rises above 60% (default). Reheat will terminate when the indoor relative humidity falls 3% below setpoint, or 57% (default). The reheat setpoint can be adjusted by changing ECTO 4.25. A setting of 100% will disable reheat.

A91 Humidity Sensor

Install humidity sensor in the conditioned space according to instructions provided with sensor.

Relative humidity should correspond to the sensor (A91) output voltage listed in table 43. For example: if indoor air relative humidity is 80% ± 3%, the humidity sensor output should read 8.00VDC.

Check the sensor output annually for accuracy. Keep the air intake openings on the sensor clean and free of obstructions and debris.

Read Relative Humidity At IMC

Turn MODE DIP "TEMP" switch #4 "ON". Display will alternately flash from readout to output. A single push on the pushbutton will toggle the readout upward from .0 to .7 incrementally. A double push will toggle the readout downward from .7 to .0 incrementally. Readout .7 indicates percent relative humidity.

Check-Out

Test Humiditrol operation using the following procedure.

1- Make sure RH sensor is wired as shown in figure 40 or 41.

2- Set IMC ECTO system mode parameter 6.01 to option 0 (default local thermostat mode).

3- Set IMC ECTO reheat setpoint parameter 4.25 to 0% relative humidity.

4- Jumper the following TB1 terminals:
   8&9 (occupied mode)
   6&3 (blower demand G)
   6&18 (Y1 cooling demand)

The blower, compressor 1 (reheat), and compressor 2 (cooling), should be operating. L14 LED on the A67 board should also be ON, indicating the reheat valve is energized.

5- Disconnect the jumper between TB1 terminals 6&18 (Y1) to end the cooling demand.

6- Press the IMC pushbutton to by-pass the compressor minimum run delay.

Compressor 2 (cooling) should de-energize, compressor 1 (reheat) should continue to operate, and L14 LED should still be ON.

7- Disconnect the jumper between TB1 terminals 8&9 (occupied mode).

Compressor 1 (reheat) should de-energize, L14 LED should go OFF, blower should still be energized.

8- When check-out is complete, remove all jumpers, set ECTO 4.25 back to the proper humidity setpoint, and set ECTO 6.01 to the proper setting.

TABLE 43

Relative Humidity (%RH ± 3%)	Sensor Output (VDC)
20	2.00
30	3.00
40	4.00
50	5.00
60	6.00
70	7.00
80	8.00
90	9.00

Default Reheat Operation

Humiditrol unit reheat control parameter 4.24 is factory-set to option 6. Reheat will operate as shown in table 44 once three conditions are met:

1- Blower must be operating.

2- System must be in occupied mode.

3- System must NOT be operating in heating mode.

IMPORTANT - Free cooling does not operate during reheat. Free cooling will operate as shown in the IMC manual.

Reheat Control Options

Reheat control parameter 4.24 can be set to other reheat control operating conditions as follows (see IMC manual):

ECTO 4.24 option 3 -

1- Blower must be operating.

2- System must be in occupied mode.

3- System must NOT be operating in heating mode.

4- One cooling demand is required if the unit has been in heating mode, the IMC has been reset, or at initial unit start-up.

ECTO 4.24 option 5 -

3- System must NOT be operating in heating mode.

4- One cooling demand is required if the unit has been in heating mode, the IMC has been reset, or at initial unit start-up.

ECTO 4.24 option 7 -

3- System must NOT be operating in heating mode.

Once the corresponding conditions are met in each mode, reheat will operate as shown in table 44.

TABLE 44
Reheat Operation - Two Cooling Stages - Default

T'stat and Humidity Demands	Operation
Reheat Only	Compressor 1 Reheat
Reheat & Y1	Compressor 1 Reheat & Compressor 2 Cooling*
Reheat & Y1 & Y2	Compressor 1 Cooling & Compressor 2 Cooling**

*If there is no reheat demand and outdoor air is suitable, free cooling will operate.

**If there is no reheat demand and outdoor air is suitable, free cooling and compressor 1 will operate.

Additional Cooling Stages

Units are shipped from the factory to provide two stages of cooling. (ECTO 5.04 option 2 and 6.01 option 0).

Three stages of cooling is available in zone sensor mode (ECTO 6.01 set to option 1, 2, or 3). Three stages of cooling is also available by installing a transfer relay and a three-stage thermostat; ECTO 5.04 must be set to option 3.

Reheat will operate as shown in table 45.

TABLE 45
Reheat Operation - Three Cooling Stages

T'stat and Humidity Demands	Operation
Reheat Only	Compressor 1 Reheat
Reheat & Y1	Compressor 1 Reheat & Compressor 2 Cooling*
Reheat & Y1 & Y2	Compressor 1 Cooling & Compressor 2 Cooling**
Reheat & Y1 & Y2 & Y3	Compressor 1 Cooling & Compressor 2 Cooling***

*If there is no reheat demand and outdoor air is suitable, free cooling will operate.

**If there is no reheat demand and outdoor air is suitable, free cooling and compressor 1 will operate.

***If there is no reheat demand and outdoor air is suitable, free cooling, compressor 1, and compressor 2 will operate.

NOTE - Another thermostat staging option is available which allows both compressors to be energized during free cooling. See ECTO 5.04 option 1 in IMC manual.

Combination of Demands

Tables 44 and 45 show unit operation at reheat and thermostat demands. The following examples show unit operation when reheat and thermostat demands overlap.

1- **Compressor 1 is operating (Y1) and a reheat demand is initiated:**
Compressor 1 operation is not interrupted; L14 reheat solenoid valve is energized for compressor 1 reheat and compressor 2 is energized.

2- **Compressor 1 and compressor 2 are operating (Y1 & Y2) and there is a demand for reheat; then Y2 cooling is satisfied:**
Compressor 1 does not de-energize; L14 reheat solenoid valve is energized resulting in compressor 1 reheat and compressor 2 cooling.

3- **Compressor 1 reheat is in operation and a Y1 cooling demand is initiated:**
Compressor 2 is energized for cooling.

4- **Compressor 1 reheat is in operation and a Y2 cooling demand is initiated:**
Compressor 1 does not de-energize; L14 reheat valve is de-energized for compressor 1 cooling and compressor 2 is energized for 2nd stage cooling.

5- **Compressor 1 reheat and compressor 2 cooling are in operation (Y1 demand) and outdoor air is suitable for free cooling; then reheat demand is satisfied:** Free cooling is energized and both compressors are de-energized.

24 VOLT FIELD WIRING WITH IMC SET IN LOCAL THERMOSTAT MODE (ECTO 6.01 OPTION 0)

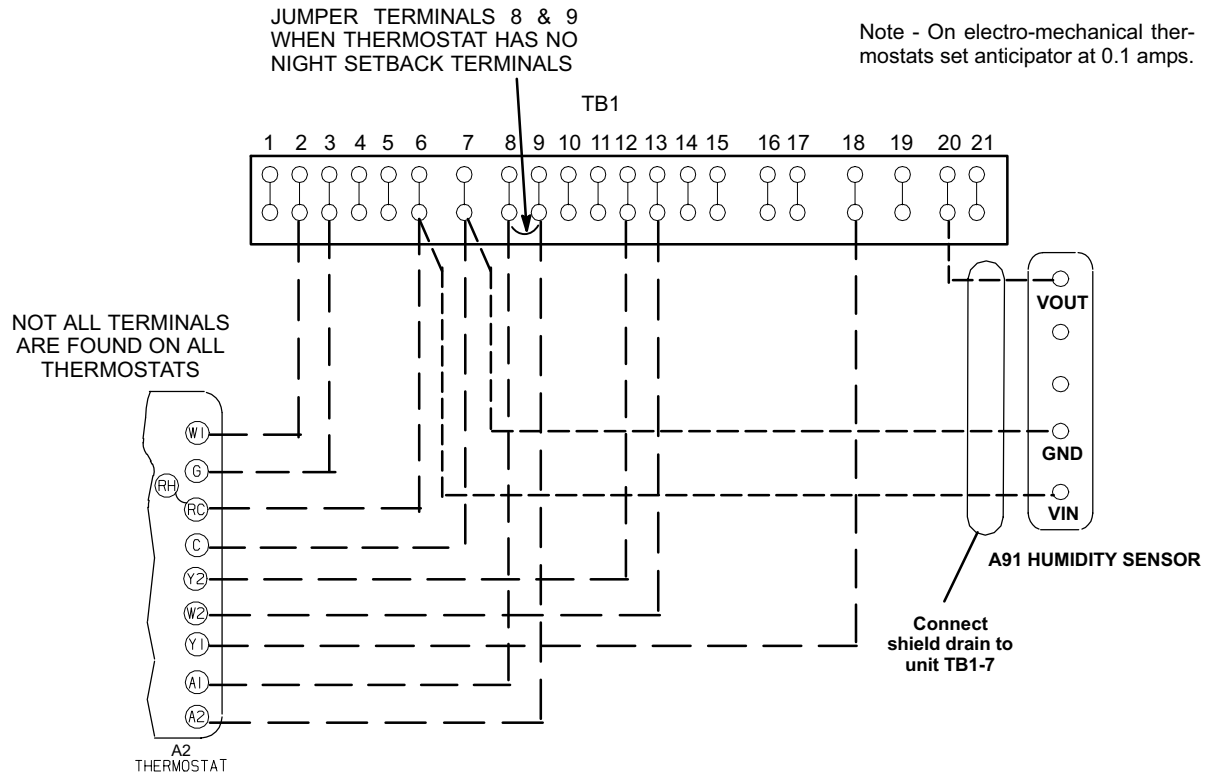

FIGURE 40

24 VOLT FIELD WIRING IN ZONE SENSOR MODE (ECTO 6.01 OPTION 1, 2, OR 3)

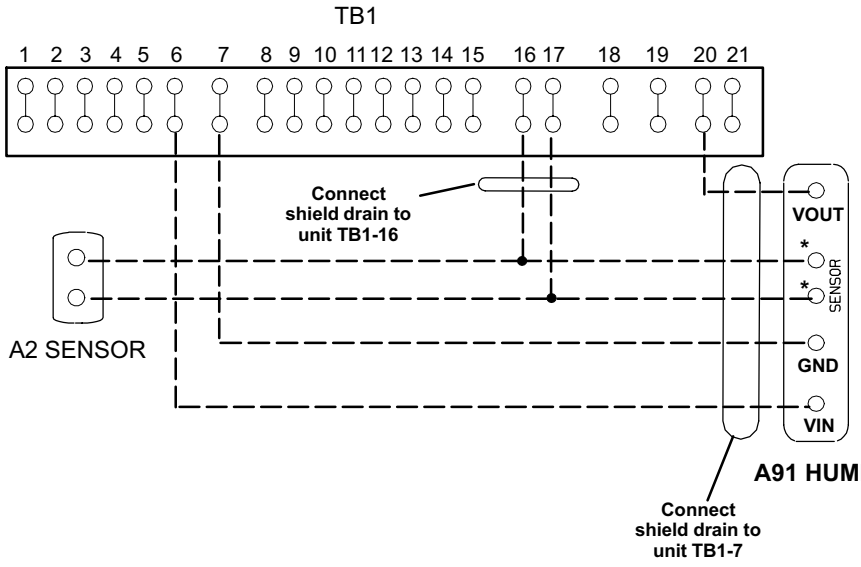

***Terminals are located on combination RH/temperature sensors only. A2 sensor is not required when combination sensor is used.**

FIGURE 41

LGA/LCA088 & 100 UNIT WIRING DIAGRAM

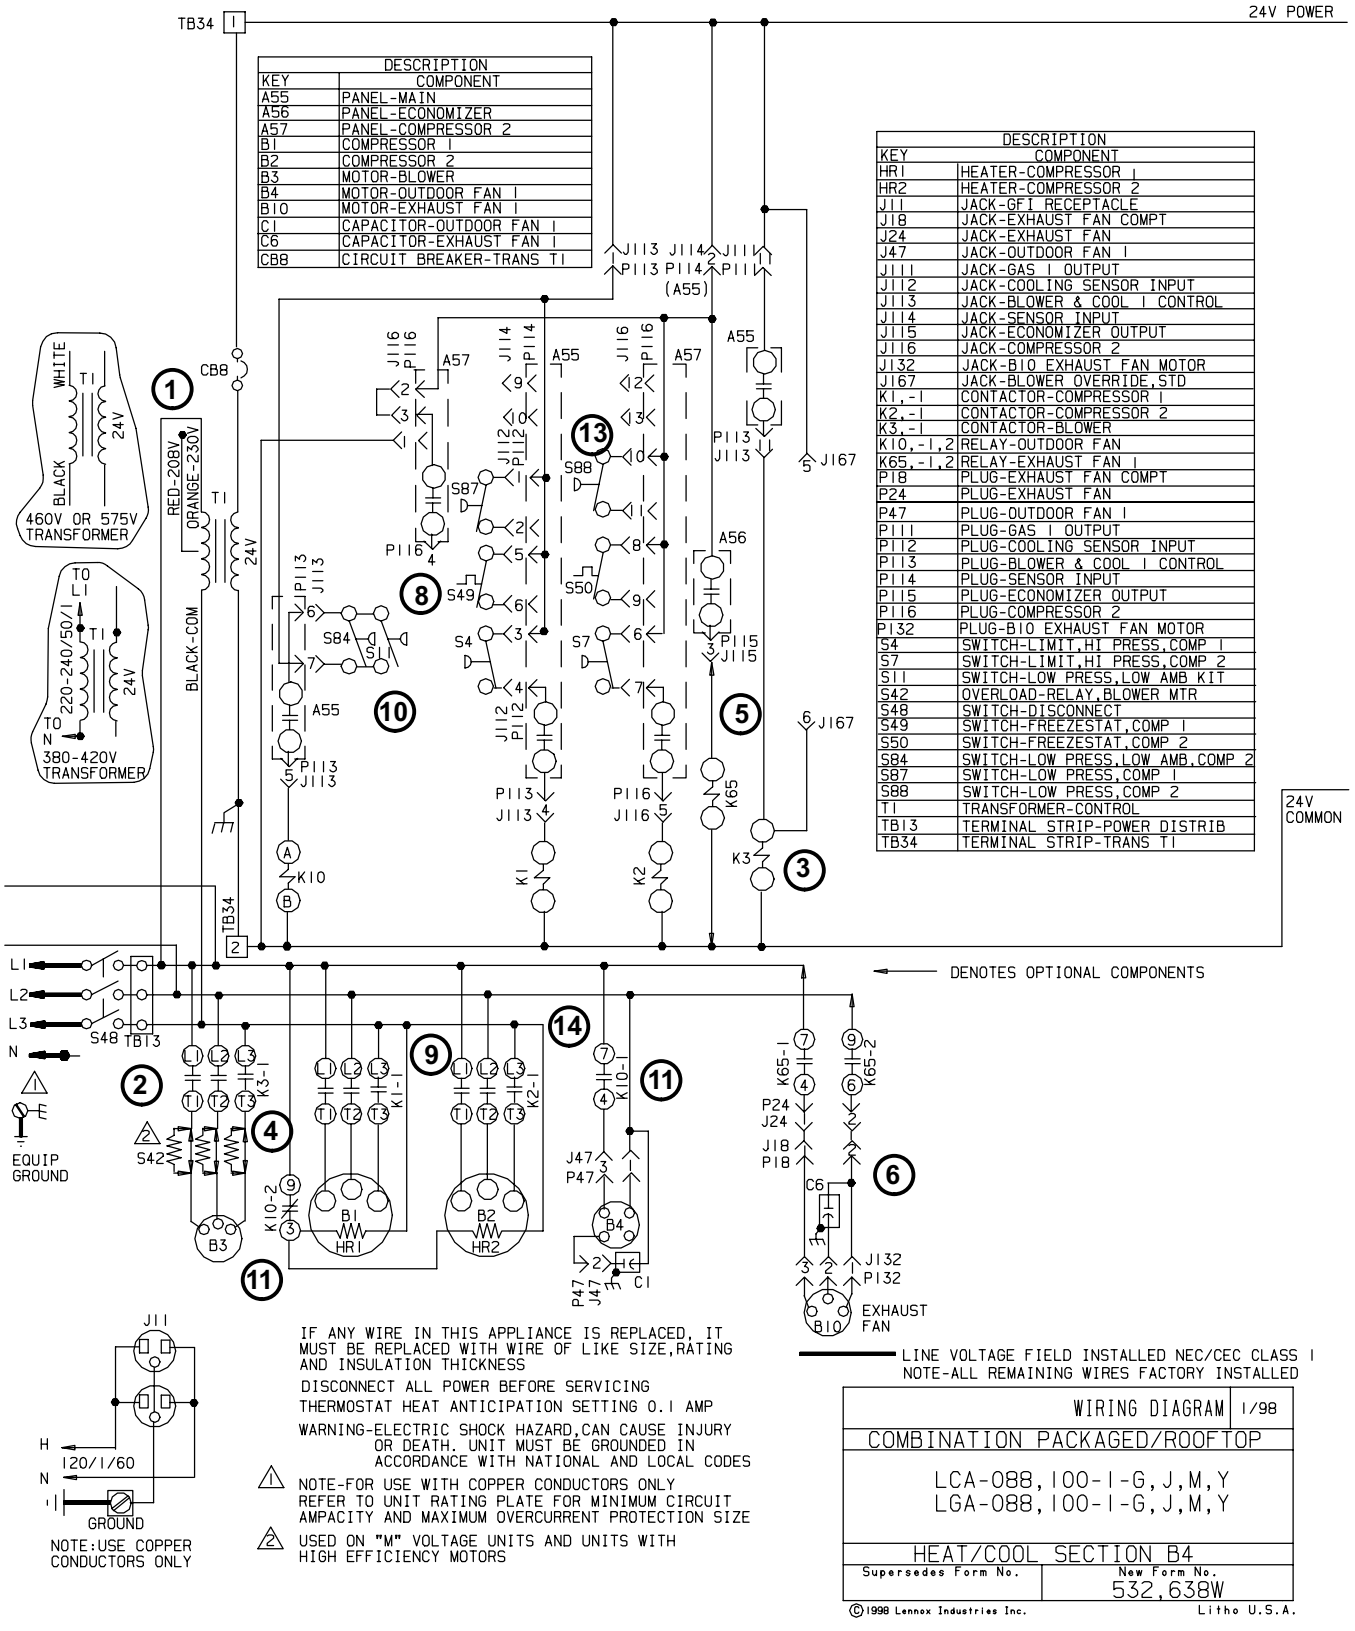

LGA/LCA090, 102, 120, 150 UNIT WIRING DIAGRAM

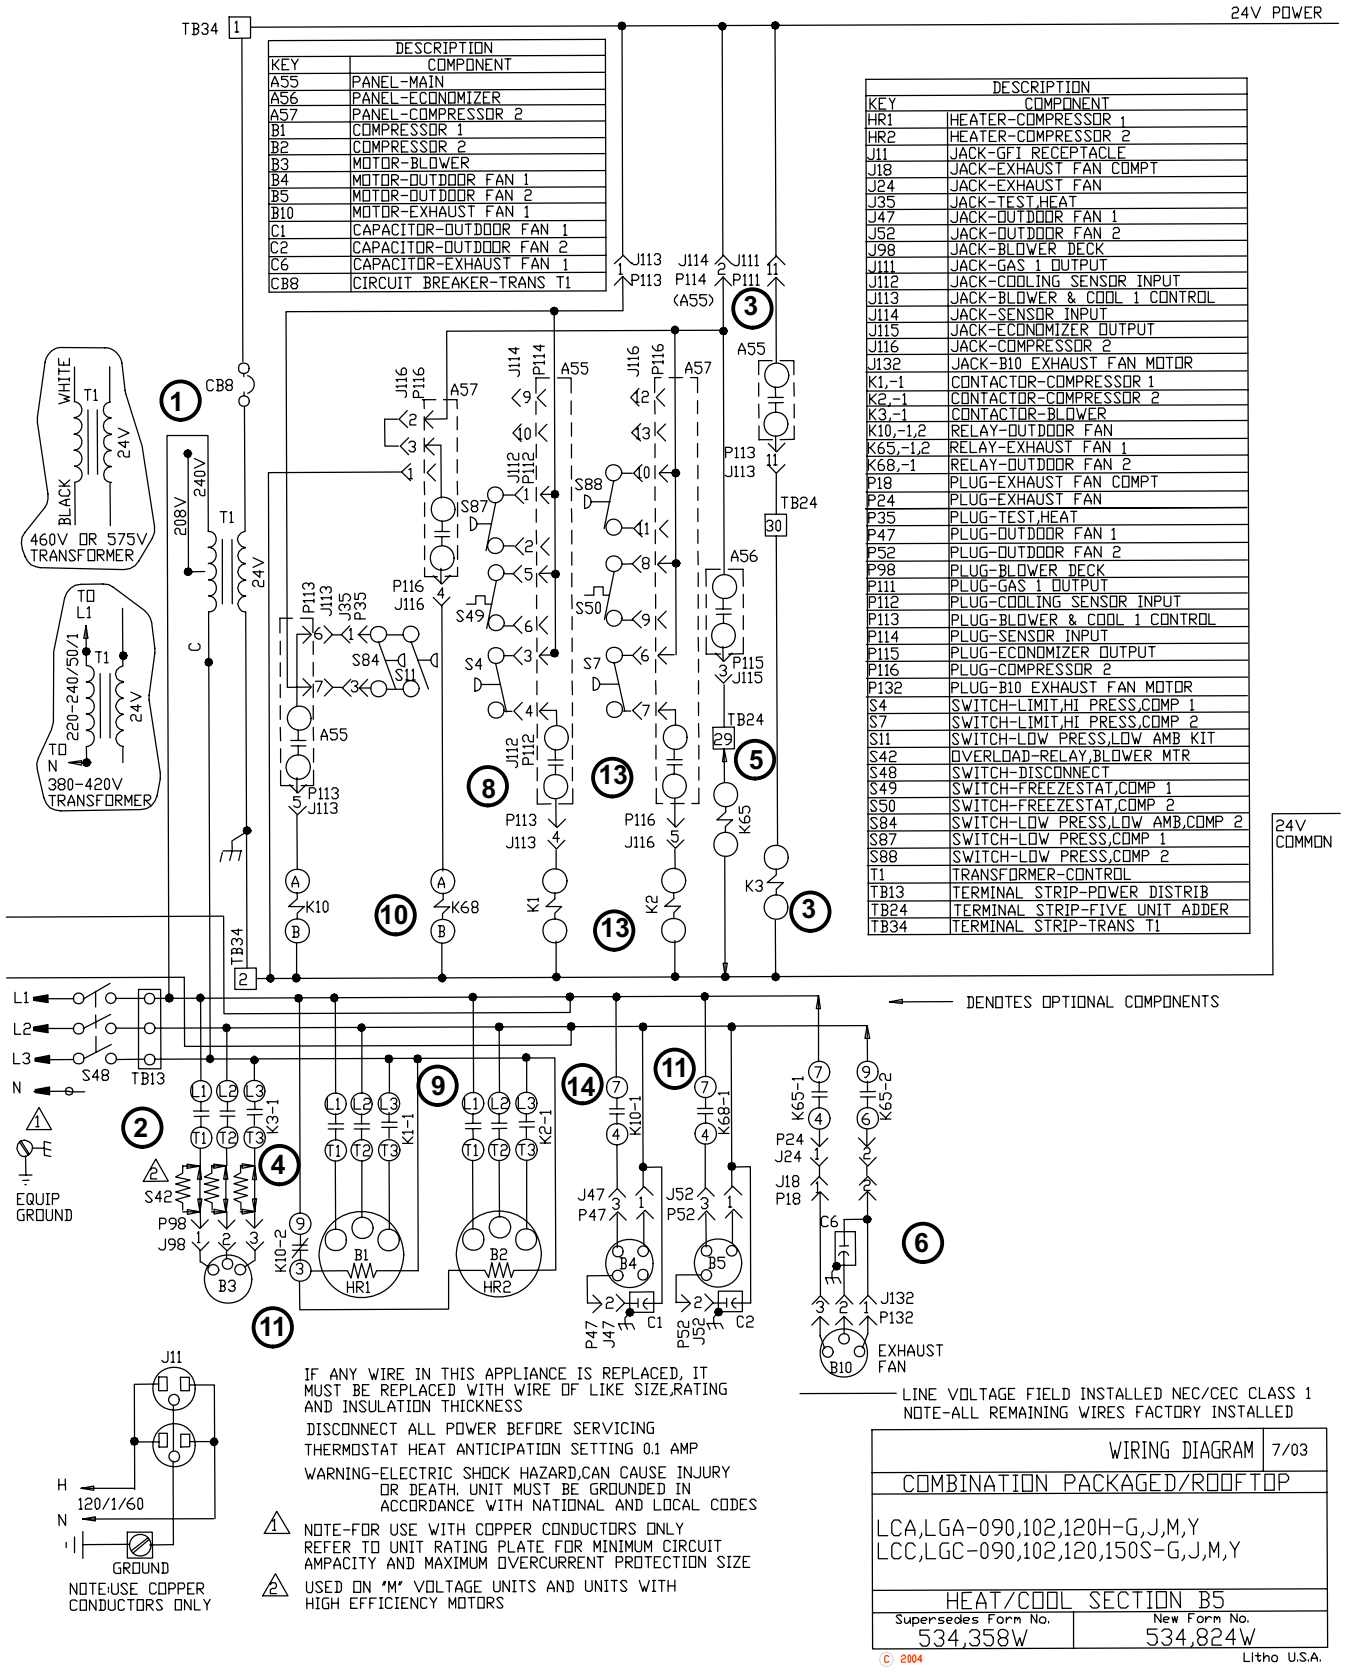

SEQUENCE OF OPERATION LGA/LCA088, 090, 100, 102, 120, 150

Power:

1. Line voltage from unit disconnect energizes transformer T1. T1 provides 24VAC power to terminal strip TB34. TB34 provides 24VAC to the unit cooling, heating and blower controls.
2. TB13 is also energized when unit disconnect switch closes. TB13 provides line voltage to compressors crankcase heaters, compressor contactors, the blower motor contactor and condenser fan relay.

Blower Operation:

3. The main control module receives a demand from thermostat terminal G. A55 energizes blower contactor K3 with 24VAC.
4. N.O. K3-1 closes, energizing blower B3.

Economizer Operation:

5. The economizer control module A56 receives a demand and energizes exhaust fan relay K65 with 24VAC at 50% outside air damper open (adjustable).
6. N.O. K65-1 and N.O. K65-2 both close, energizing exhaust fan motor B10.

1st Stage Cooling (compressor B1)

7. First stage cooling demand energizes Y1 and G in the thermostat. G energizes blower.
8. 24VAC is routed through TB34 to the main control module A55. After A55 proves N.C.low pressure switch S87, N.C. freezestat S49 and N.C. high pressure switch S4, compressor contactor K1 is energized.
9. N.O. contacts K1-1 close energizing compressor B1.
10. N.O. low ambient switch S11 closes to energize condenser fan relay K10. LGA/LCA102/120/150 only: A57 energizes condenser fan relay K68.
11. N.O. contacts K10-1 close energizing condenser fan B4 and N.C. contacts K10-2 open, de-energizing compressor crankcase heaters HR1 and HR2. N.O. contacts K68-1 close energizing condenser fan B5.

2nd Stage Cooling (compressor B2 is energized)

12. Second stage cooling demand energizes Y2.
13. 24VAC is routed through TB34 to compressor 2 module A57. After A57 proves N.C. low pressure switch S88, N.C. freezestat S50 and N.C. high pressure switch S7, compressor contactor K2 is energized.
14. N.O. contacts K2-1 close energizing compressor B2.

LGA088, 090, 100, 102, 120, 150 GAS HEAT UNIT WIRING DIAGRAM

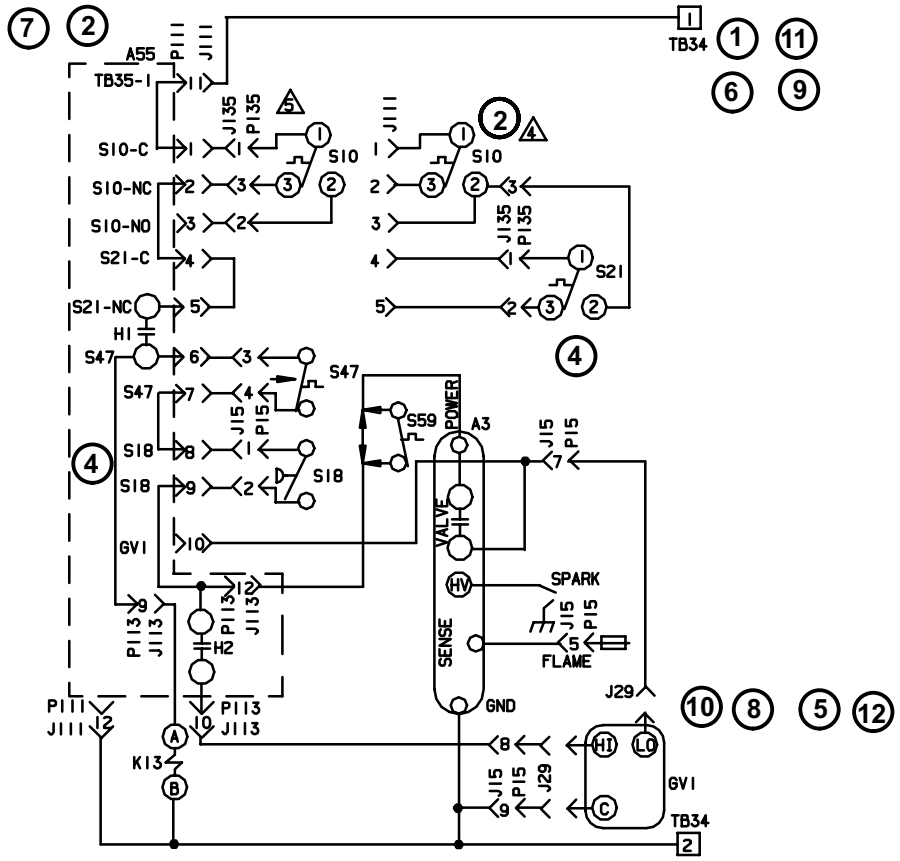

DENOTES OPTIONAL COMPONENTS

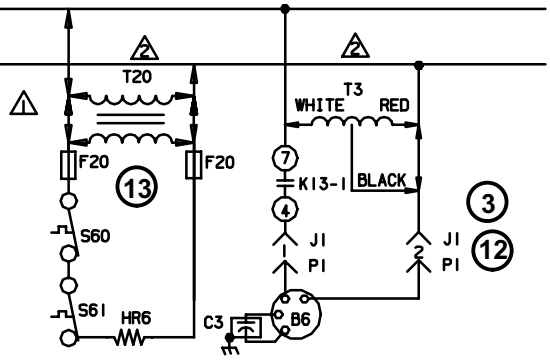

KEY	DESCRIPTION COMPONENT
A3	CONTROL-BURNER I
A55	PANEL-MAIN
B6	MOTOR-COMBUSTION AIR BLOWER I
C3	CAPACITOR-COMB AIR BLOWER,MOTOR I
F20	FUSE,-50C LOW AMBIENT KIT
GV1	VALVE-GAS I
HR6	HEATER,-50C LOW AMBIENT KIT
J1	JACK-GAS LIMIT
J15	JACK-GAS
J29	JACK-GAS I
J111	JACK-GAS I,OUTPUT
J113	JACK-BLOWER & COOL I CONTROL
J135	JACK
K13,-1	RELAY-COMBUSTION AIR BLOWER
P1	PLUG-GAS LIMIT
P15	PLUG-GAS
P111	PLUG-GAS I,OUTPUT
P113	PLUG-BLOWER & COOL I CONTROL
P135	PLUG
S10	SWITCH-LIMIT, PRIMARY GAS
S18	SWITCH-COMB AIR BLOWER, PROVE
S21	SWITCH-LIMIT,SECONDARY GAS HEAT
S47	SWITCH-FLAME ROLLOUT, BURNER I
S59	THERMOSTAT,-35 C OPEN,-50 C
S60	THERMOSTAT,-23C CL,-7C OP,-50C LOW AMB KIT
S61	THERMOSTAT,+24C OPEN,-50C LOW AMB KIT
T3	TRANSFORMER-COMB AIR BLOWER I
T20	TRANSFORMER,-50C LOW AMBIENT KIT
TB34	TERMINAL STRIP-TRANSFORMER TI
TB35	TERMINAL STRIP-TRANSFORMER TI8

1. CGA(-50C)LOW AMBIENT KIT (OPTIONAL)
2. T3 & T20 USED ON 460V & 575V UNITS ONLY
3. USED ON 6 TON AND SMALLER UNITS
4. S10,S21 HOOKUP FOR 036 TO 072 UNITS
5. S10 HOOKUP FOR 090 TO 150 UNITS

WIRING DIAGRAM	10/01
COMBINATION UNIT-ROOFTOP	
GAS HEAT FOR "L" SERIES,75 THRU 235 UNITS (A+ & B BOX)	
HEATING SECTION-AI	
Supersedes Form No. 533,611W	New Form No. 533,904W

© 2001 Litho U.S.A.

First Stage Heat:

1. Heating demand initiates at W1 in the thermostat.
2. 24VAC is routed through TB34 to the main control module A55. After A55 proves N.C. primary limit S21, the combustion air blower relay K13 is energized.
3. N.O. K13-1 contacts close allowing line voltage to energize combustion air blower B6.
4. After the combustion air blower B6 has reached full speed, the combustion air proving switch S18 contacts close. The A55 routes 24VAC through N.C. burner flame rollout switch S47 and the closed contacts of combustion air proving switch S18 to energize the ignition module A3.
5. After a 30 second delay A3 energizes the ignitor and W1 terminal (low fire) of gas valve GV1.

Second Stage Heat:

6. With first stage heat operating, an additional heating demand initiates W2 in the thermostat.
7. A second stage heating demand is received by A55 control module.
8. A55 energizes W2 terminal (high fire) of gas valve GV1.

End of Second Stage Heat:

9. Heating demand is satisfied. Terminal W2 (high fire) is de-energized.
10. Terminal W2 of GV1 is de-energized by A55 control module.

End of First Stage Heat:

11. Heating demand is satisfied. Terminal W1 (low fire) is de-energized.
12. Ignition A3 is de-energized by control module A55 in turn de-energizing terminal W1 of GV1. Combustion air blower relay K13 is also de-energized.

Optional Low Ambient Kit:
(C.G.A. -50°C Low Ambient Kit)

13. Line voltage (or transformer T20 in 460V and 575V only) is routed through the low ambient kit fuses F20 and N.C. low ambient kit thermostats S60 and S61,to energize low ambient kit heater HR6.

LHA088 UNIT WIRING SCHEMATIC

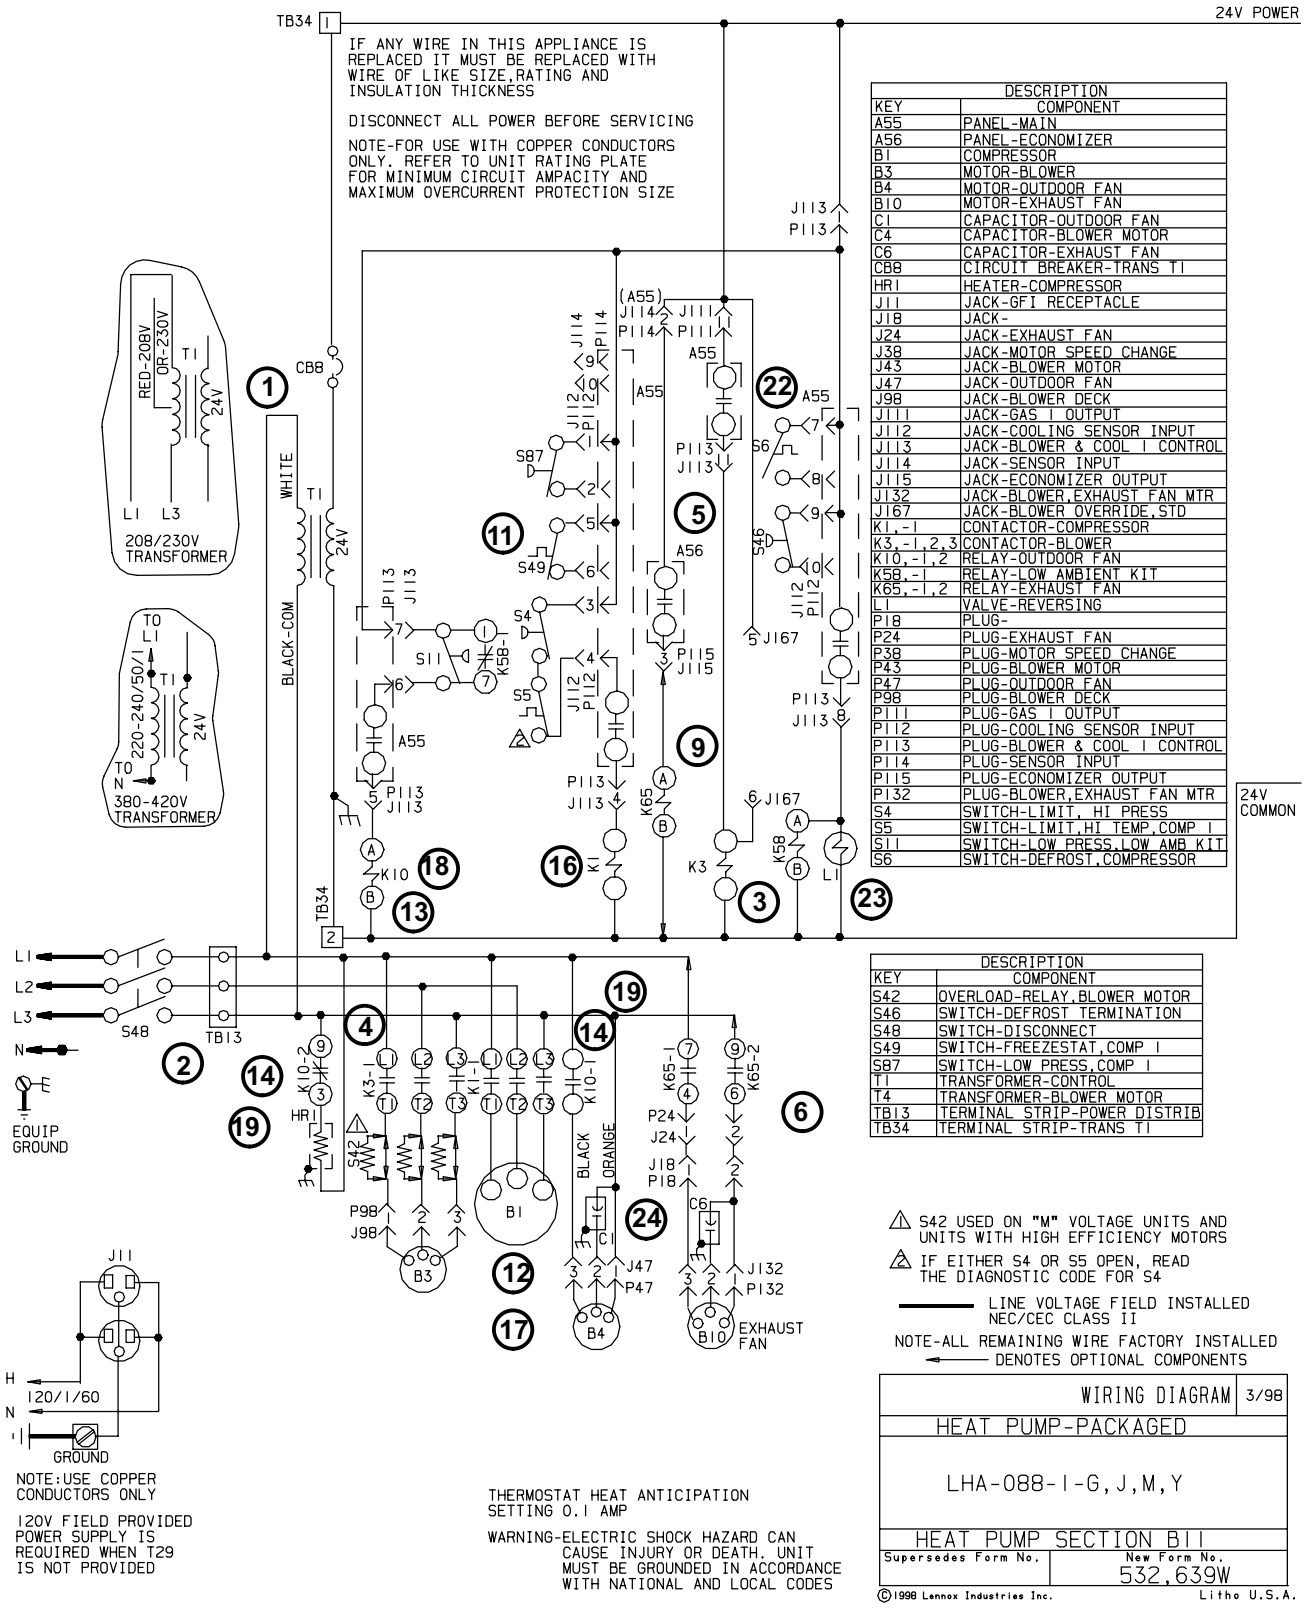

DESCRIPTION	
KEY	COMPONENT
A55	PANEL-MAIN
A56	PANEL-ECONOMIZER
B1	COMPRESSOR
B3	MOTOR-BLOWER
B4	MOTOR-OUTDOOR FAN
B10	MOTOR-EXHAUST FAN
C1	CAPACITOR-OUTDOOR FAN
C4	CAPACITOR-BLOWER MOTOR
C6	CAPACITOR-EXHAUST FAN
CB8	CIRCUIT BREAKER-TRANS T1
HR1	HEATER-COMPRESSOR
J11	JACK-GFI RECEPTACLE
J18	JACK-
J24	JACK-EXHAUST FAN
J38	JACK-MOTOR SPEED CHANGE
J43	JACK-BLOWER MOTOR
J47	JACK-OUTDOOR FAN
J98	JACK-BLOWER DECK
J111	JACK-GAS 1 OUTPUT
J112	JACK-COOLING SENSOR INPUT
J113	JACK-BLOWER & COOL 1 CONTROL
J114	JACK-SENSOR INPUT
J115	JACK-ECONOMIZER OUTPUT
J132	JACK-BLOWER,EXHAUST FAN MTR
J167	JACK-BLOWER OVERRIDE,STD
K1,-1	CONTACTOR-COMPRESSOR
K3,-1,2,3	CONTACTOR-BLOWER
K10,-1,2	RELAY-OUTDOOR FAN
K58,-1	RELAY-LOW AMBIENT KIT
K65,-1,2	RELAY-EXHAUST FAN
L1	VALVE-REVERSING
P18	PLUG-
P24	PLUG-EXHAUST FAN
P38	PLUG-MOTOR SPEED CHANGE
P43	PLUG-BLOWER MOTOR
P47	PLUG-OUTDOOR FAN
P98	PLUG-BLOWER DECK
P111	PLUG-GAS 1 OUTPUT
P112	PLUG-COOLING SENSOR INPUT
P113	PLUG-BLOWER & COOL 1 CONTROL
P114	PLUG-SENSOR INPUT
P115	PLUG-ECONOMIZER OUTPUT
P132	PLUG-BLOWER,EXHAUST FAN MTR
S4	SWITCH-LIMIT, HI PRESS
S5	SWITCH-LIMIT,HI TEMP,COMP 1
S11	SWITCH-LOW PRESS,LOW AMB KIT
S6	SWITCH-DEFROST,COMPRESSOR

DESCRIPTION	
KEY	COMPONENT
S42	OVERLOAD-RELAY,BLOWER MOTOR
S46	SWITCH-DEFROST TERMINATION
S48	SWITCH-DISCONNECT
S49	SWITCH-FREEZESTAT,COMP 1
S87	SWITCH-LOW PRESS,COMP 1
T1	TRANSFORMER-CONTROL
T4	TRANSFORMER-BLOWER MOTOR
TB13	TERMINAL STRIP-POWER DISTRIB
TB34	TERMINAL STRIP-TRANS T1

WIRING DIAGRAM	3/98
HEAT PUMP-PACKAGED	
LHA-088-1-G,J,M,Y	
HEAT PUMP SECTION B11	
Supersedes Form No.	New Form No. 532,639W

©1998 Lennox Industries Inc.
Litho U.S.A.

SEQUENCE OF OPERATION LHA088

Power:

1. Line voltage from unit disconnect energizes transformer T1. T1 provides 24VAC power to terminal strip TB34, which provides 24VAC to the unit cooling, heating and blower controls and thermostat.
2. Terminal TB13 is also energized when unit disconnect switch closes. TB13 provides line voltage to compressor crankcase heater, compressor contactor, the blower motor contactor and condenser fan relay.

Blower Operation:

3. The main control module receives a demand from thermostat terminal G. A55 energizes blower contactor K3 with 24VAC.
4. N.O. K3-1 closes, energizing blower B3.

Economizer Operation:

5. The economizer control module A56 receives a demand and energizes exhaust fan relay K65 with 24VAC at 50% outside air damper open (adjustable).
6. N.O. K65-1 and N.O. K65-2 both close, energizing exhaust fan motor B10.

Cooling Demand:

7. First stage cooling demand energizes Y1 and G in the thermostat. G energizes blower (see step 3).
8. 24VAC is routed through TB34 to the main control module A55.
9. A55 proves N.O. defrost switch S6 and N.C. defrost termination switch S46 to energize reversing valve L1 and low ambient relay K58.
10. N.C. contacts K58-1 open, giving control of K10 fan relay to low ambient pressure switch S11.
11. A55 proves N.C. low pressure switch S87, N.C. freezestat S49 and N.C. high pressure switch S4 to energize compressor contactor K1.
12. N.O. contacts K1-1 close energizing compressor B1.
13. 24VAC is routed through N.O. low ambient pressure switch S11 (now closed) and N.C. low ambient contact K58-1 (now open) to energize outdoor fan contactor K10.
14. N.O. contacts K10-1 close energizing outdoor fan B4 and N.C contacts K10-2 open de-energizing crankcase heater HR1.

First Stage Heat:

15. Heating demand energizes W1 in the thermostat.
16. 24VAC is routed through TB34 to the main control module A55. After A55 proves N.C.low pressure switch S87, N.C. high temperature limit S5, N.C. freeze stat S49 and N.C.high pressure switch S4, compressor contactor K1 is energized.

    NOTE: On first heating demand after unit has been in cooling mode, module A55 will de-energize reversing valve L1 and low ambient relay K58. K58-1 N.C. contacts will take control away from low ambient pressure switch S11.
17. N.O. contactor K1-1 closes energizing compressor B1.
18. 24VAC from the main control module A55 is routed through N.C. low ambient contact K58-1 to energize outdoor fan contactor K10.
19. N.O. contacts K10-1 close energizing outdoor fan B4 and N.C contacts K10-2 open, de-energizing compressor crankcase heater HR1.

Second Stage Heat (electric heat):

20. Second stage heat demand energizes W2 in the thermostat.
21. See sequence of operation for electric heat.

Defrost Mode:

22. During heating operation, when outdoor coil drops to 35 ± 4° the defrost thermostat S6 closes initiating defrost (after minimum run time of 30, 60 or 90 minutes).
23. When defrost begins, the reversing valve L1 is energized. Supplemental electric heat is energized.
24. When L1 energizes, N.C. K58-1 contacts open de-energizing outdoor fan relay K10, followed by outdoor fan B4.
25. Defrost terminates when pressure switch S46 opens, or when15 minutes has elapse.The defrost cycle is **not** terminated when thermostat demand ends.

LHA090, 102, 120, 150 UNIT WIRING SCHEMATIC

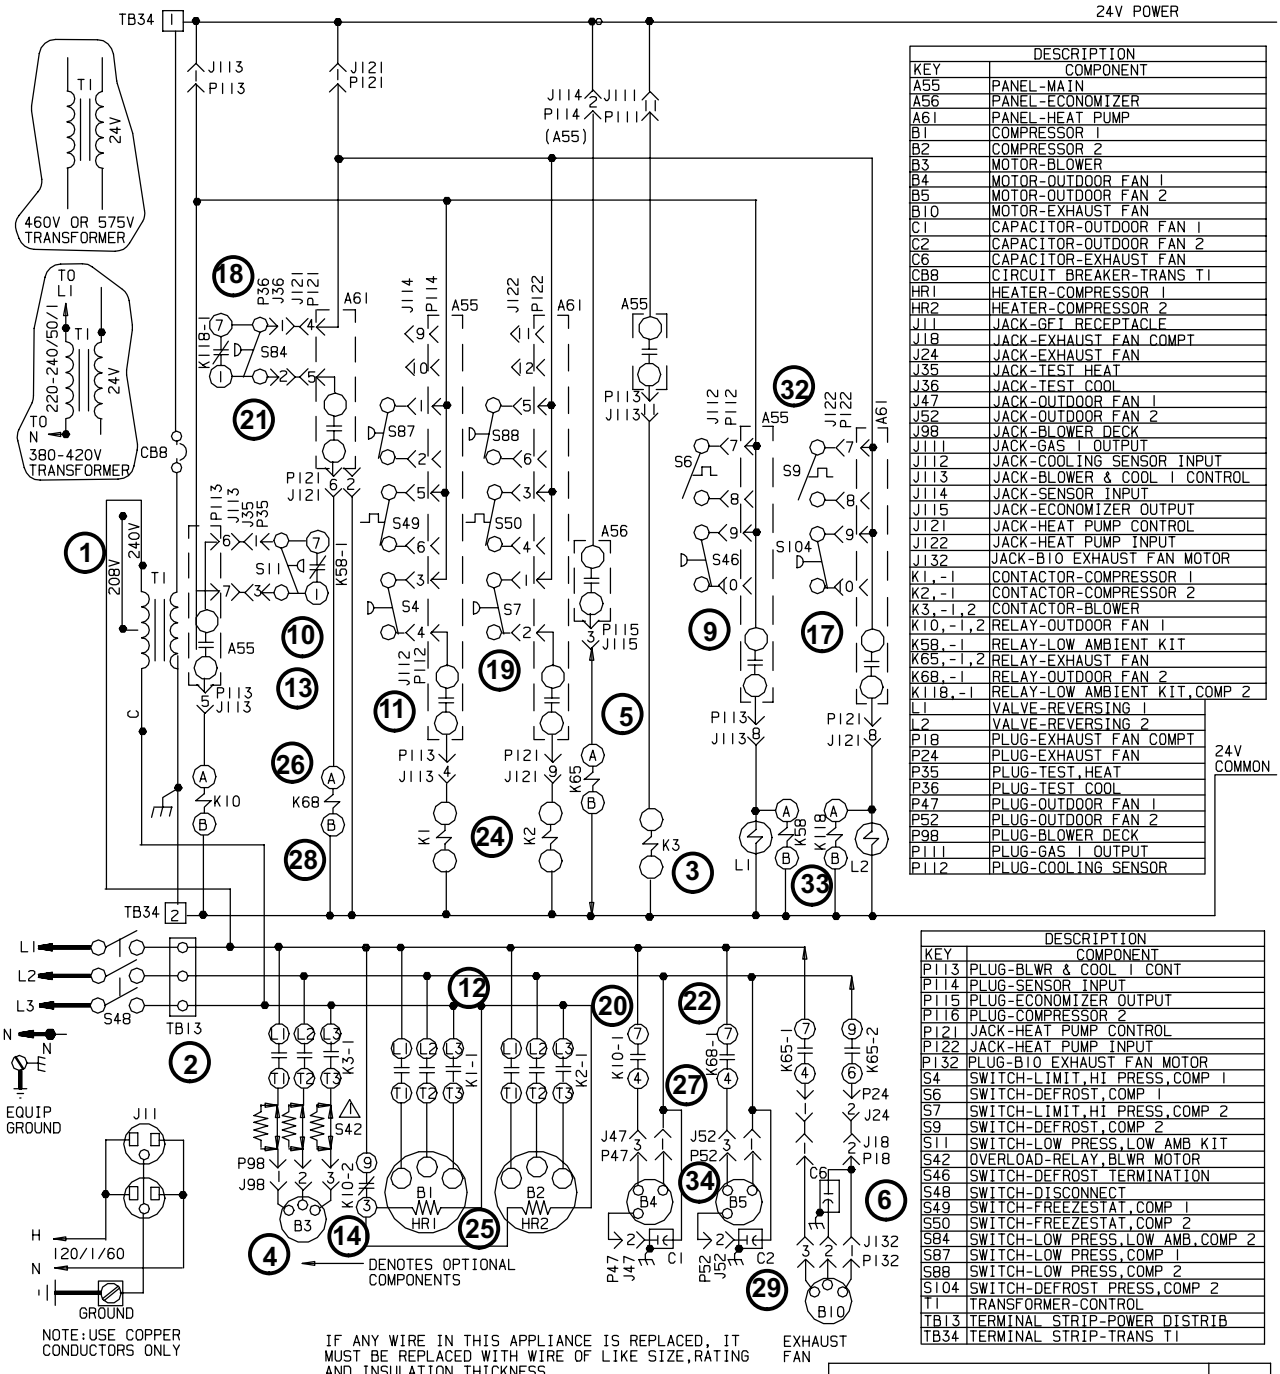

DESCRIPTION	
KEY	COMPONENT
A55	PANEL-MAIN
A56	PANEL-ECONOMIZER
A61	PANEL-HEAT PUMP
B1	COMPRESSOR 1
B2	COMPRESSOR 2
B3	MOTOR-BLOWER
B4	MOTOR-OUTDOOR FAN 1
B5	MOTOR-OUTDOOR FAN 2
B10	MOTOR-EXHAUST FAN
C1	CAPACITOR-OUTDOOR FAN 1
C2	CAPACITOR-OUTDOOR FAN 2
C6	CAPACITOR-EXHAUST FAN
CB8	CIRCUIT BREAKER-TRANS T1
HR1	HEATER-COMPRESSOR 1
HR2	HEATER-COMPRESSOR 2
J11	JACK-GFI RECEPTACLE
J18	JACK-EXHAUST FAN COMPT
J24	JACK-EXHAUST FAN
J35	JACK-TEST HEAT
J36	JACK-TEST COOL
J47	JACK-OUTDOOR FAN 1
J52	JACK-OUTDOOR FAN 2
J98	JACK-BLOWER DECK
J111	JACK-GAS 1 OUTPUT
J112	JACK-COOLING SENSOR INPUT
J113	JACK-BLOWER & COOL 1 CONTROL
J114	JACK-SENSOR INPUT
J115	JACK-ECONOMIZER OUTPUT
J121	JACK-HEAT PUMP CONTROL
J122	JACK-HEAT PUMP INPUT
J132	JACK-B10 EXHAUST FAN MOTOR
K1,-1	CONTACTOR-COMPRESSOR 1
K2,-1	CONTACTOR-COMPRESSOR 2
K3,-1,2	CONTACTOR-BLOWER
K10,-1,2	RELAY-OUTDOOR FAN 1
K58,-1	RELAY-LOW AMBIENT KIT
K65,-1,2	RELAY-EXHAUST FAN
K68,-1	RELAY-OUTDOOR FAN 2
K118,-1	RELAY-LOW AMBIENT KIT,COMP 2
L1	VALVE-REVERSING 1
L2	VALVE-REVERSING 2
P18	PLUG-EXHAUST FAN COMPT
P24	PLUG-EXHAUST FAN
P35	PLUG-TEST,HEAT
P36	PLUG-TEST COOL
P47	PLUG-OUTDOOR FAN 1
P52	PLUG-OUTDOOR FAN 2
P98	PLUG-BLOWER DECK
P111	PLUG-GAS 1 OUTPUT
P112	PLUG-COOLING SENSOR

DESCRIPTION	
KEY	COMPONENT
P113	PLUG-BLWR & COOL 1 CONT
P114	PLUG-SENSOR INPUT
P115	PLUG-ECONOMIZER OUTPUT
P116	PLUG-COMPRESSOR 2
P121	JACK-HEAT PUMP CONTROL
P122	JACK-HEAT PUMP INPUT
P132	PLUG-B10 EXHAUST FAN MOTOR
S4	SWITCH-LIMIT,HI PRESS,COMP 1
S6	SWITCH-DEFROST,COMP 1
S7	SWITCH-LIMIT,HI PRESS,COMP 2
S9	SWITCH-DEFROST,COMP 2
S11	SWITCH-LOW PRESS,LOW AMB KIT
S42	OVERLOAD-RELAY,BLWR MOTOR
S46	SWITCH-DEFROST TERMINATION
S48	SWITCH-DISCONNECT
S49	SWITCH-FREEZESTAT,COMP 1
S50	SWITCH-FREEZESTAT,COMP 2
S84	SWITCH-LOW PRESS,LOW AMB,COMP 2
S87	SWITCH-LOW PRESS,COMP 1
S88	SWITCH-LOW PRESS,COMP 2
S104	SWITCH-DEFROST PRESS,COMP 2
T1	TRANSFORMER-CONTROL
TB13	TERMINAL STRIP-POWER DISTRIB
TB34	TERMINAL STRIP-TRANS T1

IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE,RATING AND INSULATION THICKNESS

DISCONNECT ALL POWER BEFORE SERVICING

NOTE-FOR USE WITH COPPER CONDUCTORS ONLY
REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE

THERMOSTAT HEAT ANTICIPATION SETTING 0.1 AMP

WARNING-ELECTRIC SHOCK HAZARD,CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES

LINE VOLTAGE FIELD INSTALLED NEC/CEC CLASS 1 NOTE-ALL REMAINING WIRES FACTORY INSTALLED

⚠ S42 USED ON "M" VOLTAGE UNITS AND UNITS WITH HIGH EFFICIENCY MOTORS

WIRING DIAGRAM	3/04
HEAT PUMP-PACKAGED	
LHA-090,102,120,150-1-G,J,M,Y	
HEAT PUMP SECTION B14	
Supersedes Form No. 533,083W	New Form No. 534,368W

© 2004 Litho U.S.A.

SEQUENCE OF OPERATION LHA090/150

Power:

1. Line voltage from unit disconnect energizes transformer T1. T1 provides 24VAC power to terminal strip TB34, which provides 24VAC to the unit cooling, heating and blower controls and thermostat.
2. Terminal TB13 is also energized when unit disconnect switch closes. TB13 provides line voltage to compressor crankcase heater, compressor contactor, the blower motor contactor and condenser fan relay.

Blower Operation:

3. The main control module receives a demand from thermostat terminal G. A55 energizes blower contactor K3 with 24VAC.
4. N.O. K3-1 closes, energizing blower B3.

Economizer Operation:

5. The economizer control module A56 receives a demand and energizes exhaust fan relay K65 with 24VAC at 50% outside air damper open (adjustable).
6. N.O. K65-1 and N.O. K65-2 both close, energizing exhaust fan motor B10.

First Stage Cooling Demand (compressor B1)

7. First stage cooling demand energizes Y1 and G in the thermostat. G energizes blower (see step 3).
8. 24VAC is routed through TB34 to the main control module A55.
9. A55 proves N.O. defrost switch S6 and N.C. defrost termination switch S46 to energize reversing valve L1 and low ambient relay K58.
10. N.C. contacts K58-1 open, giving control of K10 fan relay to low ambient pressure switch S11.
11. A55 proves N.C. low pressure switch S87, N.C. freezestat S49 and N.C. high pressure switch S4 to energize compressor contactor K1.
12. N.O. contacts K1-1 close energizing compressor B1.
13. 24VAC is routed through N.O. low ambient pressure switch S11 (now closed) and N.C. low ambient contact K58-1 (now open) to energize outdoor fan contactor K10.
14. N.O. contacts K10-1 close energizing outdoor fan B4 and N.C contacts K10-2 open de-energizing crankcase heaters HR1 and HR2..

Second Stage Cooling Demand (compressor B2)

15. Second stage cooling demand energizes Y2 and G in the thermostat. G energizes blower (see step 3).
16. 24VAC is routed through TB34 to the heat pump control module A61.
17. Heat pump control A61 proves N.O. defrost switch S9 and N.C. defrost termination switch S46 to energize reversing valve L2 and low ambient relay K118.
18. N.C. contacts K118-1 open, giving control of K68 fan relay to low ambient pressure switch S84.
19. A61 proves N.C. low pressure switch S87, N.C. freezestat S50 and N.C. high pressure switch S7 to energize compressor contactor K2.
20. N.O. contacts K2-1 close energizing compressor B2.
21. 24VAC is routed through N.O. low ambient pressure switch S84 (now closed) to energize outdoor fan contactor K68.
22. N.O. contacts K68-1 close energizing outdoor fan B5.

First Stage Heat (compressors B1 and B2)

23. Heating demand energizes W1 in the thermostat.
24. 24VAC is routed through TB34 to the main control module A55 and heat pump control A61. After A55 and A61 proves N.C.high pressure switch S4 and S7, compressor contactor K1 and K2 are energized.

    NOTE: On first heating demand after unit has been in cooling mode, module A55 and A61 will de-energize reversing valve L1 and L2 and low ambient relay K58 and K118. K58-1 and K118-1 N.C. contacts will take control away from low ambient pressure switches S11 and S84.
25. N.O. contacts K1-1 and K2-1 close energizing compressor B1 and B2.
26. 24VAC from the main control module A55 is routed through N.C. low ambient contact K58-1 to energize outdoor fan contactor K10.
27. N.O. contacts K10-1 close energizing outdoor fan B4 and N.C contacts K10-2 open, de-energizing compressor crankcase heater HR1.
28. 24VAC from heat pump control A61 is routed through N.C. low ambient contact to energize outdoor fan relay K68.
29. N.O. contacts K68-1 close energizing outdoor fan B5.

Second Stage Heat (electric heat):

30. Second stage heat demand energizes W2 in the thermostat.
31. See sequence of operation for electric heat.

Defrost Mode:

32. During heating operation, when outdoor coil drops to 35 ± 4° the defrost thermostat S6 or S9 closes initiating defrost (after minimum run time of 30, 60 or 90 minutes).
33. When defrost begins, the reversing valve L1 or L2 is energized. Supplemental electric heat is energized.
34. When L1 energizes, N.C. K58-1 contacts open de-energizing outdoor fan relay K10, followed by outdoor fan B4. When L2 energizes N.C. K118-1 contacts open de-energizing outdoor fan relay K68, followed by outdoor fan B5.
35. Defrost terminates when the pressure switch for the circuit S46 or S104 opens, or when 15 minutes has elapse.The defrost cycle is **not** terminated when thermostat demand ends.

ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT

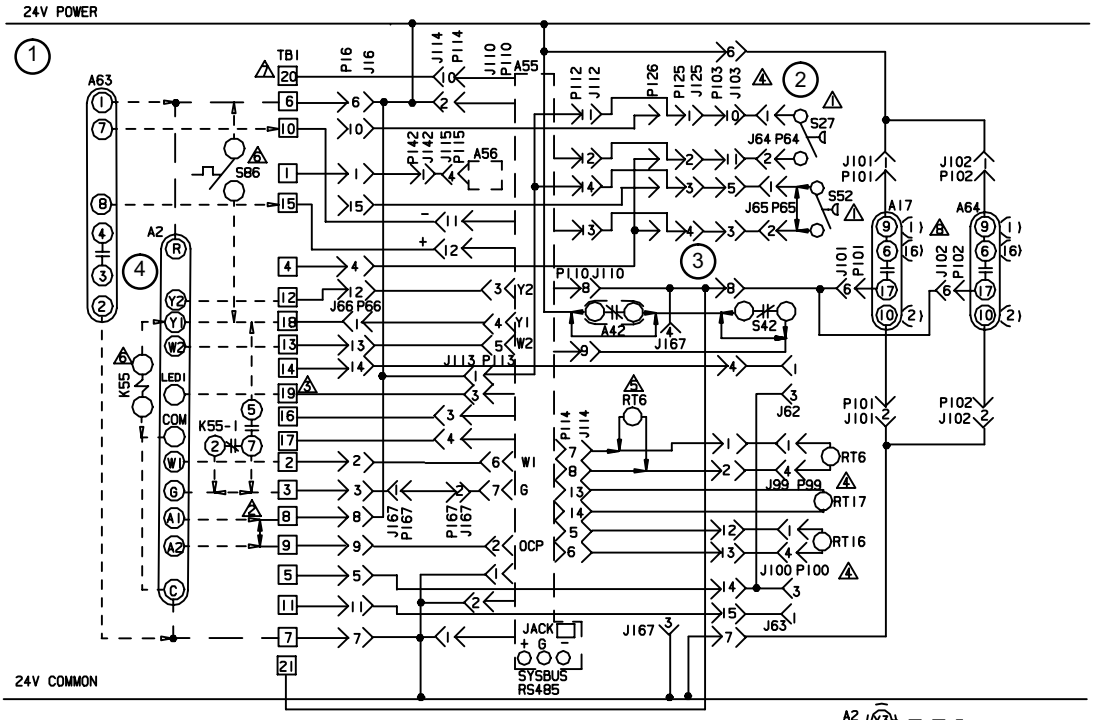



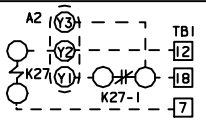

KEY	DESCRIPTION COMPONENT
A2	SENSOR-ELECTRONIC
A17	DETECTOR-SMOKE
A42	MONITOR-PHASE PROTECTION
A55	PANEL-MAIN
A56	PANEL-ECONOMIZER
A63	SENSOR-CO2(IAQ)
A64	DETECTOR-SMOKE,SUPPLY AIR
J16	JACK-UNIT
J62	JACK-A2 RETURN AIR SENSOR
J63	JACK-RTI DISCH. AIR SENSOR
J64	JACK-S27 FILTER SWITCH
J65	JACK-S52 FAN SWITCH
J66	JACK-COOL 1 INTERFACE
J99	JACK-DISCHARGE TEMP SENSOR
J100	JACK-RETURN TEMP SENSOR
J101	JACK-SMOKE DETECTOR,RETURN AIR
J102	JACK-SMOKE DETECTOR,SUPPLY AIR
J103	JACK-SENSORS,CONTROL
J110	JACK-THERMOSTAT INPUT
J112	JACK-COOLING SENSOR INPUT
J113	JACK-BLOWER & COOL 1 CONTROL
J114	JACK-SENSOR INPUT
J115	JACK-ECONOMIZER OUTPUT
J125	JACK-BLOWER PROVING
J126	JACK-JUMPER,BLOWER PROVING
J142	JACK-ECONOMIZER HARNESS
J167	JACK-BLOWER OVERRIDE,STD
K27,-1	RELAY-TRANSFER 2
K55,-1	RELAY-BLOWER
P16	PLUG-UNIT
P64	PLUG-S27 FILTER SWITCH
P65	PLUG-S50 FAN SWITCH
P66	PLUG-COOL ONE
P99	PLUG-DISCHARGE TEMP SENSOR
P100	PLUG-RETURN TEMP SENSOR
P101	PLUG-SMOKE DETECTOR,RETURN AIR
P102	PLUG-SMOKE DETECTOR,SUPPLY AIR

KEY	DESCRIPTION COMPONENT
P103	PLUG-SENSORS,CONTROL
P110	PLUG-THERMOSTAT INPUT
P112	PLUG-COOLING SENSOR INPUT
P113	PLUG-BLOWER & COOL 1 CONTROL
P114	PLUG-SENSOR INPUT
P115	PLUG-ECONOMIZER OUTPUT
P125	PLUG-BLOWER PROVING
P126	PLUG-JUMPER,BLOWER PROVING
P142	PLUG-ECONOMIZER HARNESS
P167	PLUG-BLOWER OVERRIDE,STD
RT6	SENSOR-A55 DISCHARGE (IMC)
RT16	SENSOR-RETURN AIR TEMP
RT17	SENSOR-OUTSIDE AIR TEMP
S27	SWITCH-FILTER
S42	OVERLOAD-RELAY,BLOWER MOTOR
S52	SWITCH-AIR FLOW
S86	SWITCH-DEHUMIDISTAT 65F860I
TB1	TERMINAL STRIP-24V CLASS II

THERMOSTAT HOOKUP FOR SELECTABLE OPTION #3, ECTO 5.04 ON MI-5 OR BETTER IMC BOARD (A55)

TO PROVIDE THREE COMPRESSOR STAGES. REQUIRES 3 HEAT,3 COOL THERMOSTAT AND K27 RELAY

1. S27 AND S52 ARE OPTIONAL
2. REMOVE JUMPER WHEN OCCUPIED-UNOCCUPIED OPERATION IS DESIRED. UNIT REMAINS IN OCCUPIED OPERATION WITH JUMPER
3. TB1-19 IS SERVICE RELAY OUTPUT (24VAC). IF USED CONNECT TO A INDICATOR LIGHT OR RELAY COIL (MAX 4VA)
4. J99/P99,J100/P100 AND J103/P103 ARE NOT USED ON-036,042,048,060,072,088 AND 100 UNITS
5. ALTERNATE REMOTE LOCATION OF RT6
6. USE S86 DEHUMIDISTAT AND K55 RELAY FOR OPTIONAL REHEAT SCHEME, SET PARAMETER 4.24 TO CONTROL VALVE 1 FOR SIMULTANEOUS HEATING AND COOLING
7. TB1-20 FOR DEHUMIDIFICATION CONTROL
8. ALTERNATE TERMINAL DESIGNATIONS WHEN USING DH400 SENSOR

DESIGNATES OPTIONAL WIRING
CLASS II FIELD WIRING

WIRING DIAGRAM	B/01
ACCESSORIES	
ELECTRONIC OR ELECTROMECHANICAL THERMOSTAT FOR "L" SERIES UNITS	
TEMPERATURE CONTROL SECTION C2	
Supersedes Form No. 532,583W	New Form No. 533,629W

© 2001 Litho U.S.A.

POWER:

1. Terminal strip TB34 energizes the thermostat components with 24VAC via TB1.

OPERATION:

2. The main control module A55 proves the optional N.O. filter switch S27(indicates dirty filter when closed), optional N.O. air flow switch S52(indicates no air [i.e. broken belt] system shuts down), and optional C.G.A. -50°C low ambient kit thermostat S59 (used in C.G.A. units only).
3. The main control module A55 receives data from the supply and return smoke detectors A17 and A64, optional phase protection monitor A42, blower motor overload relay S42, discharge sensor RT6, return air sensor RT16, and the outdoor air sensor RT17.
4. The main control module A55 receives data from the electronic thermostat A2 (Y1, Y2, W1, W2, G, OCP) and the CO_2 sensor (if economizer is used) via terminal strip TB1. A55 energizes the appropriate components.

"L" SERIES ECONOMIZER

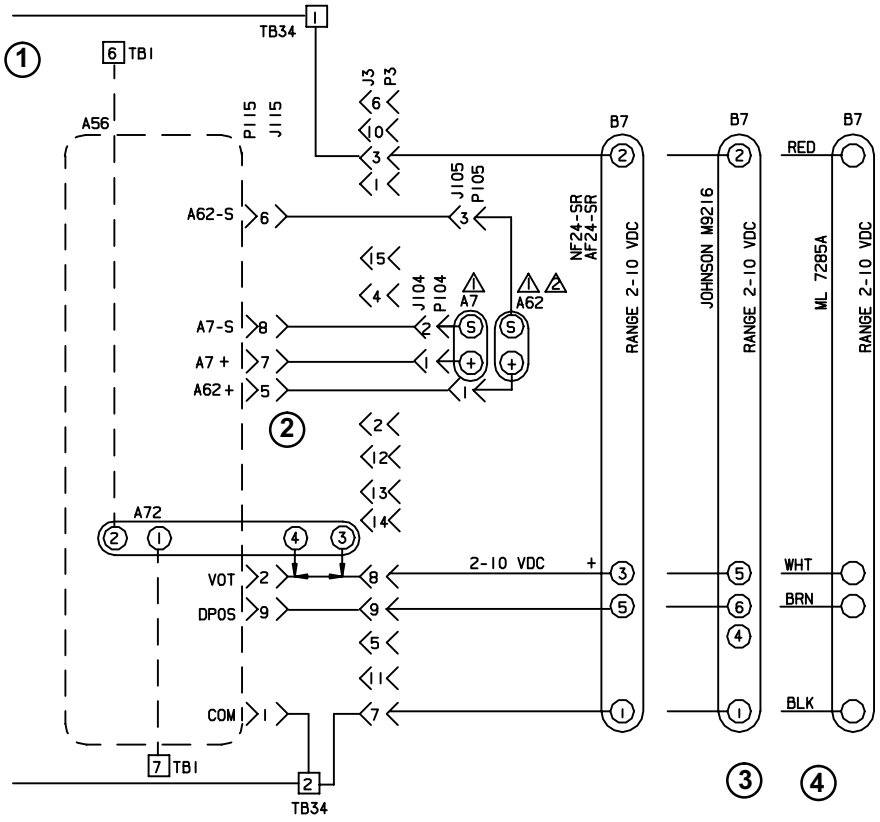

⚠1 DELETE A7 AND A62 (IF USED) FOR EITHER GLOBAL ENTHALPY OR SENSIBLE TEMPERATURE CONTROL

⚠2 FOR UNIT DIFFERENTIAL ENTHALPY CONTROL, ADD A62 RETURN AIR ENTHALPY SENSOR

NOTE: THIS DIAGRAM USED ONLY WHEN ECONOMIZER OR MOTORIZED OUTDOOR AIR DAMPERS ARE INSTALLED

WIRING DIAGRAM	8/97
ACCESSORIES	
"L" SERIES ECONOMIZER AND MOTORIZED OUTSIDE AIR DAMPER	
ECONOMIZER-SECTION DI	
Supersedes Form No. 531,713W	New Form No. 531,770W

©1997 Lennox Industries Inc. Litho U.S.A.

KEY	DESCRIPTION COMPONENT
A7	SENSOR-SOLID STATE ENTHALPY
A56	PANEL-ECONOMIZER
A62	SENSOR-ENTHALPY,INDOOR
A72	CONTROL-REMOTE,MIN POS(OPT)
B7	MOTOR-DAMPER
J3	JACK-UNIT ECONOMIZER
J104	JACK-SENSOR,OUTDOOR ENTHALPY
J105	JACK-SENSOR,RETURN AIR ENTHALPY
J115	JACK-ECONOMIZER,OUTPUT
P3	PLUG-UNIT ECONOMIZER
P104	PLUG-SENSOR,OUTDOOR ENTHALPY
P105	PLUG-SENSOR,RETURN AIR ENTHALPY
P115	PLUG-ECONOMIZER,OUTPUT
TBI	TERMINAL STRIP-CLASS II VOLTAGE
TB34	TERMINAL STRIP-TRANSFORMER TI

SEQUENCE OF OPERATION
L" SERIES ECONOMIZER

POWER:

1. Terminal strip TB34 energizes the economizer components with 24VAC.

OPERATION:

2. The main control module A55 along with outdoor enthalpy sensor A7 and indoor enthalpy sensor A62 (if differential enthalpy is used) communicates to the economizer control module A56 when to power the damper motor B7.
3. The economizer control module A56 supplies B7 with 0 - 10 VDC to control the positioning of economizer.
4. The damper actuator provides 2 to 10 VDC position feedback.

EHA-7.5, 15, 22.5, 30kW Y VOLTAGE

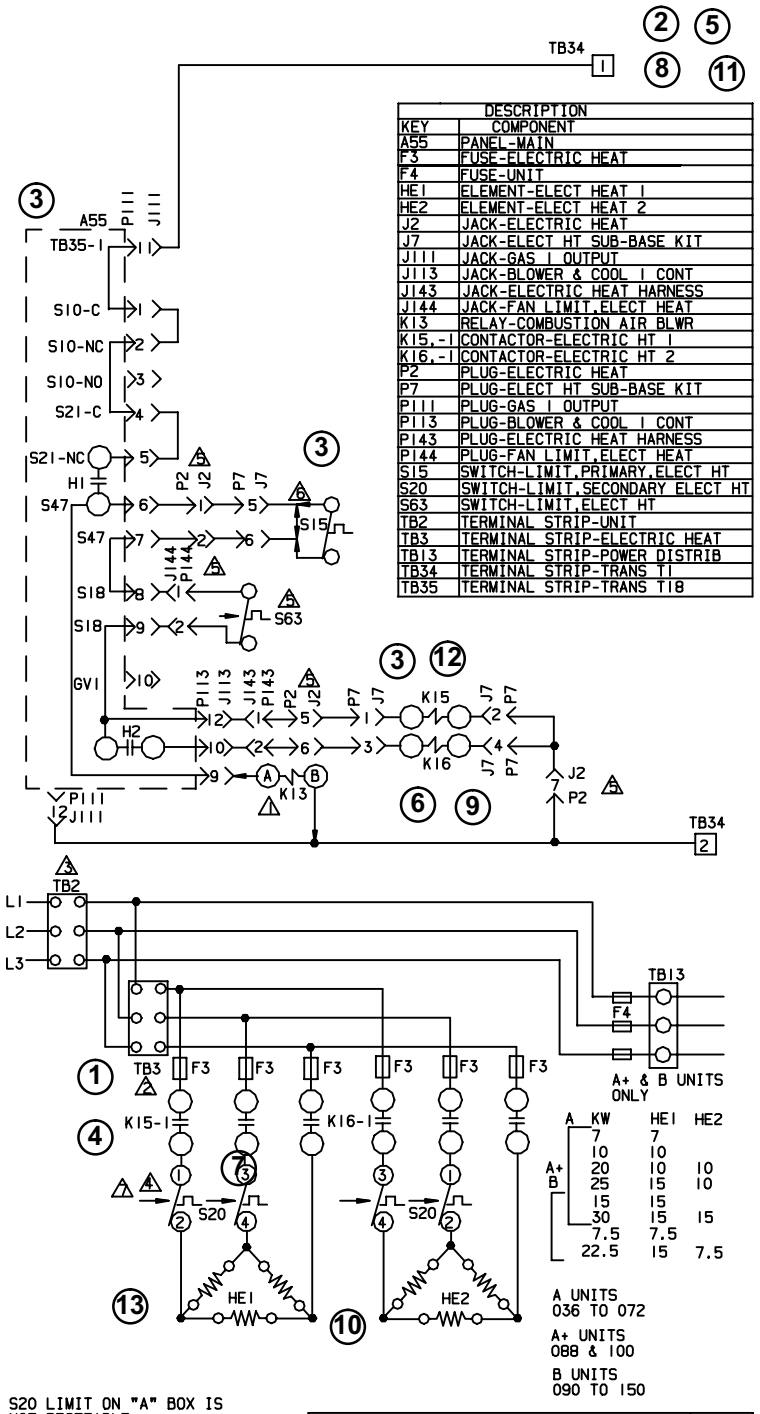

DESCRIPTION	
KEY	COMPONENT
A55	PANEL-MAIN
F3	FUSE-ELECTRIC HEAT
F4	FUSE-UNIT
HE1	ELEMENT-ELECT HEAT 1
HE2	ELEMENT-ELECT HEAT 2
J2	JACK-ELECTRIC HEAT
J7	JACK-ELECT HT SUB-BASE KIT
J111	JACK-GAS 1 OUTPUT
J113	JACK-BLOWER & COOL 1 CONT
J143	JACK-ELECTRIC HEAT HARNESS
J144	JACK-FAN LIMIT,ELECT HEAT
K13	RELAY-COMBUSTION AIR BLWR
K15,-1	CONTACTOR-ELECTRIC HT 1
K16,-1	CONTACTOR-ELECTRIC HT 2
P2	PLUG-ELECTRIC HEAT
P7	PLUG-ELECT HT SUB-BASE KIT
P111	PLUG-GAS 1 OUTPUT
P113	PLUG-BLOWER & COOL 1 CONT
P143	PLUG-ELECTRIC HEAT HARNESS
P144	PLUG-FAN LIMIT,ELECT HEAT
S15	SWITCH-LIMIT,PRIMARY,ELECT HT
S20	SWITCH-LIMIT,SECONDARY ELECT HT
S63	SWITCH-LIMIT,ELECT HT
TB2	TERMINAL STRIP-UNIT
TB3	TERMINAL STRIP-ELECTRIC HEAT
TB13	TERMINAL STRIP-POWER DISTRIB
TB34	TERMINAL STRIP-TRANS T1
TB35	TERMINAL STRIP-TRANS T18

A	KW	HE1	HE2
	7	7	
	10	10	
A+	20	10	10
B	25	15	10
	15	15	
	30	15	15
	7.5	7.5	
	22.5	15	7.5

⚠1 S20 LIMIT ON "A" BOX IS NOT RESETABLE

⚠6 REMOVE JUMPER PLUG WHEN FIELD INSTALLING ELECTRIC HEAT

⚠5 J2/P2,J144/P144 AND S63 ARE NOT USED ON -036,042,048,060,072, 088 AND 100 UNITS

⚠4 S20 USED ON -2 B UNITS ONLY

⚠3 TB2,S48 OR CB10 MAY BE USED

⚠2 TB3 IS USED ON SOME UNITS

⚠1 USED WITH TWO SPEED BLOWER ONLY

WIRING DIAGRAM	10/98
HEATING-ELECTRIC	
EHA-7,7.5,10,15,20,22.5 25,30-1,2-Y	
HEATING SECTION-A5	
Supersedes Form No. 532,804W	New Form No. 532,957W

©1998 Lennox Industries Inc. Litho U.S.A.

EHA-45, 60KW - Y

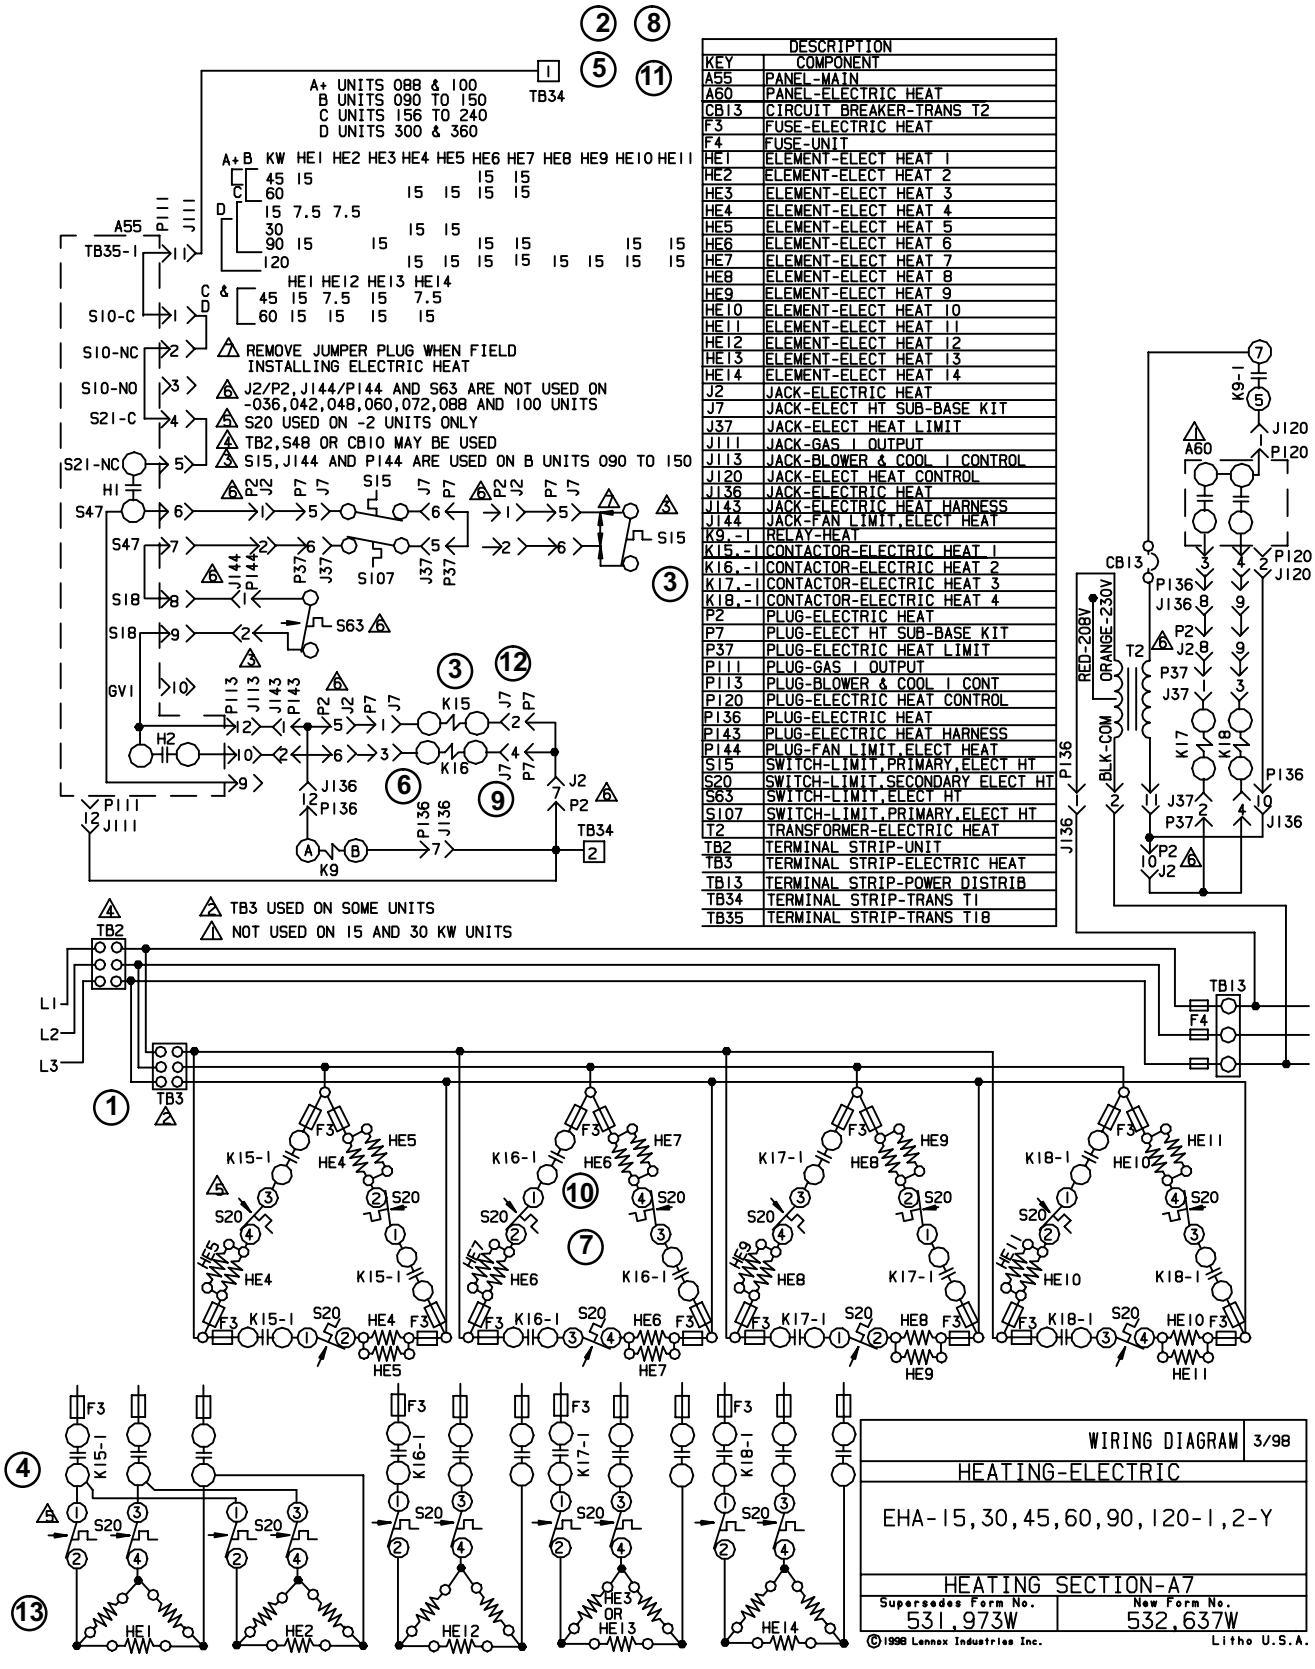

KEY	DESCRIPTION COMPONENT
A55	PANEL-MAIN
A60	PANEL-ELECTRIC HEAT
CB13	CIRCUIT BREAKER-TRANS T2
F3	FUSE-ELECTRIC HEAT
F4	FUSE-UNIT
HE1	ELEMENT-ELECT HEAT 1
HE2	ELEMENT-ELECT HEAT 2
HE3	ELEMENT-ELECT HEAT 3
HE4	ELEMENT-ELECT HEAT 4
HE5	ELEMENT-ELECT HEAT 5
HE6	ELEMENT-ELECT HEAT 6
HE7	ELEMENT-ELECT HEAT 7
HE8	ELEMENT-ELECT HEAT 8
HE9	ELEMENT-ELECT HEAT 9
HE10	ELEMENT-ELECT HEAT 10
HE11	ELEMENT-ELECT HEAT 11
HE12	ELEMENT-ELECT HEAT 12
HE13	ELEMENT-ELECT HEAT 13
HE14	ELEMENT-ELECT HEAT 14
J2	JACK-ELECTRIC HEAT
J7	JACK-ELECT HT SUB-BASE KIT
J37	JACK-ELECT HEAT LIMIT
J111	JACK-GAS 1 OUTPUT
J113	JACK-BLOWER & COOL 1 CONTROL
J120	JACK-ELECT HEAT CONTROL
J136	JACK-ELECTRIC HEAT
J143	JACK-ELECTRIC HEAT HARNESS
J144	JACK-FAN LIMIT,ELECT HEAT
K9,-1	RELAY-HEAT
K15,-1	CONTACTOR-ELECTRIC HEAT 1
K16,-1	CONTACTOR-ELECTRIC HEAT 2
K17,-1	CONTACTOR-ELECTRIC HEAT 3
K18,-1	CONTACTOR-ELECTRIC HEAT 4
P2	PLUG-ELECTRIC HEAT
P7	PLUG-ELECT HT SUB-BASE KIT
P37	PLUG-ELECTRIC HEAT LIMIT
P111	PLUG-GAS 1 OUTPUT
P113	PLUG-BLOWER & COOL 1 CONT
P120	PLUG-ELECTRIC HEAT CONTROL
P136	PLUG-ELECTRIC HEAT
P143	PLUG-ELECTRIC HEAT HARNESS
P144	PLUG-FAN LIMIT,ELECT HEAT
S15	SWITCH-LIMIT,PRIMARY,ELECT HT
S20	SWITCH-LIMIT,SECONDARY ELECT HT
S63	SWITCH-LIMIT,ELECT HT
S107	SWITCH-LIMIT,PRIMARY,ELECT HT
T2	TRANSFORMER-ELECTRIC HEAT
TB2	TERMINAL STRIP-UNIT
TB3	TERMINAL STRIP-ELECTRIC HEAT
TB13	TERMINAL STRIP-POWER DISTRIB
TB34	TERMINAL STRIP-TRANS T1
TB35	TERMINAL STRIP-TRANS T1B

WIRING DIAGRAM	3/98
HEATING-ELECTRIC	
EHA-15,30,45,60,90,120-1,2-Y	
HEATING SECTION-A7	
Supersedes Form No. 531,973W	New Form No. 532,637W

©1998 Lennox Industries Inc.

Litho U.S.A.

Sequence of Operation -EHA 7.5, 15, 22.5, 30, 45, 60 kW - Y and G, J, M

NOTE: This sequence of operation is for all Electric Heat kW ratings Y through J voltages. Each step of operation is numbered and can be followed in sequence on the diagrams. Operation for G, J, and M voltages will be the same.

HEATING ELEMENTS:

1 - Terminal Strip TB3 is energized when the unit disconnect closes. TB3 supplies line voltage to electric heat elements HE1 through HE7. Each element is protected by fuse F3.

FIRST STAGE HEAT:

2 - Heating demand initiates at W1 in thermostat.

3 - 24VAC is routed through TB34 to the main control module A55. After A55 proves N.C. primary limit S15 and secondary limit S20, the electric heat contactor K15 is energized.

4 - N.O. contacts K15-1 closes allowing the first bank of elements to be energized.

SECOND STAGE HEAT:

5 - With the first stage heat operating, an additional heating demand initiates at W2 in the thermostat.

6 - 24VAC is routed through the main control module A55, which in turn energizes the electric heat contactor K16.

7 - N.O. contacts K16-1 close allowing the second set of elements to be energized.

END OF SECOND STAGE HEAT:

8 - Heating demand is satisfied. Terminal W2 in the thermostat is de-energized.

9 - Electric heat contactor K16 is de-energized.

10- The second set of electric heat elements are de-energized.

END OF FIRST STAGE HEAT:

11- Heating demand is satisfied. Terminal W1 in the thermostat is de-energized.

12- Electric heat contactor K15 is de-energized.

13- The first set of electric heat elements are de-energized.